

Panasonic®

Operating Instructions DVD Home Theater Sound System

Model No. **SC-PT160**



Before connecting, operating or adjusting this product, please read the instructions completely. Please keep this manual for future reference.
Your unit may not look exactly the same as illustrated.

The player plays DVD-Video marked with labels containing the region number "2" or "ALL".

Example:



Page 6 - 11

QUICK START GUIDE

USB connection for MP3 players

page 32



EB

RQTX0122-B



Dear customer

*Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.*

Operations in these instructions are described mainly with the remote control, but you can perform the operations on the main unit if the controls are the same.

System	SC-PT160
Main unit	SA-PT160
Front speakers	SB-HF150
Center speaker	SB-HC150
Surround speakers	SB-HS151
Subwoofer	SB-HW150

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,

- DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.
- USE ONLY THE RECOMMENDED ACCESSORIES.
- DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The socket outlet shall be installed near the equipment and easily accessible.

The mains plug of the power supply cord shall remain readily operable.

To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from AC receptacle.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

Caution for AC Mains Lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.

Before use

Remove the connector cover.

How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below. Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

Figure A


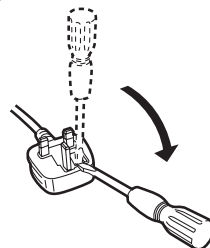


Figure B

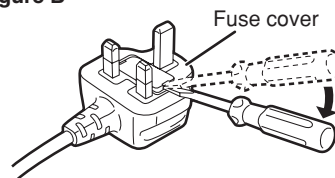

2. Replace the fuse and close or attach the fuse cover.

Figure A


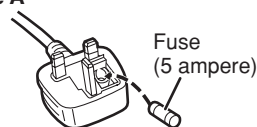


Figure B



-If you see this symbol-

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)

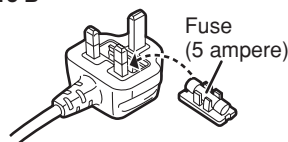

This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.


Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

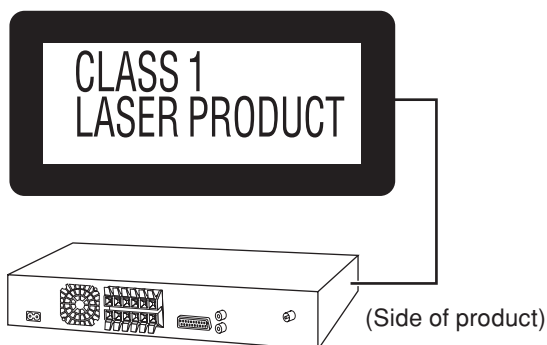

CAUTION	- LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM.	FDA 21 CFR 1.04(m) II
CAUTION	- CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. BEC0808-1-143/ Class 1M	
WARNING	- KLASS 1M SYNLIS OG OSYNLIS LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN DIREKT GENOM OPTISKE INSTRUMENT.	
FORSIGTIG	- SYNLIS OG OSYNLIS LASERSTRÅLING KLASS 1M. NÅR LÅGET ER ÅBENT. UNDGÅ AT SE UDGE PÅ MED OPTISKE INSTRUMENTER.	
VARO!	- AVATTAESSA OLET ALTTIIN LUKKAA 1M NÄKYVÄÄ JA NÄKYMÄTÖNÄ, LASERSÄTEIKYÄ. ÄLÄ KATSO OPTISELLA LAITTEELLA SUORAAN SÄTEESEEN.	
VORSICHT	- SICHTBARE UND UNSICHTBARE LASERSTRÄHLUNG KLASSE 1M. WENN ABOCKUNG GEÖFFNET, NICHT DIREKT MIT OPTISCHEN INSTRUMENTEN BETRACHTEN.	
ATTENTION	- RAYONNEMENT LASER VISIBLE ET INVISIBLE. CLASSE 1M. EN CAS D'OUVERTURE, NE PAS REGARDER DIRECTEMENT A L'ŒIL D'INSTRUMENTS D'OPTIQUE.	
注意	- ここを開くと可視及び不可視レーザー光が出ます。 ビームを見たり、触れたりしないでください。	
注意	- 打开时有可见及不可见激光辐射。避免目光直视。	GB7241.1-2001GB 29000

Inside of product



Safety precautions


Placement



Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life.

Do not place heavy items on the unit.

Voltage

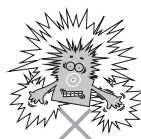

Do not use high voltage power sources. This can overload the unit and cause a fire.

Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other places where DC is used.

AC mains lead protection



Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead.

Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock.

Do not handle the plug with wet hands. This can cause electric shock.

Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.

Do not let liquids get into the unit.


This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer.

Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.

Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service center. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.

Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.

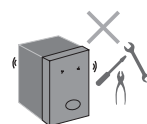



GETTING STARTED

Caution for AC Mains Lead	3
Safety precautions	4
Accessories	6

QUICK START GUIDE

Preparing the remote control	6
Placement of speakers	7
Simple setup	8
Making the connections	8
Other speaker setup options	10
Optional antenna connections	10
Performing QUICK SETUP	11

Disc information	12
Discs that can be played	12

Overview of controls	14
Main unit	14
Remote control	15

DISC OPERATIONS

Disc — Basic play	16
Using the main unit / Using the remote control	16
Advanced play	18
Displaying current playback condition	18
Program and Random play	18
Playing data discs using navigation menus	19
Playing data discs	19
Playing RAM and DVD-R/-RW (DVD-VR) discs	19
Using on-screen menus	20
Functions menu	20
Changing the player settings	23
MAIN menu	23
Changing the delay time of the speakers	26
Tips for making data discs	26

OTHER OPERATIONS

Using the radio	28
Manual tuning	28
Automatic presetting	28
Selecting the preset channels	28
Using sound effects	29
Enhancing the sound from the center speaker: Center Focus	29
Adjusting the amount of bass: Subwoofer level	29
Changing the sound quality: Equalizer Mode (EQ)	29
Enhancing the stereo sound: Dolby Pro Logic II	29
Enhancing the stereo sound: Super Surround	29
Adjusting the volume of each speaker: Speaker level adjustments	30
Operating other equipment	31
Optional audio connection for video cassette recorder	31
Optional connection for set top box	31
Optional USB connection and operation	32
Operating the television	33
Changing the main unit and remote control	33

REFERENCE

Troubleshooting guide	34
Language code list	36
Glossary	37
Specifications	38
Maintenance	39



 
Accessories

☒ Please check and identify the supplied accessories.

☐ **1 Remote control**
(N2QAYB000091)



☐ **1 FM indoor antenna**
(RSA0007-M)



☐ **1 Antenna plug adaptor**
(K1YZ02000013)



☐ **2 Remote control batteries**




☐ **1 AC mains lead**
(K2CT3CA00004)



☐ **1 Sheet of speaker cable stickers**



Preparing the remote control

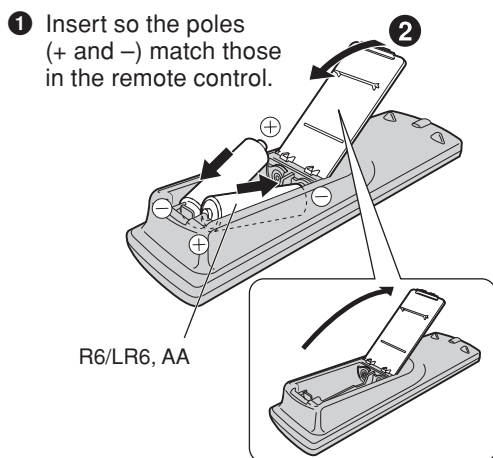

Do not:

- mix old and new batteries.
- use different types of batteries at the same time.
- take apart or short circuit the batteries.
- attempt to recharge alkaline or manganese batteries.
- use batteries if the covering has been peeled off.

Mishandling of batteries can cause electrolyte leakage which can severely damage the remote control.

Remove the batteries if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

■ Use

Aim at the remote control signal sensor (→ page 14), avoiding obstacles, at a maximum range of 7 m directly in front of the unit.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.


- Do not use rechargeable type batteries.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

Placement of speakers

How you set up your speakers can affect the bass and the sound field. Note the following points:


- Place speakers on flat secure bases.
- Placing speakers too close to floors, walls, and corners can result in excessive bass. Cover walls and windows with thick curtains.

SPEAKERS

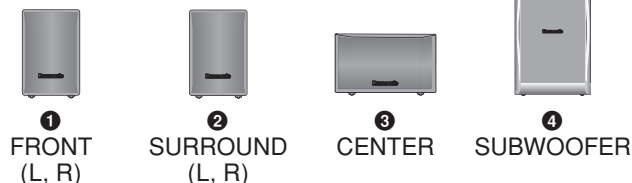

SETUP EXAMPLE

Place the front, center, and surround speakers at approximately the same distance from the seating position. The angles in the diagram are approximate.

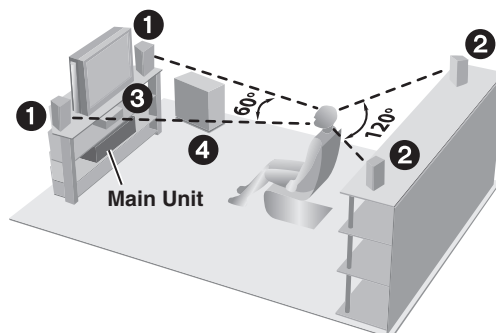

- Other speaker setup options (→ page 10).

Use only supplied speakers

Using other speakers can damage the unit, and sound quality will be negatively affected.

- Set the speakers up on an even surface to prevent them from falling. Take proper precautions to prevent the speakers from falling if you cannot set them up on an even surface.

Main unit

- Keep your speakers at least 10 mm away from the system for proper ventilation.
- To allow proper ventilation and to maintain good airflow around the main unit, position it with at least 5 cm of space on all sides.
- Do not block the ventilation holes of the main unit.

Center speaker

- Vibration caused by the center speaker can disrupt the picture if it is placed directly on the television. Put the center speaker on a rack or shelf.
- To prevent the speakers from falling, do not place directly on top of the television.

Subwoofer

- Place to the right or left of the television, on the floor or a sturdy shelf so that it will not cause vibration. Leave a space of 30 cm from the television.

Caution

- Refrain from holding the speaker's net.

Example: Front speaker



Note

- You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.
- Reduce the volume in the following cases to avoid damage:
 - When playing distorted sound.
 - When the speakers are reverberating due to a record player, noise from FM broadcasts, or continuous signals from an oscillator, test disc, or electronic instrument.
 - When adjusting the sound quality.
 - When turning the unit on or off.

If irregular coloring occurs on your television

The front and center speakers are designed to be used close to a television, but the picture may be affected with some televisions and setup combinations.

If this occurs, turn the television off for about 30 minutes.

The television's demagnetizing function should correct the problem. If it persists, move the speakers further away from the television.

Caution

- Use the speakers only with the recommended system. Failure to do so can damage the amplifier and speakers, and can cause fire. Consult a qualified service person if damage occurs or if a sudden change in performance is apparent.
- Do not attempt to attach these speakers to walls using methods other than those described in this manual.



Making the connections

Connect the AC mains lead only after all other connections have been made.

- Ensure that you have the complete accessories before making the connections.

Conserving power


The main unit consumes a small amount of power, even when it is in standby mode (approx. 1 W). To save power when the unit is not to be used for a long time, unplug it from the household mains socket. You will need to reset some memory items after plugging in the unit.

Connect to the power supply.

BE SURE TO READ THE NOTE ON AC MAINS LEAD ON PAGE 3 BEFORE CONNECTION.


Note

The included AC mains lead is for use with this unit only. Do not use it with other equipment.

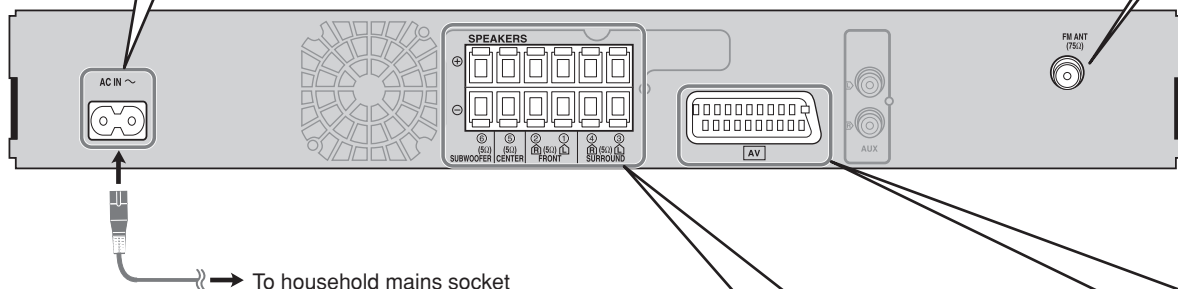


Connect to the speakers.

Attach the speaker-cable stickers to make connection easier.

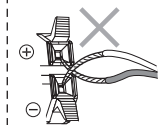

Be careful not to cross (short-circuit) or reverse the polarity of the speaker wires as doing so may damage the speakers.

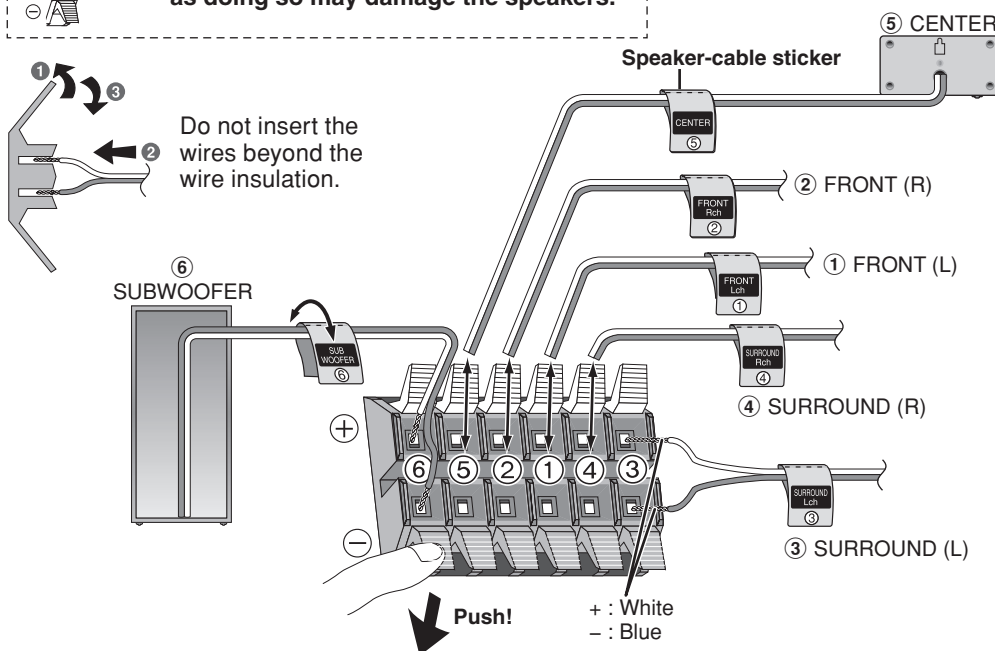




Connect to the antenna.

■ FM indoor antenna


Tape the antenna where reception is the best.

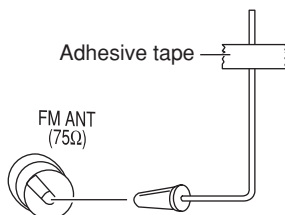

Connect to the television's SCART terminal.

- Do not connect the unit through a video cassette recorder.
- Due to copy guard protection, the picture may not be displayed correctly.
- Turn the television off before connecting, and refer to the television's operating instructions.

■ Television with SCART terminal

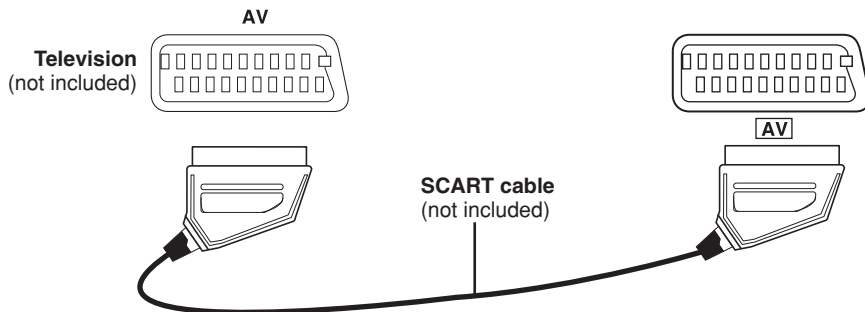

Using the SCART (AV) terminal

You can change the video signal output from the SCART (AV) terminal from "RGB" to either "VIDEO" or "S-VIDEO" to suit the type of television you are using. Select "VIDEO" or "S-VIDEO" from "VIDEO OUT-SCART" in "VIDEO" tab (➡ page 25).

This connection will also enable you to play audio from your television through your home theater system. Refer to "Operating other equipment" (➡ page 31).



Other speaker setup options

■ Attaching to a wall


You can attach the front, surround and center speakers to the wall.

- The wall or pillar on which the speakers are to be attached should be capable of supporting 10 kg per screw. Consult a qualified building contractor when attaching the speakers to a wall. Improper attachment may result in damage to the wall and speakers.



1 Drive a screw (not included) into a wall.

2 Fit the speaker securely onto the screw(s) with the hole(s).

Front and surround speakers

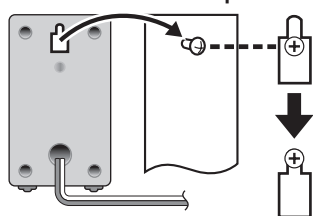

Center speaker

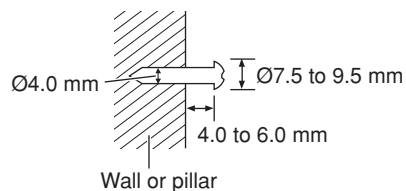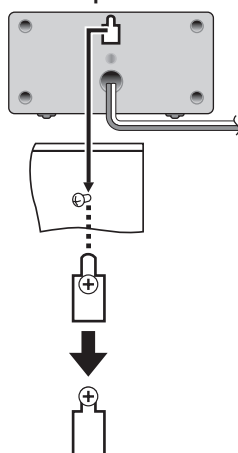


Optional antenna connections

Use outdoor antennas if radio reception is poor.

Note

- Disconnect the outdoor antenna when the unit is not in use.
- Do not use the outdoor antenna during a lightning storm.

FM outdoor antenna (Using a television antenna)

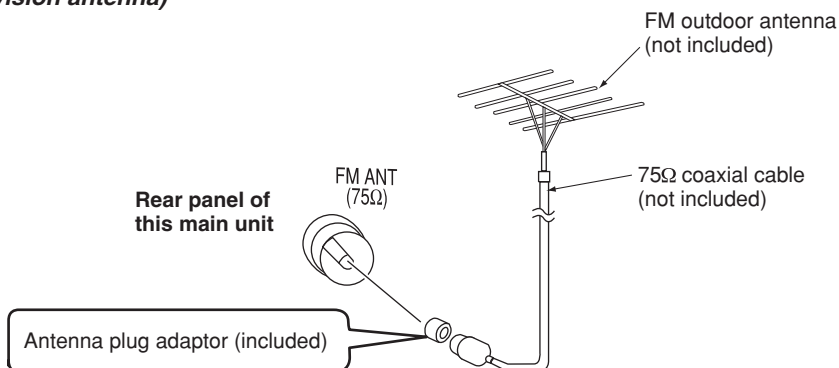

- Disconnect the FM indoor antenna.
- The outdoor antenna should be installed by a competent technician.

Performing QUICK SETUP

The QUICK SETUP screen assists you to make necessary settings.

To display the picture from this main unit, switch on the television and change the television's input mode which is connected to this main unit (example : VIDEO 1, AV 1, etc.).

To change your television's input mode, refer to its operating instructions.

• This remote control is able to perform some basic television operations (➔ page 33).

2 Select "DVD/CD".





3 Shows the QUICK SETUP screen



(Press and hold)

4 Follow the messages and make the setting.

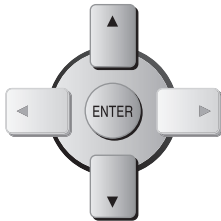

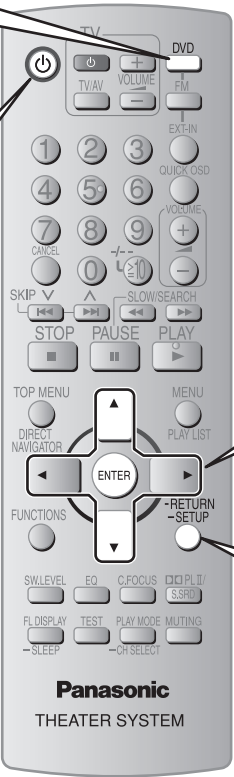

1 Switch on the main unit.



5 Finish the QUICK SETUP.



6 Press to exit.



To change these settings later

Select "QUICK SETUP" in "OTHERS" tab (➔ page 25).

Details of settings

Menu language Choose the language for the on-screen messages.	• ENGLISH • DEUTSCH • NEDERLANDS	• FRANÇAIS • ITALIANO • POLSKI	• ESPAÑOL • SVENSKA
TV Type Select to suit the type of television.	• STANDARD • PROJECTION	• CRT • PLASMA	• LCD
TV's Aspect Ratio Choose the setting to suit your television and preference.	• 4:3 PAN&SCAN • 16:9 NORMAL	• 4:3 LETTERBOX • 16:9 SHRINK	• 4:3 ZOOM • 16:9 ZOOM

• Boxed items in the above table are the factory preset.



Discs that can be played

■ Commercial discs

Disc	Logo	Indicated in these instructions by	Remarks
DVD-Video			High quality movie and music discs.
Video CD			Music discs with video. Including SVCD (Conforming to IEC62107).
CD			Music discs.

■ Recorded discs (○: Playable, X: Not playable)

Disc	Logo	Recorded on a DVD video recorder, etc.		Recorded on a personal computer, etc.			Finalizing ^{※6}
		 ^{※2}	 ^{※4}				
DVD-RAM		○	—	×	○	○	Not necessary
DVD-R/RW		○	○	×	○	○	Necessary
DVD-R DL		○ ^{※3}	○	×	×	×	Necessary
+R/+RW	—	×	(○) ^{※5}	×	×	×	Necessary
+R DL	—	×	(○) ^{※5}	×	×	×	Necessary
CD-R/RW ^{※1}	—	—	—	○	○	○	Necessary ^{※7}

- It may not be possible to play all the above-mentioned discs in some cases due to the type of disc, the condition of the recording, the recording method, or how the files were created (➡ page 26, Tips for making data discs).





- ※¹ This unit can play CD-R/RW recorded with CD-DA or Video CD format.
- ※² Discs recorded on DVD video recorders or DVD video cameras, etc. using Version 1.1 of the Video Recording Format (a unified video recording standard).
- ※³ Discs recorded on DVD video recorders or DVD video cameras using Version 1.2 of the Video Recording Format (a unified video recording standard).
- ※⁴ Discs recorded on DVD video recorders or DVD video cameras using DVD-Video Format.
- ※⁵ Recorded using a format different from DVD-Video Format, therefore, some functions cannot be used.
- ※⁶ A process that allows play on compatible equipment. To play a disc that is displayed as "Necessary" on this unit, the disc must first be finalized on the device it was recorded on.
- ※⁷ Closing the session will also work.

Note about using a DualDisc

The digital audio content side of a DualDisc does not meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format so playback may not be possible.

■ Discs that cannot be played

DVD-RW version 1.0, DVD-Audio, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridge, 2.6-GB and 5.2-GB DVD-RAM, and "Chaoji VCD" available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

■ Video systems

- This unit can play PAL and NTSC, but your television must match the system used on the disc.
- PAL discs cannot be correctly viewed on an NTSC television.
- This unit can convert NTSC signals to PAL 60 for viewing on a PAL television (➡ page 25, "NTSC DISC OUT" in "VIDEO" tab).

Main unit

ENGLISH

GETTING STARTED



Standby/on switch [⏻/⏻] (16)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

⏮/⏮, ⏭/⏭/⏭/⏭/⏭ TUNING ⏭
Skipping or slow-search play,
Select the radio stations (28)

⏮ OPEN/CLOSE
Open or close the disc tray (16)



AC supply indicator [AC IN]

This indicator lights when the unit is connected to the AC mains supply.

Remote control signal sensor

Display

+ , - VOLUME
Turn the volume up or down (16)


🔌 USB port
Connect a USB device (32)

SELECTOR (16, 28)
DVD/CD → USB → FM → AV →
AUX → Returns to DVD/CD

■/-TUNE MODE/-FM MODE
Stop playback,
Select the tuning mode (28),
Adjust the FM reception condition (28)

▶/MEMORY
Disc playback (16),
Memorize the receiving radio stations (28)

Remote control

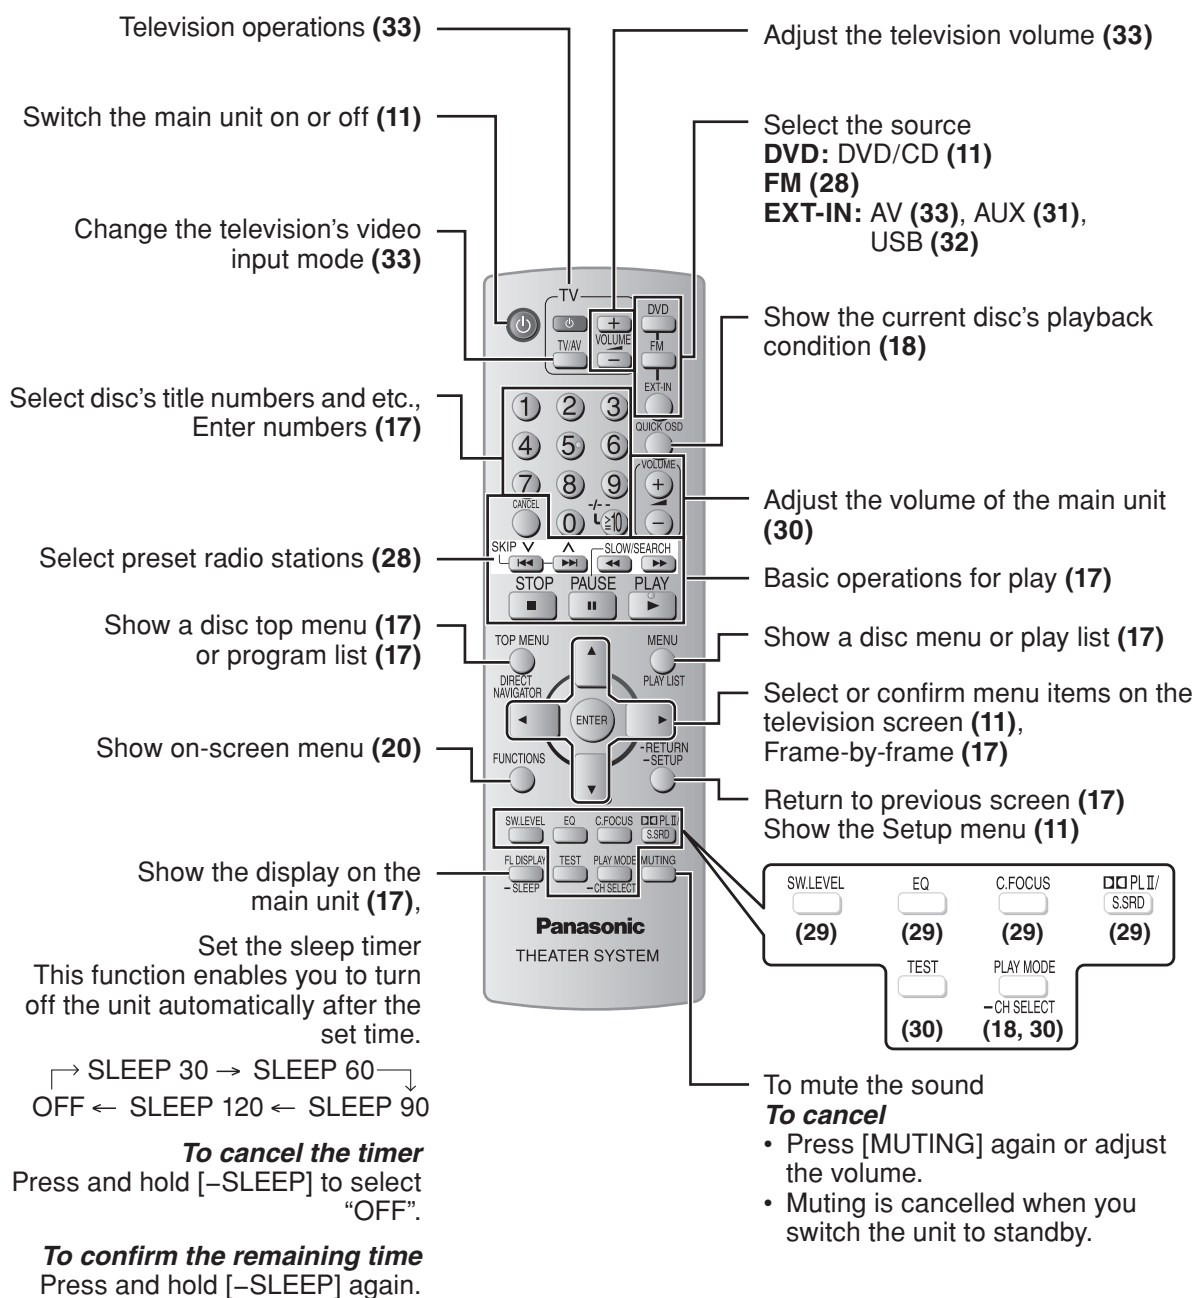

ENGLISH

DISC OPERATIONS



SELECTOR



OPEN/CLOSE


- Load double-sided discs so the label for the side you want to play is facing up.
- For DVD-RAM, remove the disc from its cartridge before use.



4 Adjust the volume and start playback.



Using the remote control

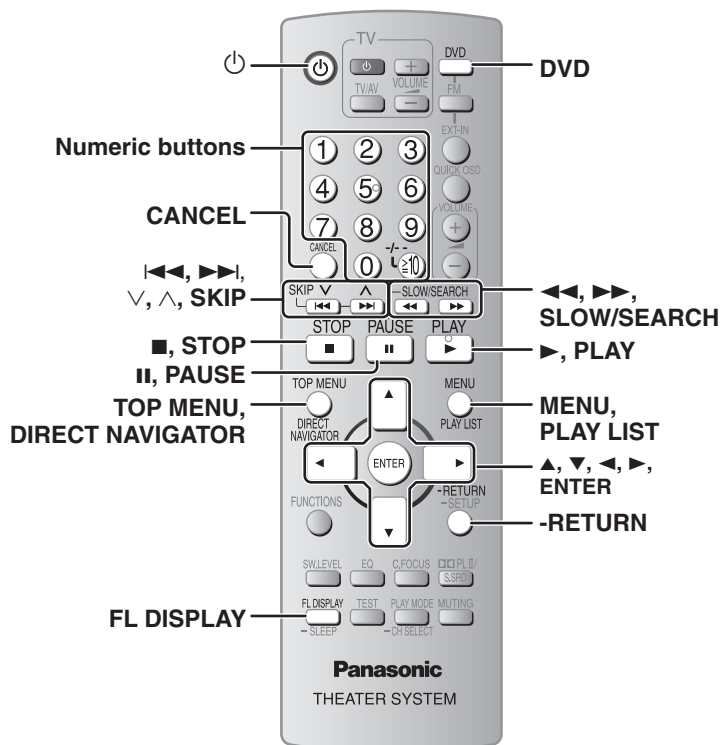



Stop



- The position is memorised while "RESUME" is on the display.
- Press [▶, PLAY] to resume.
 - Press [■, STOP] again to clear the position.

Pause



- Press [▶, PLAY] to resume playback.

Search (during play)



- Play speed increases up to 5 steps.
- Press [▶, PLAY] to resume normal playback.

Slow-motion play (during pause)



- Play speed increases up to 5 steps.
- [VCD] Slow motion play is for forward direction only.
- Press [▶, PLAY] to resume normal playback.

Main unit display




[DVD-V] [DVD-VR] [WMA] [MP3]
Time display ↔ Information display
[JPEG]
SLIDE ↔ Information display


Skip



On-screen item select

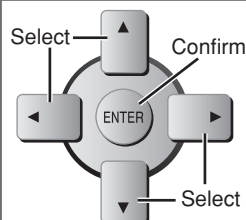

Enter numbers

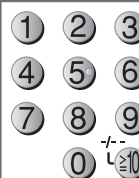

[DVD-V] (while stopped) [DVD-VR]
[VCD] [CD]

Example: To select 12,



[VCD] with Playback control (PBC)
Press [■, STOP] and then press the numeric buttons to cancel the PBC functions.

Note

- The numeric buttons that can function depend on the number of tracks on the VCD.

Cancel the numbers



Disc menus

TOP MENU



[DVD-V]
Shows a disc top menu.

DIRECT NAVIGATOR

[DVD-VR]
Shows the program (⇒ page 19).

MENU



[DVD-V]
Shows a disc menu.


[DVD-VR]
Shows the playlist (⇒ page 19).

-RETURN



[VCD] with Playback control (PBC)
Shows a disc menu.

Frame-by-frame (during pause)

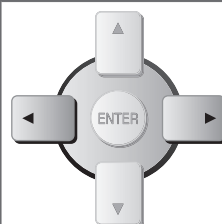

[DVD-V] [DVD-VR] [VCD]

- [DVD-VR] [VCD] Forward direction only.

Return to previous screen



Note

- DISC CONTINUES TO ROTATE WHILE MENUS ARE DISPLAYED.**
Press [■, STOP] when you finish to preserve the unit's motor and your television screen.
- Total title number may not be displayed properly on +R/+RW.



Displaying current playback condition

QUICK OSD

(during play)



Example: **DVD-V**



The OSD's (on-screen display) abbreviations are as described below;

- 1 Current playback item
example: T = Title (**DVD-V**) or Track (**CD** **VCD**)
C = Content (**WMA** **MP3**)
PG = Program or
PL = Playlist (**DVD-VR**)
- 2 Current playback chapter
example: C= Chapter (**DVD-V**)
- 3 Elapsed or remaining play time
(Press [▲, ▼] to view the elapsed or remaining play time.)
- 4 Play mode condition
- 5 Playback condition
- 6 Current playback position

Note

WMA **MP3**

Remaining play time cannot be viewed.

Program and Random play

DVD-V **VCD** **CD** **WMA** **MP3** **JPEG**

PLAY MODE

-CH SELECT

(during stop)



Example: **DVD-V** → Program → Random → Off (Normal play) ←

To exit program or random play mode while stopped.

PLAY MODE

-CH SELECT

(several times)

DVD-V Some items cannot be played even if you have programmed them.

Program play (up to 30 items)

1 To select the items.



- Press [-RETURN] to select from the previous folders.
- Repeat this step to program other items.

Example: **DVD-V**

DVD-V PROGRAM	
SELECT TITLE	TITLE CHAP.
TITLE 1	1
TITLE 2	2
TITLE 3	3
TITLE 4	4
TITLE 5	5
TITLE 6	6
TITLE 7	7
TITLE 8	8
TITLE 9	9
TITLE 10	10
START:PLAY	CLEAR ALL



DVD-V PROGRAM	
SELECT CHAPTER	TITLE CHAP.
ALL	1 2 1
CHAP. 1	2 2 2
CHAP. 2	3 3 6
CHAP. 3	4 3 3
CHAP. 4	5 5 1
CHAP. 5	6 5 5
CHAP. 6	7 5 7
CHAP. 7	8 5 8
CHAP. 8	9 2 1
CHAP. 9	10 2 4
START:PLAY	CLEAR ALL

2 PLAY



To select all the items

Press [▲, ▼] to select "ALL".
Then press [ENTER] again to confirm.

To clear the selected program

1. Press [▶, ▲, ▼] to select the program number.
2. Press [CANCEL].

To clear the whole program

Select "CLEAR ALL" with [▶] and press [ENTER].
The whole program is also cleared when the unit is turned off, the disc tray is opened or another source is selected.

Random play

1 To select a title.



Example: **DVD-V**

DVD-V RANDOM	
SELECT TITLE	
TITLE 1	
TITLE 2	
TITLE 3	
TITLE 4	
TITLE 5	
TITLE 6	
TITLE 7	
PRESS PLAY TO START	



DVD-V RANDOM	
SELECT TITLE	
* TITLE 1	
TITLE 2	
TITLE 3	
TITLE 4	
TITLE 5	
TITLE 6	
TITLE 7	
PRESS PLAY TO START	

- Press [ENTER] again to cancel the selection.

2 PLAY




Playing data discs

Select "DATA" in "OTHERS" tab (➔ page 25) to play WMA, MP3 or JPEG content.

WMA MP3 JPEG

Playing from the selected item

1 MENU
PLAY LIST

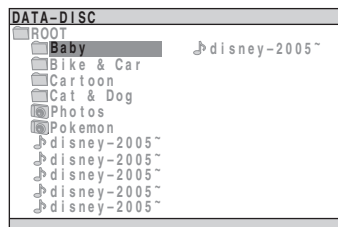

Folder: Group (Folder)*

Image: JPEG

File: WMA/MP3 content (File)*

* Files are treated as contents and folders are treated as groups in these instructions.
Maximum file or folder name: approximate 12 characters

2 To select the group.



3 To start play from the selected content.



To exit the screen

Press [MENU].

Playing RAM and DVD-R/-RW (DVD-VR) discs

DVD-VR

- Titles appear only if the titles are recorded on the disc.
- You cannot edit programs, play lists and disc titles.

Playing the programs

1 TOP MENU
DIRECT NAVIGATOR (during stop)

PG	DATE	LENGTH	TITLE
1	02/12 19:33	0:00:00	01234567890123 45678901234...
2	07/02 16:47	0:00:06	ABCDEFGHIJKLMN OPQRSTUVWXYZ...
3	02/12 19:34	0:00:00	
4	02/12 19:34	0:00:00	

2 To select from the program.



3 ENTER

To exit the screen

Press [DIRECT NAVIGATOR].

Playing a play list

Applicable only when the disc contains a play list.

1 MENU
PLAY LIST (during stop)

PL	DATE	LENGTH	TITLE
1	09/06 08:50	0:00:06	PL#01
2	09/06 08:50	0:02:00	PL#02
3	09/06 08:54	0:00:21	
4	09/06 08:54	0:00:10	

2 To select from the play list.



3 ENTER

To exit the screen

Press [PLAY LIST].






2 Select the item.

1 Display the functions screen.

3 Make the settings.

4 Press to exit.

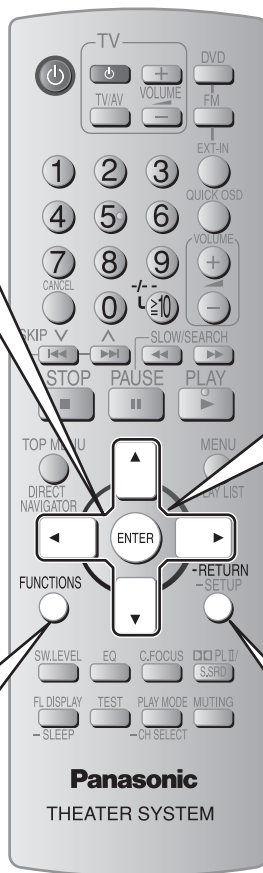

Items shown differ depending on the type of disc as well as the recording format.

Functions menu

TRACK SEARCH
TITLE SEARCH
CONTENT SEARCH
CHAPTER SEARCH
PG (Program) SEARCH
PL (Playlist) SEARCH

To start from a specific item

Example: **DVD-V**

TP C1 1: ENG 3/21ch 100 x1.0
OFF OFF 1

TITLE SEARCH

Functions menu (continued)

AUDIO

Example: **DVD-V**

T2 C1 1:ENG 3/2.1ch x1.0
 OFF OFF 1

DVD-V

To select audio soundtrack

DVD-VR **VCD**

To select "L", "R", "L+R" or "L R"

DVD-V (Karaoke disc)

To select "ON" or "OFF" for vocals

To select "OFF", "V2", "V1" or "V1+V2" for different vocal selections

• Read the disc's instructions for details.

Signal type/data

LPCM/PPCM/Digital/DTS/MP3/MPEG: Signal type kHz (Sampling frequency)/bit/ch (Number of channels)

Example: 3/2 .1ch

- .1: Low frequency effect (not displayed if there is no signal)
- 0: No surround
- 1: Mono surround
- 2: Stereo surround (left/right)
- 1: Center
- 2: Front left + Front right
- 3: Front left + Front right + Center

DATE DISPLAY

JPEG : OFF ↔ ON

C8 OFF 0
 OFF
 DATE DISPLAY

PLAY SPEED

To change play speed

– from "x0.6" to "x1.4" (in 0.1-unit steps)

Example: **DVD-V**

T2 C2 1:*** 2/0ch x1.0
 OFF 1:ENG 1
 PLAY SPEED

DVD-V **DVD-VR**

- Press [▶, PLAY] to resume normal playback.
- After you change the speed.
 - Dolby Pro Logic II has no effect.
 - Audio output switches to 2-channel stereo.
 - Sampling frequency of 96 kHz is converted to 48 kHz.
- This function may not work depending on the disc's recording.

ROTATION

To rotate a picture (during pause)

JPEG : 0 → 90 → 180 → 270

C8 OFF 0
 OFF
 ROTATION

REPEAT MODE

Example: **DVD-V**

T2 C2 1:*** 2/0ch x1.0
 OFF 1:ENG 1
 REPEAT MODE

(Only when the elapsed play time can be displayed.)

DVD-V : OFF → TITLE → CHAP. (Chapter) → A–B

DVD-VR : OFF → ALL → PG (Program) or PL (Playlist) → A–B

VCD **CD** : OFF → ALL → TRACK → A–B

WMA **MP3** : OFF → ALL → GROUP* → CONTENT → A–B

JPEG : OFF → ALL → GROUP*

* "GROUP" will not be displayed during program or random play.






Functions menu (continued)



SUBTITLE	To select subtitle language Example: DVD-V  DVD-V VCD (SVCD only) - On +R/+RW, a subtitle number may be shown for subtitles that are not displayed. DVD-V "ON" or "OFF" appears only with discs that contain subtitle on/off information (Subtitle on/off information cannot be recorded using Panasonic DVD Recorders).
ANGLE	(with multiple angles) To select a video angle Example: DVD-V 
PICTURE MODE	Example: DVD-V  NORMAL : Normal images. CINEMA1 : Mellows images and enhances detail in dark scenes. CINEMA2 : Sharpens images and enhances detail in dark scenes. DYNAMIC : Enhances the contrast for powerful images. ANIMATION : Suitable for animation.
ZOOM	To select various zoom sizes Example: DVD-V  NORMAL AUTO x2 x4
DIALOGUE ENHANCER	To make the dialogue in movies easier to hear Example: DVD-V  DVD-V (Dolby Digital, DTS, MPEG, 3-channel or higher, with the dialogue recorded in the center channel) OFF ↔ ON
Dolby PLII	OFF → MOVIE → MUSIC ↑ (→ page 29, Enhancing the stereo sound : Dolby Pro Logic II) Example: DVD-V 


Changing the player settings

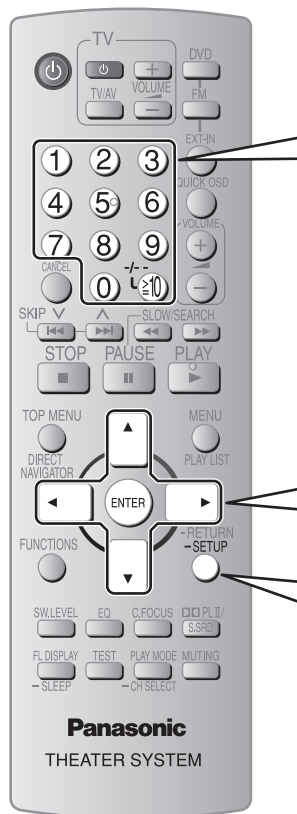


1 Display the MAIN menu.





2 Select the tab.

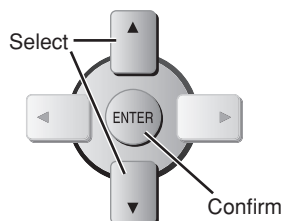


3 Select the item.

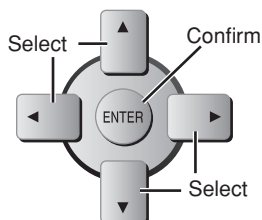


4 Make the settings.

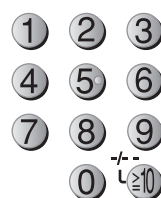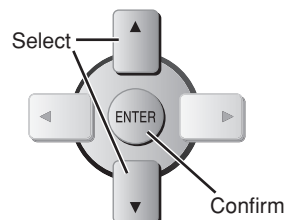

5 Press to exit.

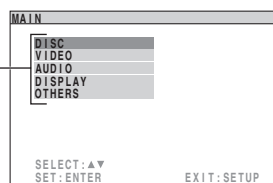

Tab

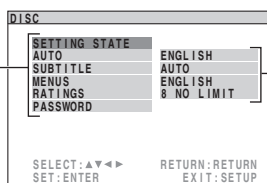

Item

Setting

- If you have not performed QUICK SETUP (⇒ page 11), the QUICK SETUP screen appears.

- The settings remain intact even if you switch the unit to standby.
- Boxed items are the factory settings in the following table.

QUICK SETUP enables successive settings of the items in the shaded area.

MAIN menu

■ “DISC” tab

AUDIO

Choose the audio language.

- | | | | |
|--------------------------|---------------------------|-----------|----------|
| • ENGLISH | • FRENCH | • SPANISH | • GERMAN |
| • ITALIAN | • SWEDISH | • DUTCH | • POLISH |
| • ORIGINAL ^{※1} | • OTHER --- ^{※2} | | |

SUBTITLE

Choose the subtitle language.

- | | | | |
|-----------------------------|---------------------------|-----------|-----------|
| • AUTO ^{※3} | • ENGLISH | • FRENCH | • SPANISH |
| • GERMAN | • ITALIAN | • SWEDISH | • DUTCH |
| • POLISH | • OTHER --- ^{※2} | | |

^{※1} The original language designated on the disc is selected.

^{※2} Input a code number referring to the table (⇒ page 36).

^{※3} If the language selected for “AUDIO” is not available, subtitle appears in that language (if available on the disc).





QUICK SETUP enables successive settings of the items in the shaded area.

MAIN menu (continued)

MENUS Choose the language for disc menus. Changing the menu language in QUICK SETUP also changes this setting.	• ENGLISH • ITALIAN • FRENCH • SWEDISH • SPANISH • DUTCH • GERMAN • POLISH • OTHER — — — ×²
RATINGS Set a ratings level to limit DVD-Video play.	Setting ratings (When level 8 is selected) • 0 LOCK ALL: To prevent play of discs without rating levels. • 1 to 7: To prohibit play of DVD-Video with corresponding ratings recorded on them. • 8 NO LIMIT When you select your ratings level, a password screen is shown. Enter your password and then follow the on-screen instructions. Do not forget your password. A message screen will be shown if a DVD-Video disc exceeding the ratings level is inserted in the unit. Follow the on-screen instructions.
PASSWORD Change the password for "RATINGS".	• SETTING Changing ratings (When level 0 to 7 is selected) • CHANGE Follow the on-screen instructions.

■ "VIDEO" tab

TV ASPECT Choose the setting to suit your television and preference.	• 4 : 3 PAN&SCAN: Regular aspect television (4:3) The sides of the widescreen picture are cut off so it fills the screen (unless prohibited by the disc).  • 4 : 3 LETTERBOX: Regular aspect television (4:3) Widescreen picture is shown in the letterbox style.  • 4 : 3 ZOOM: Regular aspect television (4:3) The picture zooms in and out. • 16 : 9 NORMAL: Widescreen television (16:9) Laterally stretches image. • 16 : 9 SHRINK: Widescreen television (16:9) Images appear in the center of the screen. • 16 : 9 ZOOM: Widescreen television (16:9) Expands to 4:3 aspect ratio.
TV TYPE Select to suit the type of television.	• STANDARD • PROJECTION • CRT • PLASMA • LCD
TIME DELAY When connected with a Plasma display, adjust if you notice the audio is out of sync with the video.	• 0 ms • 20 ms • 40 ms • 60 ms • 80 ms • 100 ms

×² Input a code number referring to the table (➡ page 36).



MAIN menu (continued)

NTSC DISC OUT Choose PAL 60 or NTSC output when playing NTSC discs (➔ page 13, Video systems).	• NTSC: When connected to a NTSC television. • PAL60: When connected to a PAL television.
STILL MODE Specify the type of picture shown when paused.	• AUTO • FIELD^{※4}: The picture is not blurred, but picture quality is lower. • FRAME^{※4}: Overall quality is high, but the picture may appear blurred.
VIDEO OUT – SCART Choose the video signal format to be output from the SCART (AV) terminal.	• VIDEO • S-VIDEO • RGB
■ “AUDIO” tab	
DYNAMIC RANGE	• ON: Adjust for clarity even when the volume is low by compressing the range of the lowest sound level and the highest sound level. Convenient for late night viewing. (Only works with Dolby Digital) • OFF
SPEAKER SETTINGS (➔ page 26) Set the delay time for your center and surround speakers	• SETTINGS • C DELAY: • 0ms • 1ms • 2ms • 3ms • 4ms • 5ms • SL/SR DELAY: • 0ms • 5ms • 10ms • 15ms
■ “DISPLAY” tab	
LANGUAGE	• ENGLISH • FRANÇAIS • ESPAÑOL • DEUTSCH • ITALIANO • SVENSKA • NEDERLANDS • POLSKI
■ “OTHERS” tab	
JPEG TIME Set the speed of the slideshow.	• 1 SEC • 2 SEC • 3 SEC • 4 SEC to 15 SEC • 15 SEC to 60 SEC (in 5-unit steps) • 60 SEC to 180 SEC (in 30-unit steps)
FL DIMMER Change the brightness of the unit's display.	• BRIGHT • DIM • AUTO: The display is dimmed, but brightens when you perform some operations.
QUICK SETUP	• SET • YES • NO
DVD-VR/DATA Select to play only DVD-VR or DATA format (➔ page 19).	• DVD-VR • DATA
DEFAULTS This returns all values in the MAIN menu to the default settings.	• RESET The password screen is shown if “RATINGS” (➔ page 24) is set. Please enter the same password, then turn the unit off and on again.

※4 Refer to “Frame still and field still” (➔ page 37, Glossary).






Changing the delay time of the speakers

Effective when playing multi-channel audio (Center and surround speakers only)

For optimum listening with 5.1-channel sound, all the speakers, except for the subwoofer, should be the same distance from the seating position. If you have to place the center or surround speakers closer to the seating position, adjust the delay time to make up for the difference.

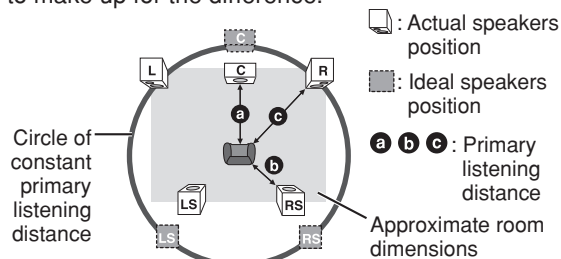

If either distance **a** or **b** is less than **c**, find the difference in the table and change to the recommended setting.

a Center speaker		b Surround speaker	
Difference (Approx.)	Setting	Difference (Approx.)	Setting
30 cm	1 ms	150 cm	5 ms
60 cm	2 ms	300 cm	10 ms
90 cm	3 ms	450 cm	15 ms
120 cm	4 ms		
150 cm	5 ms		


■ To enter the speaker setting

1 To select the speaker.



C DELAY = Center delay
SL / SR DELAY = Surround left / Surround right delay

2 To select the delay time.

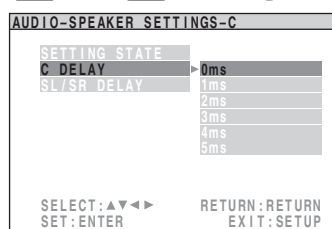

To exit the setup

Press and hold [-SETUP].

Tips for making data discs

- When there are more than eight groups, the eighth group onwards will be displayed on one vertical line in the menu screen.
- There may be differences in the display order on the menu screen and computer screen.
- This unit cannot play files recorded using packet write.

DVD-RAM

- Discs must conform to UDF 2.0.

DVD-R/RW

- Discs must conform to UDF bridge (UDF 1.02/ISO9660).
- This unit does not support multi-session. Only the default session is played.

CD-R/RW

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit supports multi-session but if there are many sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.



Naming folders and files

Files are treated as contents and folders are treated as groups on this unit.

At the time of recording, prefix folder and file names. This should be with numbers that have an equal number of digits, and should be done in the order you want to play them (this may not work at times). Files must have the extension (➡ see below).

WMA (Extension: ".WMA" or ".wma")

- Compatible compression rate: between 48 kbps and 320 kbps.
- You cannot play WMA files that are copy-protected.
- This unit does not support Multiple Bit Rate (MBR).

MP3 (Extension: ".MP3" or ".mp3")

- Compatible compression rate: between 32 kbps and 320 kbps.
- This unit does not support ID3 tags.
- Compatible sampling rates:
 - DVD-RAM, DVD-R/RW: 11.02, 12, 22.05, 24, 44.1 and 48 kHz
 - CD-R/RW: 8, 11.02, 12, 16, 22.05, 24, 32, 44.1 and 48 kHz

JPEG (Extension: ".JPG", ".jpg", ".JPEG" or ".jpeg")



- JPEG files taken on a digital camera that conform to DCF Standard (Design rule for Camera File system) Version 1.0 are displayed. Files that have been altered, edited or saved with computer picture editing software may not be displayed.
- This unit cannot display moving pictures, MOTION JPEG and other such formats, and still pictures other than JPEG (Example: TIFF), or play pictures with attached audio.

Disc handling precautions

- Do not attach labels or stickers to discs. This may cause disc warping, rendering it unusable.
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs, etc).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.

■ To clean discs

Wipe with a damp cloth and then wipe dry.

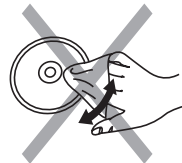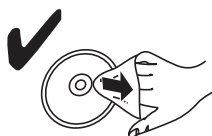

Manual tuning

1 To select "FM".

SELECTOR



(main unit)

OR



(remote control)

2 To select "MANUAL".



-TUNE MODE/-FM MODE

(main unit)

3 To select the frequency.



(main unit)

OR



(remote control)

Press and hold [V TUNING ^] until the frequency starts scrolling to start automatic tuning. Tuning stops when a station is found.

Presetting the channel

Remote control only

Up to 30 stations can be set for FM.

1. While listening to the radio broadcast

 
Press [ENTER].

2. While the frequency and "PGM" are flashing on the display

Press the numeric buttons to select a channel.

- To select a 2-digit number

Example: To select 12,



- Alternatively, press [V, ^], then press [ENTER].

The station occupying a channel is erased if another station is preset to that channel.

Automatic presetting

1 To select "FM".

SELECTOR



(main unit)

OR



(remote control)

2 Press and hold.



(main unit)

OR



(remote control)

Release the button when "FM AUTO" is displayed.

The tuner tunes to the lowest frequency and starts to preset all the stations it can receive into the channels in ascending order.

- "SET OK" is displayed when the stations are set, and the radio tunes to the last preset station.
- "ERROR" is displayed when automatic presetting is unsuccessful. Preset the channels manually (→ see left).

Selecting the preset channels

1 To select "FM".

 


2 To select the channel.



- Alternatively, press [V, ^].
- To perform the step on the main unit, first press [-TUNE MODE] to select "PRESET", and then press [V TUNING ^] to select the channel.

When a stereo FM broadcast is being received, "ST" lights in the display.



If noise is excessive in FM

Main unit only

Press and hold [-FM MODE] to display "MONO".

Press and hold [-FM MODE] again to cancel the mode.

The mode is also cancelled when you change the frequency.



Note

- The following sound effects may not be available or have no effect depending on the type of source.
- You may experience a reduction in sound quality when these sound effects are used with some sources. If this occurs, turn the sound effects off.

Enhancing the sound from the center speaker: Center Focus

This applies to discs where the dialogue is recorded in the center channel.

You can make the sound of the center speaker seem like it is coming from within the television.



C FOCUS ON ↔ C FOCUS OFF

- This also works when Dolby Pro Logic II is turned on.

Adjusting the amount of bass: Subwoofer level

You can adjust the amount of bass. The unit automatically selects the most suitable setting according to the type of playback source.



SUB W 2 (factory preset) → SUB W 3
 SUB W 1 ← SUB W 4

- **When AV or AUX source is selected**
 SUB W 1 (factory preset) → SUB W 2
 SUB W 4 ← SUB W 3

- To check the current setting, press [SW.LEVEL].
- The setting you make is retained, and recalled every time you play the same type of source.

Changing the sound quality: Equalizer Mode (EQ)



SOFT* : For background music.
HEAVY : Adds punch to rock.
CLEAR : Clarifies higher sounds.
FLAT : Cancel (no effect is added) (factory preset).

- To check the current setting, press [EQ].
- You can adjust the volume of the surround speakers to get the best surround effect (→ page 30, Adjusting the volume of each speaker: Speaker level adjustments).

* Factory preset when AV or AUX source is selected.

Enhancing the stereo sound: Dolby Pro Logic II

Dolby Pro Logic II is an advanced decoder that derives 5-channel surround (Left and Right Front, Center, Left and Right Surround) from stereo sound sources, whether or not it has been specifically Dolby Surround encoded.



MOVIE : Movie software, recorded in Dolby Surround.
MUSIC : Stereo sources.
OFF : Cancel.

- This function is only available for DVD/CD and USB mode.
- "DOLBI II" lights when there is effect.

Enhancing the stereo sound: Super Surround



MOVIE : Use this mode when playing movie software.
MUSIC : Adds surround effects to stereo sources.
OFF : Cancel.

- Super Surround and EQ can be turned on simultaneously.
- This function is only available for FM, AV and AUX mode.



Adjusting the volume of each speaker: Speaker level adjustments

This is one of the ways to get appropriate surround effects.

Preparation



- 1 While stopped and no on-screen display is shown
To output a test signal.



L: Front left C: Center
R: Front right RS: Right surround
LS: Left surround

- There is no output from SW (subwoofer) channel.

- 2 To set the volume level normally used for listening.



- 3 To adjust the speaker level for each speaker.



- Adjust the speaker levels to the same level as the front speakers.
C, RS, LS: -6 dB to +6 dB

To stop the test signal

Press [TEST] again.

To adjust speaker level during play

(Effective when playing multi-channel audio or when Dolby Pro Logic II is on.)

1. Press and hold [-CH SELECT] to select the speaker.

L → C → R → RS → LS → SW

SW: Subwoofer

- You can adjust SW only if the disc includes a subwoofer channel.
- "SW" does not appear on the display and is not adjustable when "DOLBY II" is lit.
- "S" appears on the display when "MOVIE", "MUSIC" is selected with Super Surround (→ page 29).

In this case, you can adjust both surround speaker levels at the same time using [▲, ▼].
S: -6 dB to +6 dB

2. Press [▲] (increase) or [▼] (decrease) to adjust the speaker level for each speaker.

C, RS, LS, SW: -6 dB to +6 dB

(L, R: Only the balance is adjustable.)


- To adjust the balance of the front speakers, while "L" or "R" is selected, press [◀, ▶].




Optional audio connection for video cassette recorder

This audio connection will enable you to play audio from your video cassette recorder through your home theater system.

Press [EXT-IN] (➡ page 15) to select “AUX” as the source to operate the audio input.

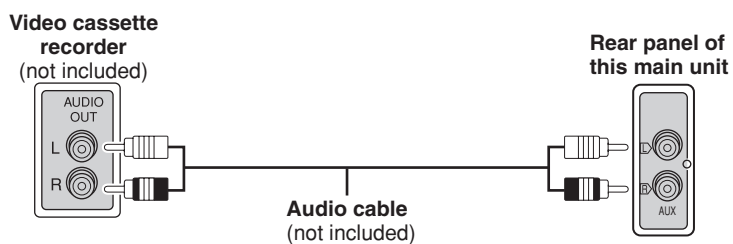

Optional connection for set top box

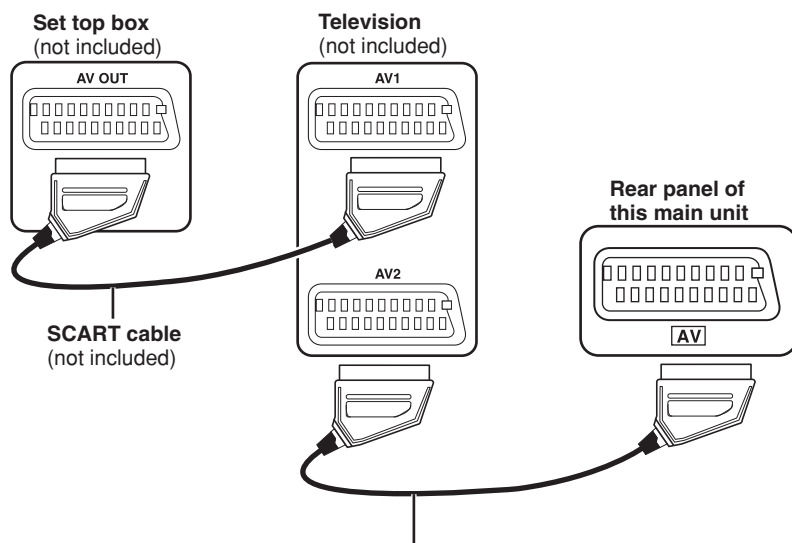

SCART cable (not included)

- To listen to the sound from the television, select the appropriate audio out (example: Monitor) on the television.

Sound from the television

- Press [EXT-IN] (➡ page 33) to select the “AV” audio input from the remote control.





Optional USB connection and operation

WMA MP3 JPEG

The USB connectivity enables you to connect and play tracks or files from USB mass storage class devices.

Typically, USB memory devices. (Bulk only transfer)

Preparation

Before connecting any USB mass storage device to the unit, ensure that the data stored therein has been backed up.

It is not recommended to use a USB extension cable. The USB device might not be recognised by this unit.

1 Connect the USB mass storage device (not included).



USB enabled device
(not included)

It is not recommended to use a USB extension cable. The device connected via the cable will not be recognised by this unit.

2 To select "USB" as the source, press several times.




USB → AV → AUX

Select the desired item for playback.



Example:

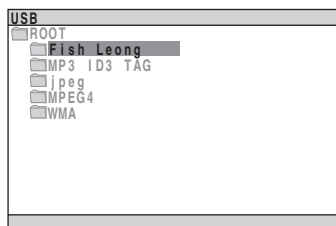


3 Adjust the volume of the main unit.



4 Begin playback by selecting the track from the USB mass storage device.

Example:

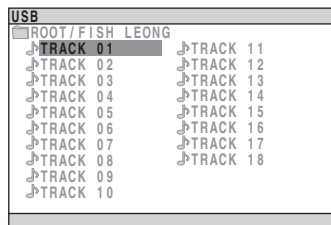

To return to the previous screen
Press [-RETURN].

For other operating functions, they are similar as those described on "DISC OPERATION" (→ page 16 to 27).

Compatible devices

- **Devices which are defined as USB mass storage class:**
 - USB devices that support bulk only transfer.
 - USB devices that support USB 2.0 full speed.

Supported Formats

	File name	File extension
Still pictures	JPG*	.jpg .jpeg
Music	MP3 WMA	.mp3 .wma

* It may not be possible to play all the files due to the condition on how they were created.



Note

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or which require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. [Only FAT 12/16/32 (File Allocation Table 12/16/32) file system is supported].
- Depending on the sector size, some files may not work.
- It will not operate with Janus enabled MTP (Media Transfer Protocol) devices.
- Maximum folder: 256 folders
- Maximum file: 4000 files
- Maximum file name: 12 characters
- Maximum folder name: 12 characters
- Only one memory card will be selected when connecting a multiport USB card reader. Typically the first memory card inserted.

Operating the television

You can use the remote control to operate a Panasonic television.
Aim the remote control at the television.

To switch the television on or off



To switch the television's video input mode



Adjust the volume



To play audio from your television through your home theater system

Preparation

Connect your equipment referring to "Connect to the television's SCART terminal" (➡ page 9).

Press [EXT-IN] to select "AV" as the source. Then reduce the volume on the television to its minimum, and control the volume on this main unit.

Note

- The remote control may not work properly with some models.
- You can enjoy 5.1-channel surround sound when you turn on Super Surround (MOVIE, MUSIC) (➡ page 29).

Changing the main unit and remote control

The remote control and main unit are factory-set to "REMOTE 1" mode.
If your remote control affects other equipment during operation, you can switch to operate in "REMOTE 2" mode.

To switch to "REMOTE 2" mode

1 While pressing and holding [▶▶/▶▶] on the main unit

2

"REMOTE 2" appears on the main unit display.

2 To operate in "REMOTE 2" mode



(Press and hold for 2 seconds)

To return to "REMOTE 1" mode

Perform steps 1 and 2 but use [1] instead of [2] for both steps. ("REMOTE 1" appears on the main unit during step 1.)

The remote control cannot work with the main unit if their modes are different.

"REMOTE 1" or "REMOTE 2" appears on the main unit display when you operate the remote control.

- If "REMOTE 1" appears (The main unit is in "REMOTE 1" mode.)
Press and hold [ENTER] and [1] on the remote control for at least 2 seconds.
- If "REMOTE 2" appears (The main unit is in "REMOTE 2" mode.)
Press and hold [ENTER] and [2] on the remote control for at least 2 seconds.

Note

You can still operate a television using the remote control (➡ see above) even after switching the mode.



Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated in the chart do not solve the problem, consult your dealer for instructions.

■ Power		Page
No power.	Insert the AC mains lead securely.	8
The unit is automatically switched to the standby mode.	The Sleep timer was working and had reached the set time limit.	15

■ Unresponsive or inoperable function

No response when any buttons are pressed.	This unit cannot play discs other than the ones listed in these operating instructions.	12
	The unit may not be operating properly due to lightning, static electricity or some other external factor. Turn the unit off and then back to on. Alternatively, turn the unit off, disconnect the AC mains lead, and then reconnect it.	—
	Condensation has formed: Wait 1 to 2 hours for it to evaporate.	—
No response when remote control buttons are pressed.	Check that the batteries are installed correctly.	6
	The batteries are depleted. Replace them with new ones.	6
	Aim the remote control at the remote control signal sensor and operate.	14
Other products respond to the remote control.	Change the remote control operating mode.	33
No picture or sound.	Check the video or speaker connection.	8, 9
	Check the power or input setting of the connected equipment and the main unit.	—
	Check that the disc has something recorded on it.	—
You have forgotten your ratings password. Reset all the settings to Factory Preset.	While stopped and “DVD/CD” is the source, press and hold [■] on the main unit and [≥10] on the remote control until “INITIALIZED” disappears from the television. Turn the unit off and on again. All settings will return to the default values.	—

■ Specific operation undesirable or unexpected

It takes time before play starts.	Play may take time to begin when an MP3 track has still picture data. Even after the track starts, the correct play time will not be displayed. This is normal. [MP3]	—
Folders on a data CD are not displayed correctly. [WMA] [MP3] [JPEG]	Folders deeper than the eighth layer are displayed as the eighth layer.	—
A menu screen appears during skip or search. [VCD]	This is normal for Video CDs.	—
Playback control menu does not appear. [VCD] with playback control	Press [■, STOP] twice and then press [▶, PLAY].	—
The program and random play functions do not work. [DVD-V]	These functions do not work with some DVD-Videos.	—
Play does not start.	This unit may not play WMA that contains still picture data.	—
	If a disc contains CD-DA and other formats, proper playback may not be possible.	—

■ Subtitle

No subtitles.	Display the subtitles. (“SUBTITLE” in Functions menu)	22
---------------	---	----

■ A-B repeat

Point B is automatically set.	The end of an item becomes point B when it is reached.	—
-------------------------------	--	---



■ Sound abnormal or improper

		Page
Sound is distorted.	• Noise may occur when playing WMA.	—
Effects do not work.	• Some audio effects do not work or have less effect with some discs. • Dolby Pro Logic II does not work if you have changed the play speed.	— —
Humming is heard during play.	• An AC mains lead or fluorescent light is near the main unit. Keep other appliances and cables away from the main unit.	—
No sound.	• There may be a slight pause in sound when you change the play speed.	—

■ Picture abnormal or unviewable

The picture on the television is not displayed correctly or disappears.	• The unit and television are using different video systems. Use a multi-system or PAL television. • The system used on the disc does not match your television. – PAL discs cannot be correctly viewed on an NTSC television. – This unit can convert NTSC signals to PAL 60 for viewing on a PAL television ("NTSC DISC OUT" in "VIDEO" tab). • Ensure that the unit is connected directly to the television, and is not connected through a video cassette recorder. • Mobile telephone chargers can cause some disturbance. • If you are using an indoor television antenna, change to an outdoor antenna. • The television antenna wire is too close to the unit. Move it away from the unit.	— — 25 31 — — —
Picture size does not fit the screen.	• Change "TV ASPECT" in the "VIDEO" tab. • Use the television to change the aspect. • Change the zoom setting. ("ZOOM" in Functions menu.)	24 — 22
Menu is not displayed correctly.	• Restore the zoom ratio to "NORMAL". ("ZOOM" in Functions menu.)	22
Auto zoom function does not work well.	• Turn off television zoom function. • Zoom function may not work well, especially in dark scenes and may not work depending on the type of disc.	— —

■ Unit displays

The display is dark.	• Select "BRIGHT" in "FL DIMMER" in the "OTHERS" tab.	25
"NO PLAY"	• You inserted a disc the unit cannot play; insert one it can. • You inserted a blank disc. • You inserted a disc that has not been finalized.	12 — —
"NO DISC"	• You have not inserted a disc; insert one. • You have not inserted the disc correctly; insert it correctly.	— 16
"OVER CURRENT ERROR"	• The USB device is drawing too much power. Switch to DVD/CD mode, remove the USB and turn the unit off.	—
"F61"	• Check and correct the speaker cable connections. If this does not fix the problem, consult the dealer.	8
"F76"	• There is a power supply problem. Consult the dealer.	—
"DVD U11"	• Disc may be dirty. Wipe it clean.	27
"ERROR"	• Incorrect operation performed. Read the instructions and try again.	—
"DVD H □ □" "DVD F □ □ □" □ stands for a number.	• Trouble may have occurred. The numbers following "H" and "F" depend on the status of the unit. Turn the unit off and then back on. Alternatively, turn the unit off, disconnect the AC mains lead, and then reconnect it. • If the service numbers fail to clear, note the service number and contact a qualified service person.	— —
"REMOTE 1" or "REMOTE 2"	• Match the modes on the main unit and remote control. Depending on the number being displayed ("1" or "2"), press and hold [ENTER] and the corresponding numbered button ([1] or [2]) for at least 2 seconds.	33



■ Television displays

“⊘”	• The operation is prohibited by the unit or disc.	—
“ERROR”	• You are trying to display an incompatible group or content. • You are trying to play a protected group or content. You cannot play it.	— —
“Check the disc”	• This disc may be dirty.	—
“This disc may not be played in your region”	• Only DVD-Video discs that include or have the same region number as the one on the rear panel of this unit can be played.	Cover page

■ USB

The USB drive or its contents cannot be read.	• The USB drive format or its contents is/are not compatible with the system. • The USB host function of this product may not work with some USB devices. • USB devices with storage capacity of more than 32 GB may not work in some instances.	— — —
Slow operation of the USB device.	• Large file size or high memory USB flash drive takes longer time to read and display on the TV.	—

■ Menus

The Setup menu cannot be accessed.	• Select “DVD/CD” as the source. • Cancel program and random play. • Cancel JPEG’s playback.	— 18 —
------------------------------------	--	--------------

■ Listening to the radio

Distorted sound or noise is heard. “ST” flickers or does not light.	• Adjust the position of the FM antenna. • Use an outdoor antenna.	— 10
A beat sound is heard.	• Turn the television off or move it away from the unit.	—

Language code list

Abkhazian: 6566	Danish: 6865	Italian: 7384	Norwegian: 7879	Swedish: 8386
Afar: 6565	Dutch: 7876	Japanese: 7465	Oriya: 7982	Tagalog: 8476
Afrikaans: 6570	English: 6978	Javanese: 7487	Pashto, Pushto: 8083	Tajik: 8471
Albanian: 8381	Esperanto: 6979	Kannada: 7578	Persian: 7065	Tamil: 8465
Ameharic: 6577	Estonian: 6984	Kashmiri: 7583	Polish: 8076	Tatar: 8484
Arabic: 6582	Faroese: 7079	Kazakh: 7575	Portuguese: 8084	Telugu: 8469
Armenian: 7289	Fiji: 7074	Kirghiz: 7589	Punjabi: 8065	Thai: 8472
Assamese: 6583	Finnish: 7073	Korean: 7579	Quechua: 8185	Tibetan: 6679
Aymara: 6589	French: 7082	Kurdish: 7585	Rhaeto-Romance: 8277	Tigrinya: 8473
Azerbaijani: 6590	Frisian: 7089	Laotian: 7679	Romanian: 8279	Tonga: 8479
Bashkir: 6665	Galician: 7176	Latin: 7665	Russian: 8285	Turkish: 8482
Basque: 6985	Georgian: 7565	Latvian, Lettish: 7686	Samoan: 8377	Turkmen: 8475
Bengali, Bangla: 6678	German: 6869	Lingala: 7678	Sanskrit: 8365	Twi: 8487
Bhutani: 6890	Greek: 6976	Lithuanian: 7684	Scots Gaelic: 7168	Ukrainian: 8575
Bihari: 6672	Greenlandic: 7576	Macedonian: 7775	Serbian: 8382	Urdu: 8582
Breton: 6682	Guarani: 7178	Malagasy: 7771	Serbo-Croatian: 8372	Uzbek: 8590
Bulgarian: 6671	Gujarati: 7185	Malay: 7783	Shona: 8378	Vietnamese: 8673
Burmese: 7789	Hausa: 7265	Malayalam: 7776	Sindhi: 8368	Volapük: 8679
Byelorussian: 6669	Hebrew: 7387	Maltese: 7784	Singhalese: 8373	Welsh: 6789
Cambodian: 7577	Hindi: 7273	Maori: 7773	Slovak: 8375	Wolof: 8779
Catalan: 6765	Hungarian: 7285	Marathi: 7782	Slovenian: 8376	Xhosa: 8872
Chinese: 9072	Icelandic: 7383	Moldavian: 7779	Somali: 8379	Yiddish: 7473
Corsican: 6779	Indonesian: 7378	Mongolian: 7778	Spanish: 6983	Yoruba: 8979
Croatian: 7282	Interlingua: 7365	Nauru: 7865	Sundanese: 8385	Zulu: 9085
Czech: 6783	Irish: 7165	Nepali: 7869	Swahili: 8387	



Decoder

A decoder restores the coded audio signals on DVDs to normal. This is called decoding.

Dolby Digital

This is a method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2-channel) audio, these signals can also be multi-channel audio. A large amount of audio information can be recorded on one disc using this method.

DTS (Digital Theater Systems)

This surround system is used in many movie theaters around the world. There is good separation between the channels, so realistic sound effects are possible.

Dynamic range

Dynamic range is the difference between the lowest level of sound that can be heard above the noise of the equipment and the highest level of sound before distortion occurs.

Film and video

DVD-Videos are recorded using either film or video. This unit can determine which type has been used, then uses the most suitable method of progressive output.

Film: Recorded at 25 frames per second (PAL discs) or 24 frames per second (NTSC discs). (NTSC discs recorded at 30 frames per second as well). Generally appropriate for motion picture films.

Video: Recorded at 25 frames/50 fields per second (PAL discs) or 30 frames/60 fields per second (NTSC discs). Generally appropriate for TV drama programs or animation.

Frame still and field still

Frames are the still pictures that go together to make a moving picture.

There are about 30 frames shown each second.

One frame is made up of two fields. A regular television shows these fields one after the other to create frames.

A still is shown when you pause a moving picture.

A frame still is made up of two alternating fields, so the picture may appear blurred, but overall quality is high.

A field still is not blurred, but it has only half the information of a frame still so picture quality is lower.

I/P/B

MPEG 2, the video compression standard adopted for use with DVD-Video, codes frames using these 3 picture types.

I: Intra coded picture

This picture has the best quality and is the best to use when adjusting the picture.

P: Predictive coded picture

This picture is calculated based on past I or P-pictures.

B: Bidirectionally-predictive coded picture

This picture is calculated by comparing past and future I and P-pictures so it has the lowest volume of information.

JPEG (Joint Photographic Experts Group)

This is a system used for compressing/decoding color still pictures. If you select JPEG as the storage system on digital cameras, etc., the data will be compressed to 1/10–1/100 of its original size. The benefit of JPEG is less deterioration in picture quality considering the degree of compression.

Linear PCM (Pulse Code Modulation)

These are uncompressed digital signals, similar to those found on CDs.

MP3 (MPEG Audio Layer 3)

An audio compression method that compresses audio to approximately one tenth of its size without any considerable loss of audio quality.

Playback control (PBC)

If a Video CD has playback control, you can select scenes and information with menus.

Sampling frequency

Sampling is the process of converting the heights of sound wave (analog signal) samples taken at set periods into digits (digital encoding).

Sampling frequency is the number of samples taken per second, so larger numbers mean more faithful reproduction of the original sound.

WMA (Windows Media™ Audio)

WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.



AMPLIFIER SECTION

RMS Output Power: Dolby Digital Mode

Front Ch	55 W per channel (5 Ω), 1 kHz, 10 % THD
Surround Ch	55 W per channel (5 Ω), 1 kHz, 10 % THD
Center Ch	55 W per channel (5 Ω), 1 kHz, 10 % THD
Subwoofer Ch	55 W per channel (5 Ω), 100 Hz, 10 % THD
Total RMS Dolby Digital mode power	330 W

DIN Output Power: Dolby Digital Mode

Front Ch	25 W per channel (5 Ω), 1 kHz, 1 % THD
Surround Ch	25 W per channel (5 Ω), 1 kHz, 1 % THD
Center Ch	25 W per channel (5 Ω), 1 kHz, 1 % THD
Subwoofer Ch	25 W per channel (5 Ω), 100 Hz, 1 % THD
Total DIN Dolby Digital mode power	150 W

FM TUNER, TERMINALS SECTION

Preset Memory	FM 30 stations
Frequency Modulation (FM)	
Frequency range	87.50 to 108.00 MHz (50-kHz step)
Sensitivity	1.8 μV (IHF)
S/N 26 dB	1.4 μV
Antenna terminals	75 Ω (unbalanced)

DISC SECTION

Discs played (8 cm or 12 cm)

- (1) DVD (DVD-Video)
- (2) DVD-RAM (DVD-VR, MP3^{※1}, ^{※4}, JPEG^{※1}, ^{※2})
- (3) DVD-R (DVD-Video, DVD-VR, MP3^{※1}, ^{※4}, JPEG^{※1}, ^{※2})
- (4) DVD-R DL (DVD-Video, DVD-VR)
- (5) DVD-RW (DVD-Video, DVD-VR, MP3^{※1}, ^{※4}, JPEG^{※1}, ^{※2})
- (6) +R/+RW (Video)
- (7) +R DL (Video)
- (8) CD, CD-R/RW (CD-DA, Video CD, SVCD^{※3}, MP3^{※1}, ^{※4}, WMA^{※1}, ^{※5}, JPEG^{※1}, ^{※2})

※1 The total combined maximum number of recognizable audio and picture contents and groups: 4000 audio and picture contents and 400 groups.

※2 Exif Ver 2.1 JPEG Baseline files
Picture resolution: between 160 x 120 and 6144 x 4096 pixels (Sub sampling is 4:0:0, 4:2:0, 4:2:2 or 4:4:4).
Extremely long and narrow pictures may not be displayed.

※3 Conforming to IEC62107

※4 MPEG-1 Layer 3, MPEG-2 Layer 3

※5 Windows Media Audio Ver.9.0 L3
Not compatible with Multiple Bit Rate (MBR)

Pick up

Wavelength (DVD/CD)	662/785 nm
Laser power (DVD/CD)	CLASS 1/CLASS 1M

Audio output (Disc)

Number of channels	5.1ch (FL, FR, C, SL, SR, SW)
--------------------	-------------------------------

USB SECTION

USB Port

USB Standard	USB 2.0 full speed
---------------------	--------------------

Media file format support

MP3 (*.mp3)
WMA (*.wma)
JPEG (*.jpg, *.jpeg)

USB device file system

FAT12
FAT16
FAT32

USB port power	500 mA (Max)
-----------------------	--------------

VIDEO SECTION

Video system	PAL625/50, PAL525/60, NTSC
---------------------	----------------------------

Composite video output

Output level	1 Vp-p (75 Ω)
Terminal	Scart jack (1 system)

S-video output

Y output level	1 Vp-p (75 Ω)
C output level	PAL; 0.3 Vp-p (75 Ω) NTSC; 0.286 Vp-p (75 Ω)
Terminal	Scart jack (1 system)

RGB video output

R output level	0.7 Vp-p (75 Ω)
G output level	0.7 Vp-p (75 Ω)
B output level	0.7 Vp-p (75 Ω)
Terminal	Scart jack (1 system)

SPEAKER SECTION

※ Rating with low-cut filter equipped amplifier.

Front speakers SB-HF150

Type	1 way, 1 speaker system (Bass reflex)
-------------	---------------------------------------

Speaker unit(s)

Full range	Impedance 5 Ω 6.5 cm Cone type
------------	-----------------------------------

Input power (IEC)

55 W[※] (Max)

Output sound pressure

80 dB/W (1.0 m)

Frequency range

96 Hz to 25 kHz (−16 dB)
120 Hz to 22 kHz (−10 dB)

Dimensions (W x H x D)

92 mm x 135 mm x 95.4 mm

Mass

0.6 kg



Surround speakers SB-HS151

Type	1 way, 1 speaker system (Bass reflex)
Speaker unit(s)	Impedance 5 Ω
Full range	6.5 cm Cone type
Input power (IEC)	55 W* (Max)
Output sound pressure	80 dB/W (1.0 m)
Frequency range	96 Hz to 25 kHz (–16 dB) 120 Hz to 22 kHz (–10 dB)
Dimensions (W x H x D)	92 mm x 135 mm x 95.4 mm
Mass	0.6 kg

Center speakers SB-HC150

Type	1 way, 1 speaker system (Bass reflex)
Speaker unit(s)	Impedance 5 Ω
Full range	6.5 cm Cone type
Input power (IEC)	55 W* (Max)
Output sound pressure	80 dB/W (1.0 m)
Frequency range	91 Hz to 25 kHz (–16 dB) 120 Hz to 22 kHz (–10 dB)
Dimensions (W x H x D)	135 mm x 92 mm x 95.4 mm
Mass	0.6 kg

Subwoofer SB-HW150

Type	1 way, 1 speaker system (Bass reflex)
Speaker unit(s)	Impedance 5 Ω
Woofer	12 cm Cone type
Input power (IEC)	55 W (Max)
Output sound pressure	80 dB/W (1.0 m)
Frequency range	31 Hz to 173 Hz (–16 dB) 40 Hz to 148 Hz (–10 dB)
Dimensions (W x H x D)	152 mm x 339 mm x 258 mm
Mass	3 kg

GENERAL

Power supply	AC 230 to 240 V, 50 Hz
Power consumption	
Main unit	105 W
Dimensions (W x H x D)	430 mm x 60 mm x 342 mm
Mass	
Main unit	3 kg
Operating temperature range	0 °C to +40 °C
Operating humidity range	35 % to 80 % RH (no condensation)

Power consumption in standby mode

approx. 1 W

Note

- Specifications are subject to change without notice.
Weight and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.



Maintenance

Clean this unit with a soft, dry cloth.

- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using chemically treated cloth, carefully read the instructions that came with the cloth.
- Do not use commercially available lens cleaners as they may cause malfunction. (Cleaning the lens is generally not necessary although this depends on the operating environment.)

Before moving the unit, ensure the disc tray is empty.

Failure to do so will risk severely damaging the disc and the unit.



Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Surround" are registered trademarks of DTS, Inc.

U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132; and 5,583,936.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.

■ Sales and Support Information

Customer Care Centre

- For customers within the UK: 0844 844 3852
- For customers within the Republic of Ireland: 01 289 8333
- Visit our website for product information
- E-mail: customer.care@panasonic.co.uk

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday-Thursday 9:00am-5:30pm, Friday 9:30am-5:30pm (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.panasonic.co.uk.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

Interested in purchasing an extended guarantee?

Please call 0870 240 6284 or visit our website

www.panasonic.co.uk/guarantee.

Matsushita Electric Industrial Co., Ltd.

Web Site: <http://panasonic.net>

Pursuant to at the directive 2004/108/EC, article 9 (2)

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, F.R. Germany

En

RQTX0122-B

L1107NC0