

Operating Instructions

Blu-ray Disc Home Theater Sound System

Model No. **SC-BTX77**
SC-BTX75



The illustration shows the image of the unit SC-BTX77.

Dear customer

Thank you for purchasing this product.

For optimum performance and safety, please read these instructions carefully.

Before connecting, operating or adjusting this product, please read the instructions completely. Please keep this manual for future reference.

To update the firmware of this unit, refer to page 30.



Region management information

BD-Video

This unit plays BD-Video marked with labels containing the region code **B**.

Example:



DVD-Video

This unit plays DVD-Video marked with labels containing the region number "2" or "ALL".

Example:



Model number suffix "EB" denotes UK model.

● These operating instructions are applicable to models SC-BTX77 and SC-BTX75. Unless otherwise indicated, illustrations in these operating instructions are of SC-BTX77.

● Operations in these instructions are described mainly with the remote control, but you can perform the operations on the main unit if the controls are the same.

● Some models may not be on sale in certain regions.

● Some accessories and external devices mentioned in these operating instructions that are not included with this product may not be on sale in certain regions.

Indicates features applicable to:

BTX77: SC-BTX77 only

BTX75: SC-BTX75 only

System	SC-BTX77	SC-BTX75
Main unit	SA-BTX77	SA-BTX75
Front speakers	SB-HFX77	SB-HFX75
Subwoofer	SB-HWX77	SB-HW330

Accessories

Please check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts. (Product numbers correct as of January 2010. These may be subject to change.)



☐ 1 Remote control ☐ 2 Remote control batteries ☐ 1 Video cable (K2KA2BA00001)

BTX77
(N2QAKB000073)



☐ 1 FM indoor antenna (RSAX0002)



☐ 1 Antenna plug adaptor

For the United Kingdom and Republic of Ireland (K1YZ02000013)

☐ 2 Speaker cables (Front)

(REEX1152A) with red connector (REEX1153A) with white connector

BTX75
(N2QAKB000075)



☐ 1 AC mains lead For Continental Europe (K2CQ2CA00007)



☐ 1 AC mains lead For the United Kingdom and Republic of Ireland (K2CZ3YY00005)



☐ 2 Bases **BTX77** (RYQ0781-K)



☐ 2 Screws **BTX77** (XYN5+J16FJK)



● For use with this unit only. Do not use it with other equipment. Also, do not use cords from other equipment with this unit.

For the United Kingdom and Republic of Ireland customers

■ Sales and Support Information

Customer Care Centre

- For customers within the UK: 0844 844 3852
- For customers within the Republic of Ireland: 01 289 8333
- Visit our website for product information www.panasonic.co.uk.
- E-mail: customer.care@panasonic.co.uk

Direct Sales at Panasonic UK

- For customers: 0844 844 3856
- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday-Thursday 9:00 am-5:30 pm, Friday 9:30 am-5:30 pm (Excluding public holidays).

- Or go on line through our Internet Accessory ordering application at www.pas-europe.com.

- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

CAUTION!
THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION!
● DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
● DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
● DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
● DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

WARNING:
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,
● DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.
● USE ONLY THE RECOMMENDED ACCESSORIES.
● DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

The socket outlet shall be installed near the equipment and easily accessible.
The mains plug of the power supply cord shall remain readily operable.
To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from AC receptacle.

Caution for AC Mains Lead

(For the United Kingdom and Republic of Ireland)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW. THIS PLUG IS NOT WATERPROOF—KEEP DRY.


Before use

Remove the connector cover.


How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below. Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

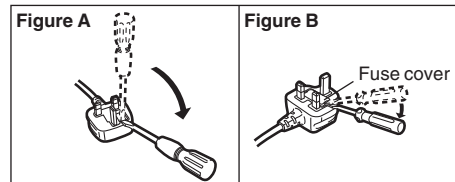

2. Replace the fuse and close or attach the fuse cover.

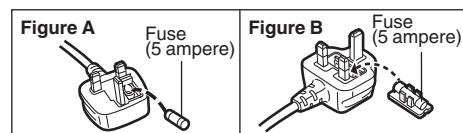

Unit and media care

Disc and card handling

Clean discs

Wipe with a damp cloth and then wipe dry.



Disc and card handling precautions

- Handle discs by the edges to avoid inadvertent scratches or fingerprints on the disc.
- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Clean any dust, water, or foreign matter from the terminals on the rear side of the card.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.

Maintenance

Clean this unit with a soft, dry cloth

- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using chemically treated cloth, carefully read the instructions that came with the cloth.

Observe the following points to ensure continued listening and viewing pleasure.

Dust and dirt may adhere to the unit's lens over time, making it impossible to play discs.

Use the lens cleaner (not included) about once every year, depending on frequency of use and the operating environment. Carefully read the lens cleaner's instructions before use.

Maintenance of the lens

- Remove dust carefully with an air blower for camera lenses (optional).
- Recommended product: Lens cleaner kit (SZZP1038C) (Available from Panasonic dealers.)
- You cannot use a CD type lens cleaner.
- Be careful not to touch the lens with your fingers.

To dispose or transfer this unit

This unit may record information of your operating procedures. If you discard this unit either by disposal or transfer, then follow the procedures

to return all the settings to the factory presets to delete the recorded information. (⇒ 44, "To return to the factory preset")

- When BD-Video is played back, the operation history may be recorded in the memory of this unit. The recorded contents differ depending on the disc.

Safety precautions

Placement

Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life. Do not place heavy items on the unit.

Voltage

Do not use high voltage power sources. This can overload the unit and cause a fire. Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used.

AC mains lead protection

Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead. Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock. Do not handle the plug with wet hands. This can cause electric shock.

Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.

Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer.

Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.

Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service centre. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.

Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.

Table of contents

Getting started

Accessories	2
Caution for AC Mains Lead	3
Unit and media care	3
Safety precautions	3
Using the remote control	5
Batteries	5
Use	5
Control reference guide (remote control)	5
Control reference guide (main unit)	6
Front and top panel	6
Side and rear panel terminals.....	6
Preparing the speakers BTX77	7
Positioning	7
Speaker connections	8
TV connections	9
Connections to a Set Top Box, etc.	10
Radio antenna connections	10
Network connection BTX77	11
AC mains lead connection	11
Operating the sliding door	12
EASY SETUP	12
Basic settings for the system.....	12
Showing START menu	13
Selecting the playback source	14
Selecting the source from the START menu	14
Selecting the source by the remote control	14
Enjoying surround sound and various sound effects	15
Enjoying surround sound effects	15
Changing the sound modes.....	15

Playback

Basic operation	16
Other operations during play	17
Adjusting speaker level during play	18
Playing video recorded on a Video Camera or Video Recorder.....	18
Enjoying BD-Live (BTX77) or BONUSVIEW in BD-Video	19
Playing secondary video (picture-in-picture) and secondary audio	19
Enjoying BD-Live discs with Internet BTX77	19
Playing DivX® videos	20
Regarding DivX VOD content.....	20
Displaying subtitles text	20
Playing still pictures	21
Useful functions during still picture play	22
Playing music	23

Radio

Listening to the Radio	24
Setting up the radio	24
Listening/confirming the preset channels	24
RDS broadcasting	24

TV

Enjoying TV, etc. with this unit's speakers	25
Adjusting the sound	25
Making settings for digital audio input	25
Linked operations with the TV (VIERA Link "HDAVI Control™")	26
What is VIERA Link "HDAVI Control"?	26
What you can do with "HDAVI Control"	26
Easy control only with VIERA remote control.....	27

Other devices

Using the iPod	28
iPod Connection	28
iPod Playback.....	29

Advanced operations

Enjoying VIERA CAST BTX77	30
Firmware updating BTX77	30
Network settings BTX77	31
Changing settings with the on-screen menu	33
On-screen menu operations	33
What you can change with the on-screen menu	33
Changing the unit's settings	35
Setup menu operations	35
Summary of settings.....	35

Optional speaker settings

Speaker installation option	39
--	-----------


Reference

Media (Disc, card and USB device) information	40
Packaged discs	40
Recorded discs.....	40
SD cards.....	41
USB device.....	41
Regarding 24p output BD-V	41
Discs that cannot be played	41
About MP3/JPEG/DivX files	42
Language code list	43
Troubleshooting guide	44
Messages	48
Frequently asked questions	50
Glossary	51
Specifications	52
Index	Back cover

Using the remote control

Batteries

- 2 Insert so the poles (+ and -) match those in the remote control.

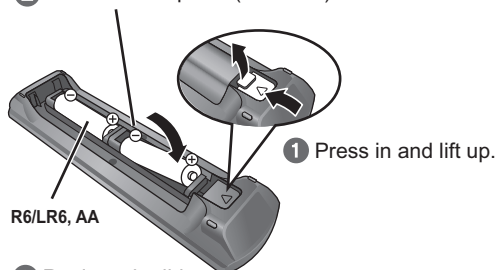

- 3 Replace the lid.
When closing the lid, insert it from the - (minus) side.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Use alkaline or manganese batteries.
- Do not mix old and new batteries.
- Do not use different types at the same time.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.


- Do not take apart or short circuit.
 - Do not attempt to recharge alkaline or manganese batteries.
 - Do not use batteries if the covering has been peeled off.
- Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire. Remove batteries if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

Use

Aim at the remote control signal sensor (⇒ 6), avoiding obstacles, at a maximum range of 7 m directly in front of the unit.


- If you cannot operate the unit or other equipment using the remote control after changing the batteries, please re-enter the codes (⇒ 47).

Remote control signal sensor

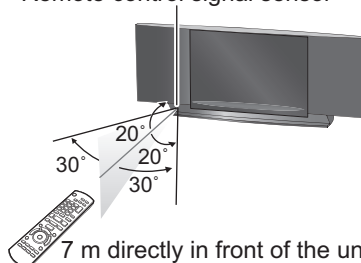

The distance and the angles are approximate.


Control reference guide (remote control)

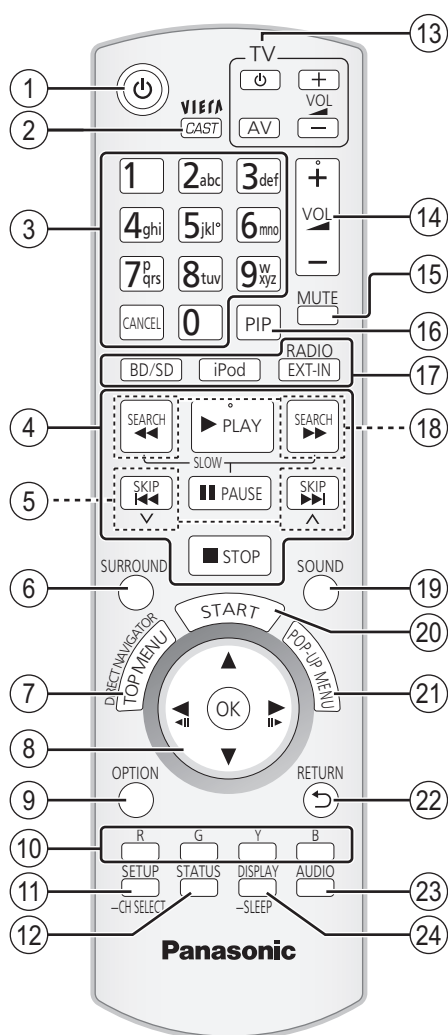


- Turn the unit on and off (⇒ 12)
- Display Home screen of VIERA CAST (⇒ 30) **BTX77**
Set the sleep timer (⇒ 18) **BTX75**
- Select title numbers, etc./
Enter numbers or characters (⇒ 17, 32)
(The character buttons may be used when operating VIERA CAST contents. ⇒ 30 **BTX77**)
[CANCEL]: Cancel
- Basic playback control buttons (⇒ 16, 17)
- Select preset radio stations (⇒ 24)
- Select surround sound effects (⇒ 15)
- Show Top menu/Direct Navigator (⇒ 16)
- [▲, ▼, ◀, ▶]: Menu selection
[OK]: Selection
[◀, ▶]: Select preset radio station (⇒ 24)
[◀] (◀◀), [▶] (▶▶): Frame-by-frame (⇒ 17)
- Show OPTION menu (⇒ 17)
- [R], [G], [Y], [B]
These buttons are used when;
 - Operating a BD-Video disc that includes Java™ applications (BD-J). For more information about operating this kind of disc, please read the instructions that came with the disc.
 - Displaying "Title View" and "Album View" screens. (Only the [R] and [G] buttons, ⇒ 21)
 - Operating contents of VIERA CAST. (⇒ 30) **BTX77**
- Show Setup menu (⇒ 35)/Select speaker channel (⇒ 18)
- Show status messages (⇒ 18)
- TV operation buttons
You can operate the TV through the unit's remote control.
[⏻]: Turn the television on and off
[AV]: Switch the input select
[+ - VOL]: Adjust the TV volume
- Adjust the volume of the main unit (⇒ 17)
- Mute the sound (⇒ 17)
- Switch on/off Secondary Video (Picture-in-picture) (⇒ 19)
- Select the source
[BD/SD]: Select disc drive or SD card drive (⇒ 14)
[iPod]: Select iPod as the source (⇒ 14, 28)
[RADIO/EXT-IN]: Select FM tuner, USB or external audio as the source (⇒ 14, 24, 25)
- Select radio stations manually (⇒ 24)
- Set the sound mode (⇒ 15)
- Show START menu (⇒ 13)
- Show Pop-up menu (⇒ 16)
- Return to previous screen
- Select audio (⇒ 17)
- Show on-screen menu (⇒ 33)/Set the sleep timer (⇒ 18) **BTX77**

Control reference guide (main unit)


Front and top panel

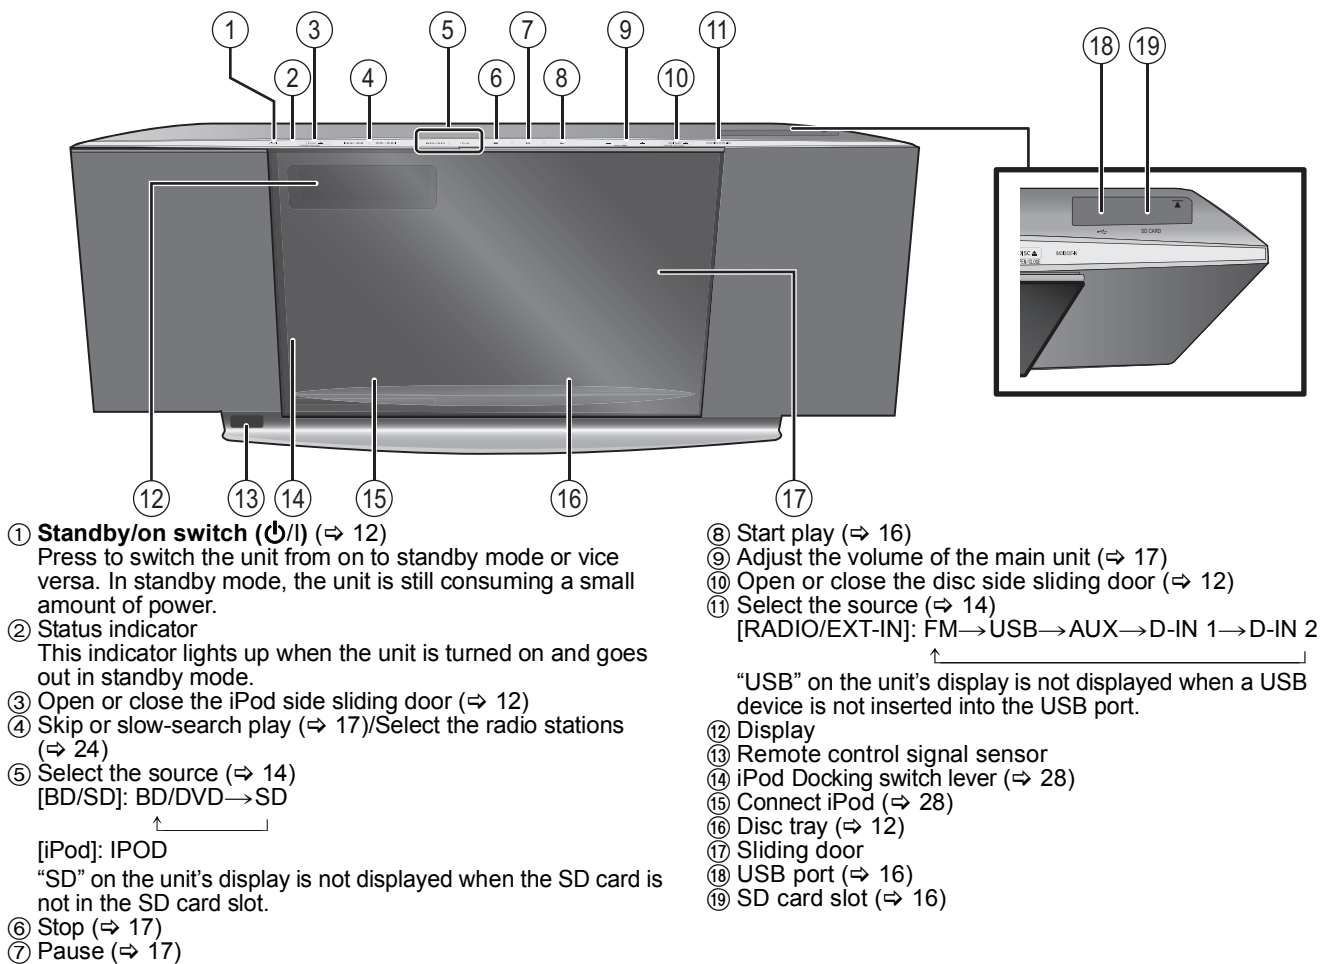

Side and rear panel terminals

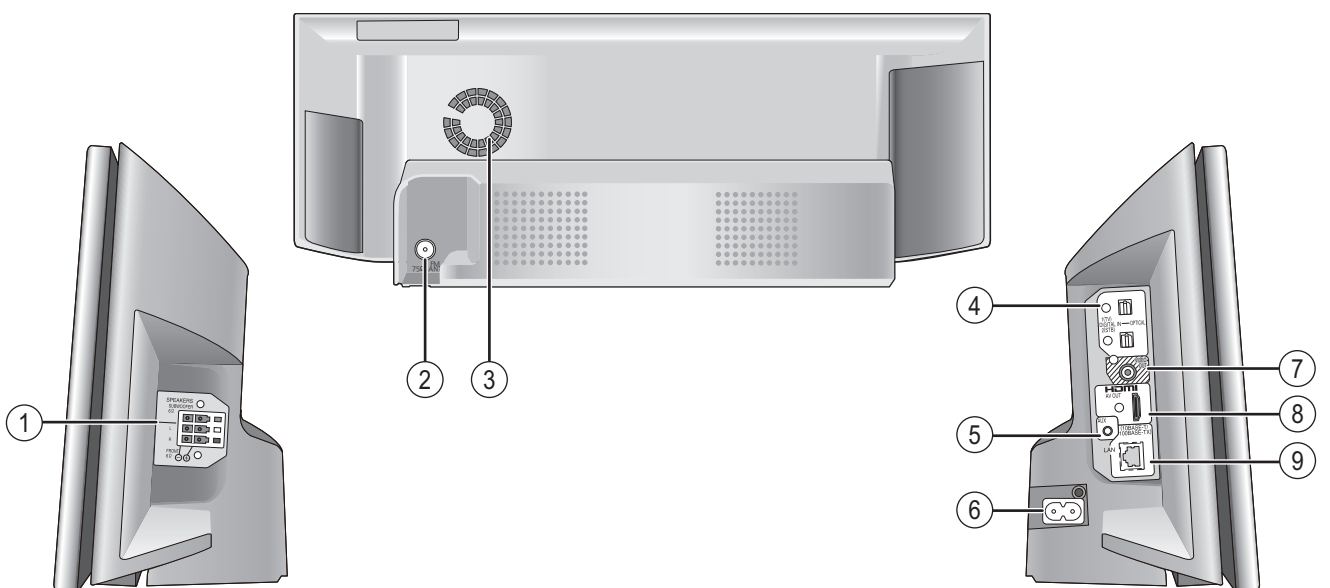

Preparing the speakers **BTX77**

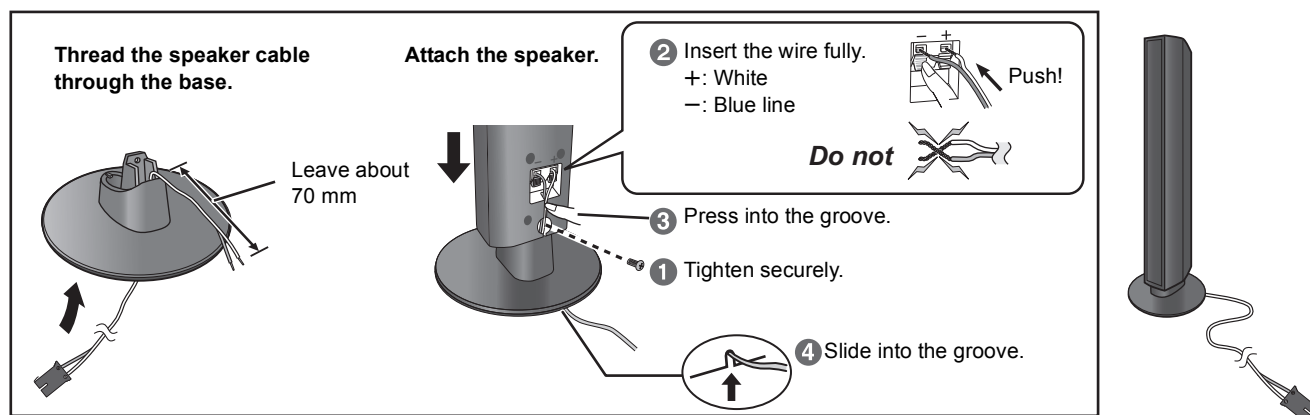

- Be careful not to cross (short-circuit) or reverse the polarity of the speaker wires as doing so may damage the speakers.
- To prevent damage or scratches, lay down a soft cloth and perform assembly on it.
- For wall mount, refer to page 39.
- Keep the screws out of reach of children to prevent swallowing.

Positioning

This unit comes equipped with a Dolby Virtual Speaker circuit installed. Using just the supplied speakers and the subwoofer, and by reproducing acoustic effects very similar to 5.1ch/7.1ch surround, you can enjoy a true “home theatre” experience even within a limited space.




NOTE

How you set up your speakers can affect the bass and the sound field.

- Place speakers on flat secure bases.
 - Placing speakers too close to floors, walls, and corners can result in excessive bass. Cover walls and windows with thick curtains.
 - For optional wall mount, refer to page 39.
- Keep your speakers at least 10 mm away from the system for proper ventilation.

Setup example

Place the front speakers at approximately the same distance from the seating position. The angles in the diagram are approximate.

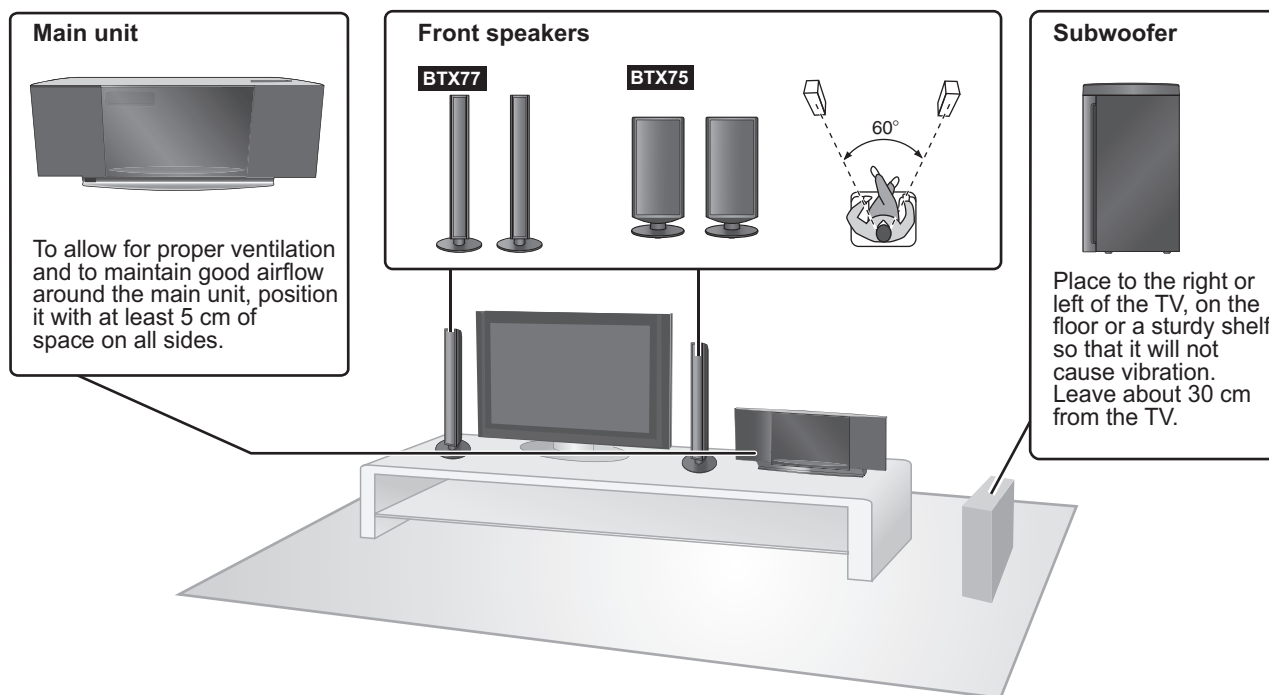

Caution


- The main unit and supplied speakers are to be used only as indicated in this setup. Failure to do so may lead to damage to the amplifier and/or the speakers, and may result in the risk of fire. Consult a qualified service person if damage has occurred or if you experience a sudden change in performance.
- Do not attempt to attach these speakers to walls using methods other than those described in this manual.

Caution

Do not touch the front netted area of the speakers. Hold by the sides.

- Be cautious when children are near.
- To avoid injury by falling or dropping the speaker, place the speaker cables with care not to stumble or hook.
- Do not hold the speaker in one hand to avoid injury by dropping the speaker when carrying.

e.g.

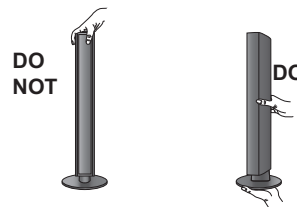

• Use only supplied speakers

Using other speakers can damage the unit, and sound quality will be negatively affected.

- These speakers do not have magnetic shielding. Do not place them near televisions, personal computers or other devices easily influenced by magnetism.
- You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.
- Reduce the volume in the following cases to avoid damage:
 - When playing distorted sound.
 - When the speakers are reverberating due to a record player, noise from FM broadcasts, or continuous signals from an oscillator, test disc, or electronic instrument.
 - When adjusting the sound quality.
 - When turning the unit on or off.

Speaker connections


Turn off all equipment before connection and read the appropriate operating instructions.

Do not connect the AC mains lead until all other connections are complete.

Connect to the terminals of the same colour.

Setup example


BTX77

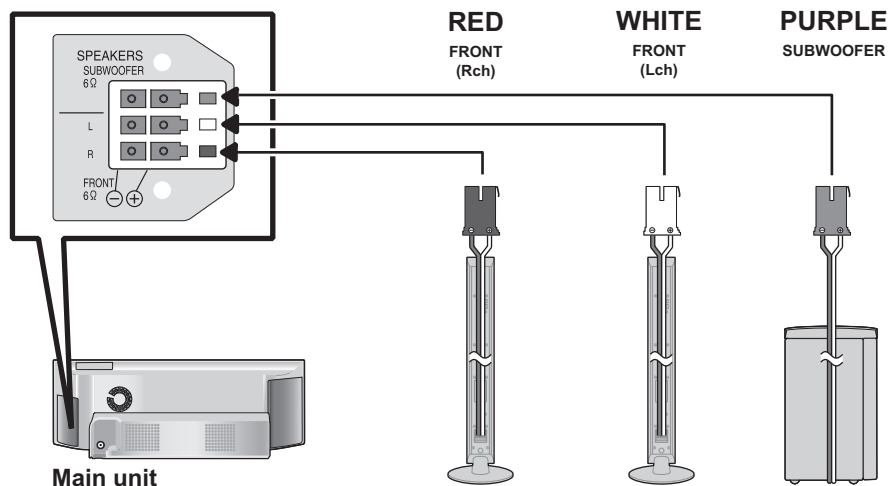

BTX75


1 Speaker cable for front speaker (L) (White)

2 Speaker cable for front speaker (R) (Red)

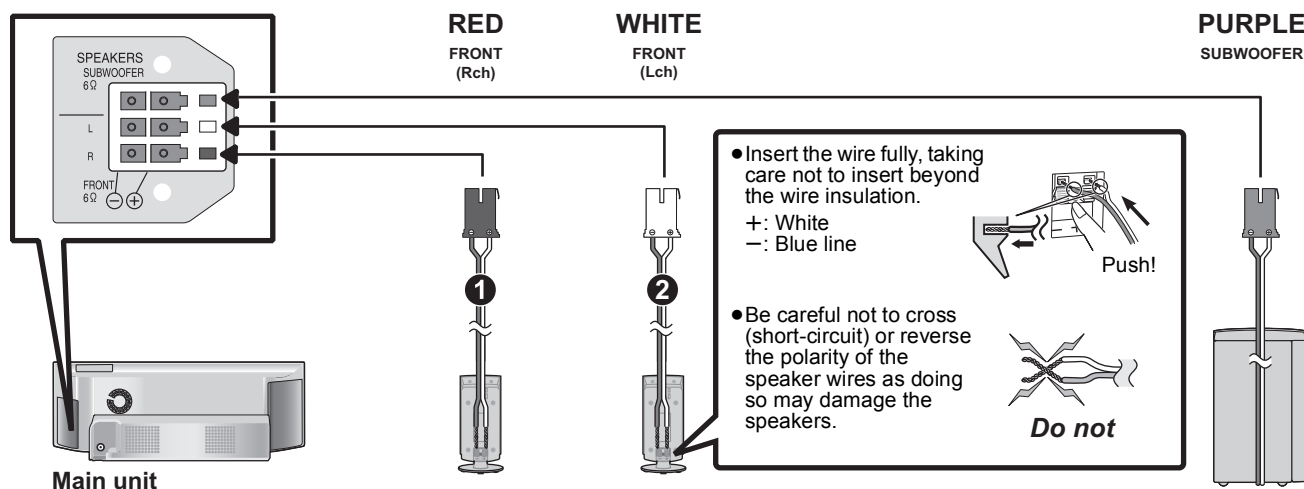

TV connections


1 Video cable

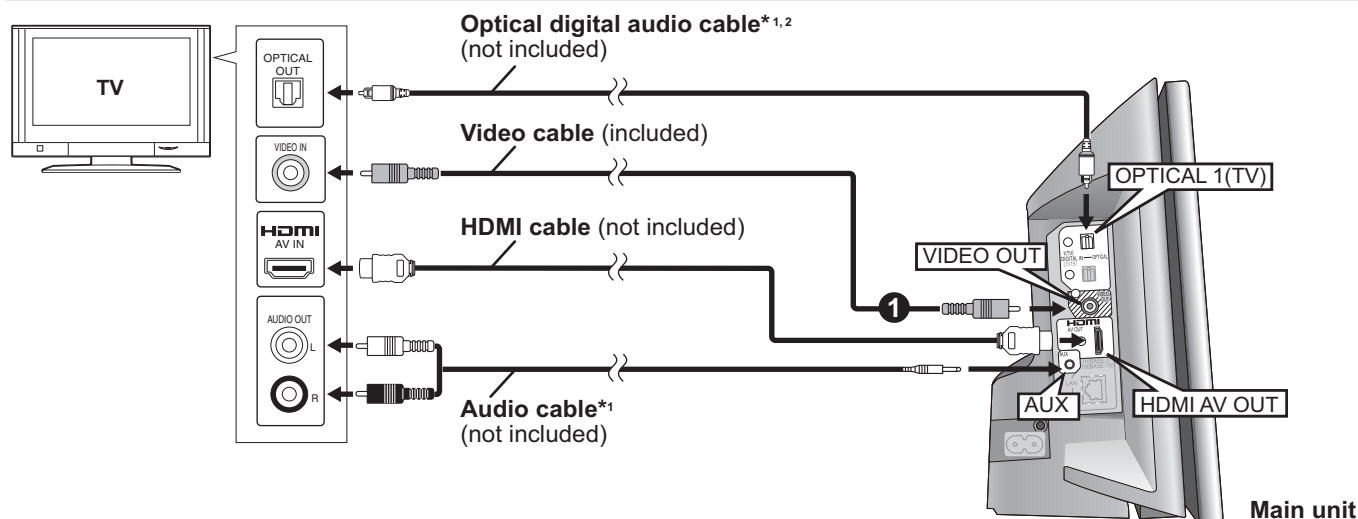

- To output the TV audio, connect the audio cable or the optical digital audio cable.
When the optical digital audio cable is connected, this unit can decode Dolby Digital audio from the TV.



If the TV does not have a VIDEO IN terminal, connect using a Scart adaptor* (Scart—VIDEO IN).
* not included

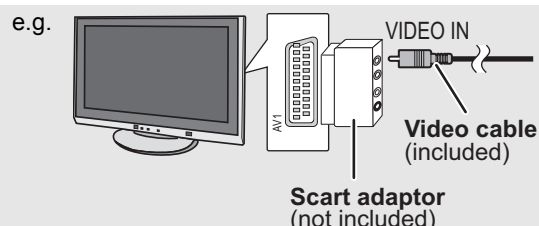

- When connecting with the video cable, set “High Clarity Sound” in the on-screen menu to “Off” (⇒ 34).
(Otherwise, the video will not be output.)

Optional connections

- For those who want to enjoy higher picture quality and have a TV equipped with an HDMI terminal.
– **Do not disconnect the video cable even if the HDMI cable is connected. Some features may not be displayed.**
- For those who have a Set Top Box (Satellite receiver, Cable box, etc.) or video cassette recorder (⇒ 10)

When connecting with an HDMI cable

- If there is more than one HDMI terminal, refer to the operating instructions for the TV to determine terminal to connect to.
- **Non-HDMI-compliant cables cannot be utilized.**
- **Please use High Speed HDMI Cables that have the HDMI logo (as shown on the cover). It is recommended that you use Panasonic's HDMI cable.**
Recommended part number:
RP-CDHS15 (1.5 m), RP-CDHS30 (3.0 m), RP-CDHS50 (5.0 m), etc.
- This unit incorporates HDMI™ (v.1.3a with Deep Colour, x.v.Colour™, High Bit rate Audio) technology. (⇒ 51)
- When outputting 1080p signal (⇒ 37, “HDMI Video Format”), please use HDMI cables 5.0 meters or less.

NECESSARY SETTINGS for HDMI connections

“HDMI Audio Output” : “Off” (⇒ 37)

- **With this connection, you can use VIERA Link “HDAVI Control” (⇒ 26).**

To enjoy TV audio from this home theatre system's speakers

*1 You can enjoy the audio from your TV through this home theatre system's speakers by connecting to the “AUX” terminal or “OPTICAL 1(TV)” terminal. (⇒ 25)

*2 This is the preferred connection for optimum sound.

This unit can decode the surround signals received from your TV. Refer to the operating instructions for the TV for the settings necessary to output its audio from the digital audio output to your home theatre system. Only Dolby Digital and PCM can be played with this connection.

– After making this connection, make settings to suit the type of audio from your digital equipment (⇒ 25).




Connections to a Set Top Box, etc.

Use the following connections when you want to output the original surround audio from your Set Top Box, cable TV, VCR, DVD recorder, etc. through this unit's speakers.

● **Do not connect through the video cassette recorder.**

Due to copy guard protection, the picture may not be displayed properly.


● **Turn off all equipment before connection.**

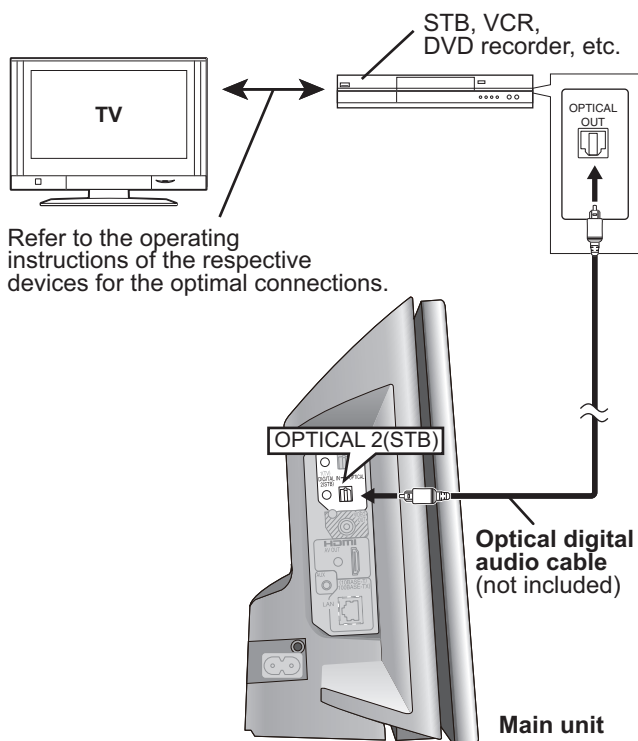

TIPS

- This unit can decode the surround signal from the Set Top Box (Satellite receiver, Cable box, etc). Press **[EXT-IN]** several times to select **"D-IN 2" (DIGITAL IN 2*)**.
* "(CABLE/SAT)" is displayed next to DIGITAL IN 2 when set for CABLE/SAT AUDIO input. (⇒ 26, Setting the TV audio for VIERA Link "HDAVI Control")
- For connections between this unit and the TV, refer to "TV connections" (⇒ 9).
- If you have various sound sources and this unit's terminals are not sufficient, connect them to the available inputs on the TV and the TV output should then be connected to the "AUX" or "OPTICAL 1(TV)" terminal of the main unit. Refer to the operating instructions of the TV, video cassette recorder, DVD recorder or Set Top Box for settings to output its audio via AUDIO OUT or OPTICAL OUT terminal of the TV.


Radio antenna connections

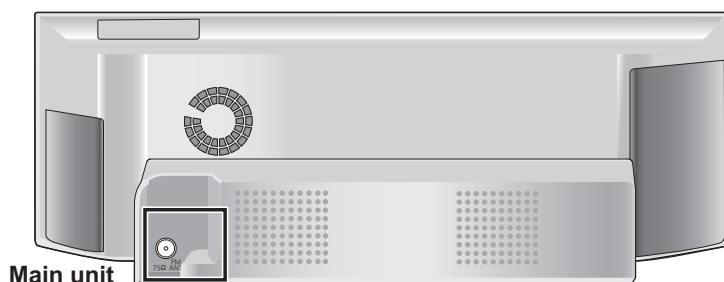

1 FM Indoor antenna




Using an indoor antenna

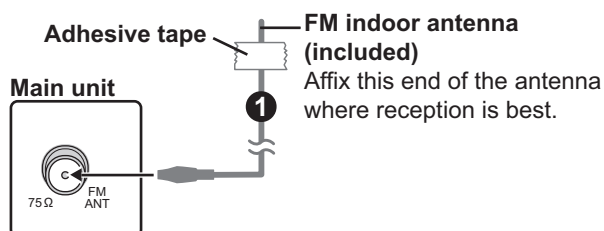

Using an outdoor antenna

Use outdoor antenna if FM radio reception is poor.


- Disconnect the antenna when the unit is not in use.
- Do not use the outdoor antenna during an electrical storm.

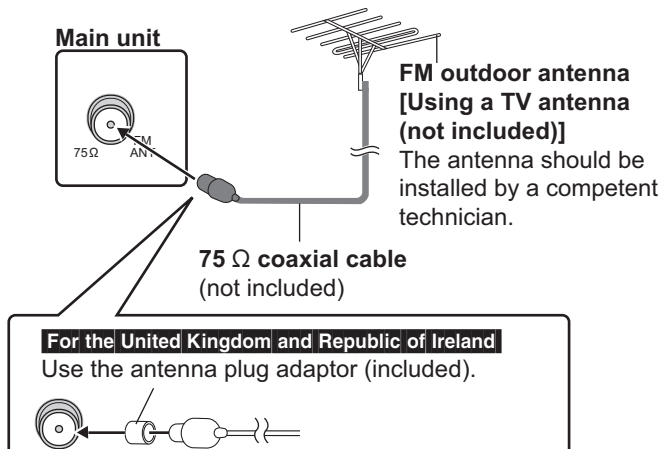

Network connection **BTX77**

The following services can be used when this unit is connected to the internet via a broadband.

- Firmware can be updated (⇒ 30)
- You can enjoy the BD-Live (⇒ 19)
- You can enjoy the VIERA CAST (⇒ 30)

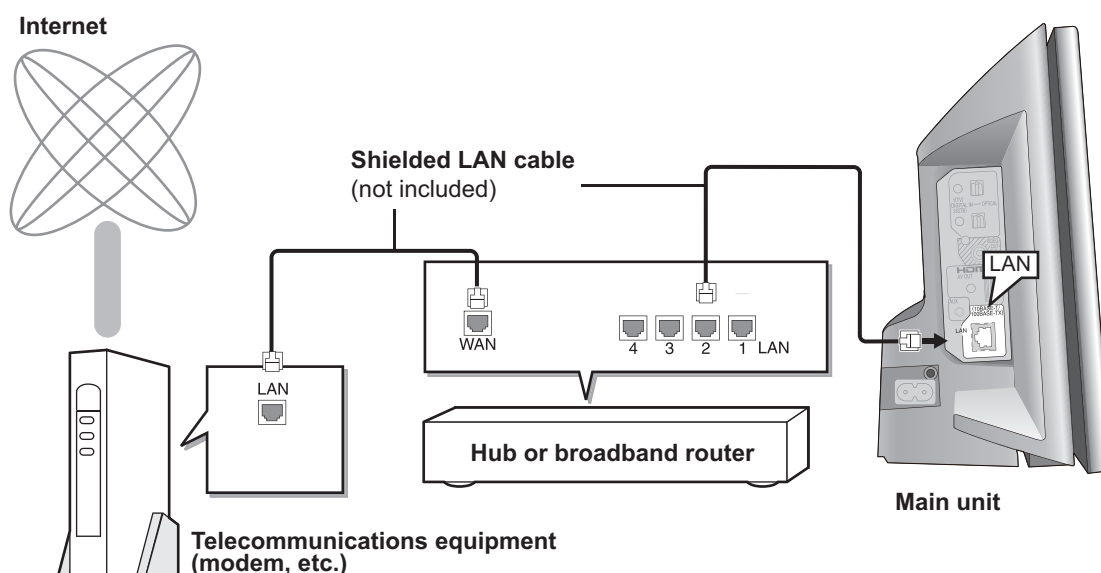

NOTE

- When your communication equipment (modem), etc. has no broadband router functions: Connect a broadband router.
- When your communication equipment (modem), etc. has broadband router functions but there are no vacant ports: Connect a hub.
- Use shielded LAN cables when connecting to peripheral devices.
- Use a router that supports 10BASE-T/100BASE-TX.
- When operating the VIERA CAST, use high-speed internet service no less than 1.5 Mbps for SD (Standard Definition) and 6 Mbps for HD (High Definition) picture quality by your local broadband company.
- If using slow Internet connection, the video may not be displayed correctly.
- After connecting to the Internet, perform necessary settings. (⇒ 31)
- Inserting any cable other than a LAN cable in the LAN terminal can damage the unit.

AC mains lead connection

1 AC mains lead

For the United Kingdom and Republic of Ireland




1 AC mains lead

For Continental Europe



For the United Kingdom and Republic of Ireland

BE SURE TO READ THE CAUTION FOR THE AC MAINS LEAD ON PAGE 3 BEFORE CONNECTION.

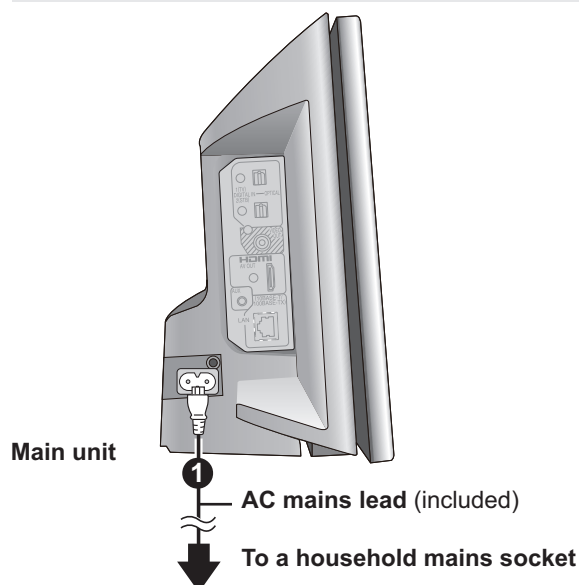

NOTE

Connect only after all other connections are complete.




TIPS

Conserving power


This unit consumes a small amount of power even when it is turned off (approx. 0.3 W). To save power when the unit is not to be used for a long time, unplug it from the household mains socket. You will need to reset some memory items after plugging in the main unit.

Operating the sliding door

Press [DISC ▲ OPEN/CLOSE] to open the sliding door to insert a disc.

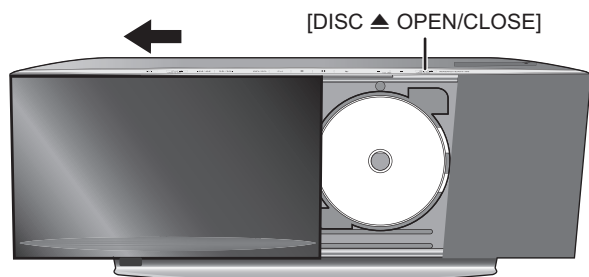

Press [iPod ▲ OPEN/CLOSE] to open the sliding door to connect an iPod.

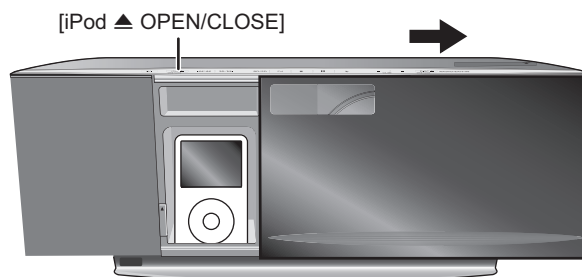

Press [DISC ▲ OPEN/CLOSE] again to close the sliding door.

- Be sure that the iPod docking switch lever is returned to its original position.
- Refer to page 16 for inserting the disc.

Press [iPod ▲ OPEN/CLOSE] again to close the sliding door.

- Refer to page 28 for connecting the iPod.



Do not open or close the sliding door by hand.

- Keep your hands away from the sliding door while it is opening or closing. Your hand or clothing's, etc. might get caught inside the door.
- Keep your fingers away from the sliding door when it is closing to avoid possible minor injuries.
- Do not leave the disc side of the sliding door open. Dirt may mount on the lens.
- Do not touch the lens or other parts of the laser pickup.
- During disc playback the sliding door will not open when [iPod ▲ OPEN/CLOSE] is pressed. (⇒ 28)
 - If [iPod ▲ OPEN/CLOSE] is pressed twice, disc playback will stop and the sliding door will open.




- The sliding door will not close and "DOCK UNLOCKED" is displayed if the iPod is not correctly connected. (⇒ 28)
- If the sliding door is opened to the left with [DISC ▲ OPEN/CLOSE], you cannot close the sliding door with [iPod ▲ OPEN/CLOSE]. If the sliding door is opened to the right with [iPod ▲ OPEN/CLOSE], you cannot close the sliding door with [DISC ▲ OPEN/CLOSE].
- The sliding door for the iPod will not close automatically when the unit is turned off.

EASY SETUP

The EASY SETUP screen assists you to make necessary settings.

When the system is switched on for the first time, the EASY SETUP screen for the basic settings is displayed automatically. Follow the on-screen prompts to make basic settings for the system.

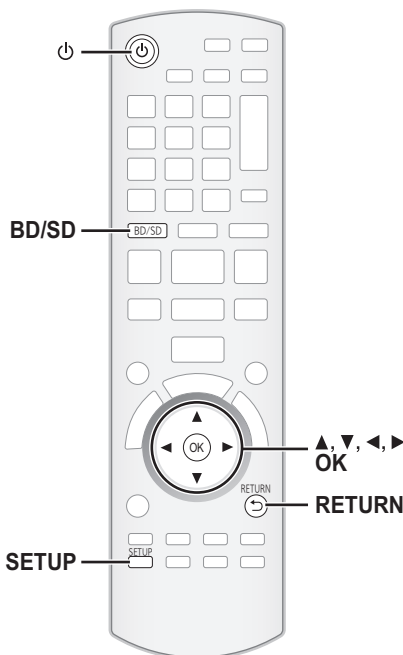

Basic settings for the system

Preparation

Turn on your TV and select the appropriate video input mode (e.g. VIDEO 1, AV 1, HDMI, etc.) to suit the connections to this unit.

- To change your TV's video input mode, refer to its operating instructions.
- This remote control can perform some basic TV operations (⇒ 5).

- 1 Press [⏻].
 - When the EASY SETUP screen appears automatically, skip step 2 to 5.
- 2 Press [BD/SD] to select "BD/DVD".
- 3 Press [SETUP].
- 4 Press [▲, ▼] to select "General" and press [OK].
- 5 Press [▲, ▼] to select "EASY SETUP" and press [OK].
 - The EASY SETUP screen appears.
- 6 Follow the on-screen instructions and make the settings with [▲, ▼, ◀, ▶] and [OK].
 - **Language** (⇒ below)
Select the language used on menu screen.
 - **TV Aspect** (⇒ below)
Select the aspect to suit your TV and preference.
 - **Speaker check**
Check if the connection to each speaker is valid.
 - **TV Audio**
Select the audio input connection from your TV.
For AUX connection (⇒ 9): Select "AUX".
For OPTICAL DIGITAL IN connection (⇒ 9): Select "DIGITAL IN 1".
This will be the TV Audio setting for VIERA Link "HDAVI Control". (⇒ 26)
- 7 To return to the previous screen, press [RETURN].
Press [OK] to finish the EASY SETUP.





- If this unit is connected to a "HDAVI Control 3 (or later)" compatible TV via HDMI cable, the menu language and TV aspect information will be retrieved via VIERA Link.
- If this unit is connected to a "HDAVI Control 2" compatible TV via HDMI cable, the menu language information will be retrieved via VIERA Link.
- Even if this unit is connected to a "HDAVI Control 2 (or later)" compatible TV via HDMI cable, the menu screen language will not be automatically retrieved if this unit does not support the language. In this case, set the language manually.
- Settings in the EASY SETUP can also be changed in the Setup menu [e.g. language, TV aspect and speaker level (⇒ 35)].

Showing START menu

Some functions of this unit can be operated from the START menu.


- ❶ Press [⏻] to turn on the unit.
- ❷ Press [START].
 - Items displayed vary according to the chosen selector and media.
- ❸ Press [▲, ▼] to select the item and press [OK].

e.g., **BD-V** (**BTX77**)

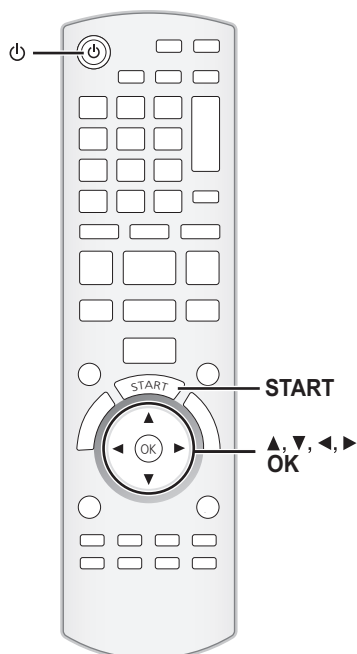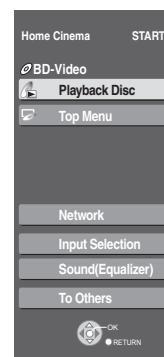

Items	Functions
Playback Disc Playback	Starts playing disc/USB device/SD card.
Top Menu	Shows a disc top menu.
Menu	Shows a media menu. To play AVCHD (⇒ 18) To play MPEG2 (⇒ 18) To play MP3, CD (⇒ 23) To play JPEG (⇒ 21) To play DivX (⇒ 20) Shows the iPod menu. (⇒ 29) To play "Music" To play "Videos" To play "Use iPod display (All)" For "Play Mode"
Network BTX77	Displays Home screen of VIERA CAST (⇒ 30)
Input Selection	Select the source. BD/DVD/CD: To play BD-Video, DVD-Video, AVCHD (⇒ 16 - 19) To play JPEG (⇒ 21) To play DivX (⇒ 20) To play MP3, CD (⇒ 23) SD card: To play AVCHD (⇒ 18) To play MPEG2 (⇒ 18) To play JPEG (⇒ 21) iPod: To play iPod contents (⇒ 29) FM: To enjoy the FM radio (⇒ 24) USB device: To play MP3 (⇒ 23) To play JPEG (⇒ 21) To play DivX (⇒ 20) AUX (TV)*1: To enjoy TV broadcasts with this unit's speakers (⇒ 25) DIGITAL IN 1 (TV)*1: To enjoy TV broadcasts with this unit's speakers (⇒ 25) DIGITAL IN 2 (CABLE/SAT)*2: To enjoy audio from other devices with this unit's speakers (⇒ 25) *1 "TV" is displayed next to items set for TV AUDIO input. (⇒ 26, Setting the TV audio for VIERA Link "HDAVI Control") *2 "(CABLE/SAT)" is displayed next to DIGITAL IN 2 when set for CABLE/SAT AUDIO input. (⇒ 26, Setting the TV audio for VIERA Link "HDAVI Control")
Sound(Equalizer)	Flat: Cancel (no effect is added). Heavy: Adds punch to rock. Clear: Clarifies higher sounds. Soft: For background music.
To Others	Setup: You can change the unit's settings using Setup menu (⇒ 35). Card Management: Formatting SD cards/Deleting data (⇒ 19) Playlists: You can play playlists created on DVD-VR. Press [▲, ▼, ◀, ▶] to select the playlist and press [OK].

e.g., **BD-V**

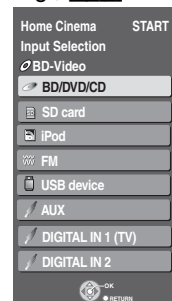

Selecting the playback source

Selecting the source from the START menu

You can select sound modes, desired source, or access playback/menus by using the START menu.

- ❶ Press [POWER] to turn on the unit.
- ❷ Press [START] to show the START menu.
- ❸ Press [▲, ▼] to select the item and then press [OK].
• To exit, press [START].
- ❹ Press [▲, ▼] to make the setting.

When "Input Selection" is selected


You can select a desired source from the menu.

- BD/DVD/CD, SD card, iPod, FM, USB device, AUX*1, DIGITAL IN 1*1, DIGITAL IN 2*2 (⇒ 13)


*1 "(TV)" is displayed next to items set for TV AUDIO input. (⇒ 26, Setting the TV audio for VIERA Link "HDAVI Control")

*2 "(CABLE/SAT)" is displayed next to DIGITAL IN 2 when set for CABLE/SAT AUDIO input. (⇒ 26, Setting the TV audio for VIERA Link "HDAVI Control")

When a disc is loaded, an USB device is connected or a SD card is inserted, you can also access playback or menus from the START menu.

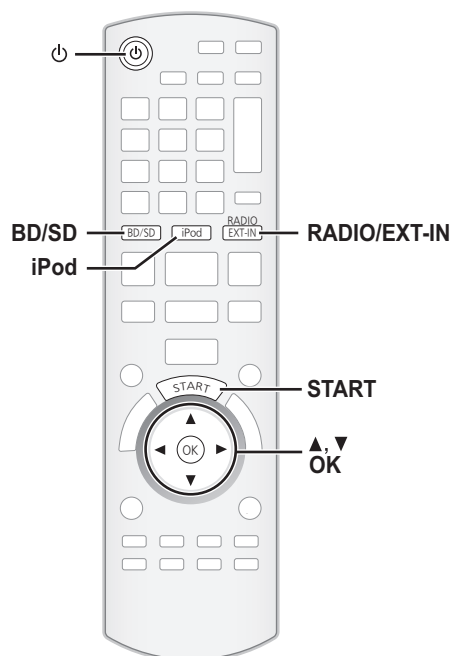


e.g., **BD-V (BTX77)**

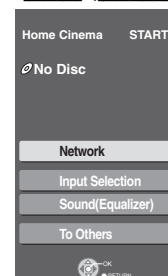

e.g., **BD-V (BTX77)**

Playback/menu access

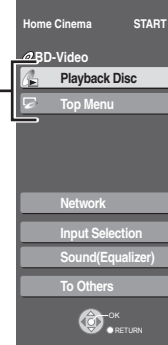

Selecting the source by the remote control

Press	To select
[BD/SD]	BD/DVD/CD or SD (⇒ 16)
[iPod]	IPOD (iPod) (⇒ 28)
[RADIO/EXT-IN]	Each time you press the button: FM (⇒ 24) USB (⇒ 16) AUX*1: For audio input through the AUX terminal. (⇒ 25) D-IN1 (DIGITAL IN 1*1): (⇒ 25) D-IN2 (DIGITAL IN 2*2): (⇒ 25) *1 "(TV)" is displayed next to items set for TV AUDIO input. (⇒ 26, Setting the TV audio for VIERA Link "HDAVI Control") *2 "(CABLE/SAT)" is displayed next to DIGITAL IN 2 when set for CABLE/SAT AUDIO input. (⇒ 26, Setting the TV audio for VIERA Link "HDAVI Control")

Press [BD/SD], [iPod], [RADIO/EXT-IN] on the main unit to select source from the main unit.




NOTE

- Confirm the audio connection to the AUX or OPTICAL DIGITAL IN terminals on the main unit when you select the corresponding sources (⇒ 9 to 10).
- Reduce the volume on the TV to its minimum, and then adjust the volume of the main unit.

Enjoying surround sound and various sound effects

- The following sound effects/modes may not be available or have no effect with some sources.
- You may experience a reduction in sound quality when these sound effects/modes are used with some sources. If this occurs, turn the sound effects/modes off.

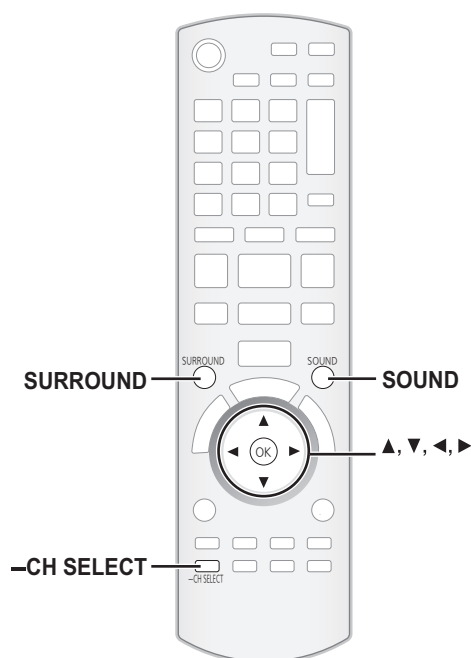

Enjoying surround sound effects

■ When only the supplied speakers are connected.

- Underlined items are the factory presets.

Available surround sound effects for 2.1 ch settings	
Effect	Setting
<u>7.1CH VS</u> *1, 2, 3:	You can enjoy 5.1/7.1-channel surround-like effect using 2.1-channel speakers. This function is effective only when playing 4.1 ch sources or above.
2CH STEREO:	You can play any source in stereo without the surround sound effect.

Press [SURROUND] several times to select the effect.

- You can also press [SURROUND] and then [▲, ▼] to select the mode.
- The selected effect will only be displayed on the main unit.



NOTE

- *1 7.1CH VS is not available when the audio source currently playing is 2.1 ch, 3.1 ch.
- *2 The 7.1-channel surround-like effect will only function when playing 6 or more channel sources.
- *3 The effects do not work when audio is output from the HDMI AV OUT terminal.
- "NOT CONDITIONAL" is displayed on the main unit if the setting is not active.

Changing the sound modes

Available sound modes	
Mode	Setting
EQ: (Equalizer)	You can select sound quality settings. – FLAT(Flat): Cancel (no effect is added). – HEAVY(Heavy): Adds punch to rock. – CLEAR(Clear): Clarifies higher sounds. – SOFT(Soft): For background music.
SUB W: (Subwoofer level)	This unit will change the settings for the amount of bass depending on the source. However you can also adjust the amount of bass for the source being played. – 1 (Weakest effect) – 2 – 3 – 4 (Strongest effect) • The setting you make is retained, and recalled every time you play the same type of source.
W.S.: (Whisper-mode Surround)	You can enhance the surround effect for low volume sound. (Convenient for late night viewing.) – ON – OFF

- 1 Press [SOUND] several times to select the mode.
 - You can also press [SOUND] and then [▲, ▼] to select the mode.
 - The selected effect will only be displayed on the main unit.
- 2 While the selected mode is displayed Press [◀, ▶] and select the desired setting.

Basic operation


Instructions for operations are generally described using the remote control in these operating instructions.

Preparation

Turn on the television and select the appropriate video input on the television.

Inserting or removing a USB device

- 1) Push ▽ to open the SD card/USB door.
- 2) Insert the USB device into the USB port.

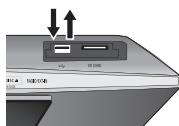

To remove the USB device, complete all USB device-related operations and pull the USB device straight out.

- Before inserting any USB device to this unit, ensure that the data stored therein has been backed up.
- Check the orientation of the USB connector and insert it straight in.
- Some USB devices inserted into this unit may cause this unit to stop operating. Such USB devices cannot be used on this unit.

About the use of USB device

Since the physical size of USB device can vary, please consider its width when connecting any USB device to this unit.

- If the USB device does not fit, we recommend using a USB extension cable (not included)
 - When connecting a USB device using a USB extension cable make sure not to tangle the cable round the SD card/USB door.
- The SD card/USB door may get damaged.

Inserting or removing an SD card


- 1) Push ▽ to open the SD card/USB door.
- 2) Insert the SD card into the SD card slot.



Insert the card with the cut-off corner on the left.

- Press on the centre of the card until it clicks into place.

To remove the card, press on the centre of the card and pull it straight out.

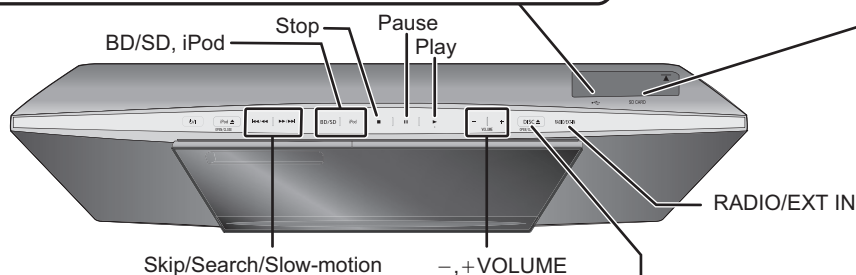


Inserting or removing a disc

- 1) Press [DISC ▲ OPEN/CLOSE] to open the sliding door.
- 2) Place the disc onto the spindle in the centre and then push the disc down until it clicks into place.

- When inserting or removing a disc, tilt the disc so as not to touch the sliding door.

- Press [DISC ▲ OPEN/CLOSE] again to close the sliding door.
- To remove the disc, while pressing down on the spindle, grasp the edge of the disc and gently lift it out.
- DVD-RAM: Remove discs from their cartridges before use.
- Insert double-sided discs so the label for the side you want to play is facing up.

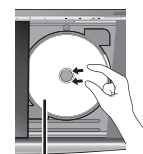

Label facing up

1 Press [⏻] to turn on the unit.

2 Insert the media (⇒ above).

Play starts.

- If play does not start, press [▶ PLAY].
- When [▶ PLAY] is pressed with the sliding door open to either side, the sliding door will close. If a disc is inserted, playback will start.

- If the media with data in different file formats is inserted, the file selection menu is displayed. Press [▲, ▼] to select the desired file format and press [OK].
- If the menu is displayed, press [▲, ▼, ◀, ▶] to select the item and press [OK].
- If the screen prompting you to use the colour buttons appears, continue to operate with the colour buttons on the remote control.



NOTE

- Disc playback will stop and the sliding door will open if [iPod ▲ OPEN/CLOSE] is pressed twice during disc playback. – The resume play function may operate with some discs.
- Be sure to press [DISC ▲ OPEN/CLOSE] to open and close the sliding door. Forcing the sliding door open or close, will damage the unit.
- Keep your fingers away from the sliding door when it is moving to avoid minor injuries.
- Signal from PAL discs is output as PAL. Signal from NTSC discs is output as "NTSC" or "PAL60". You can select "NTSC" or "PAL60" in "NTSC Contents Output" for NTSC discs. (⇒ 35)
- DISCS CONTINUE TO ROTATE WHILE MENUS ARE DISPLAYED. Press [■ STOP] when you finish to preserve the unit's motor and your television screen.
- If a media is inserted while the unit is stopped, the drive switches automatically depending on the inserted media.
- The producers of the disc can control how discs are played. So you may not always be able to control play as described in these operating instructions. Read the disc's instructions carefully.
- When playing a set of two or more BD-Video discs, the menu screen may continue to display even if the disc has been ejected.



TIPS

To display menus

BD-V AVCHD DVD-VR DVD-V DivX


Press [TOP MENU/DIRECT NAVIGATOR].

To show Pop-up menu **BD-V**

The Pop-up menu is a special feature available with some BD-Video discs. This menu may vary with discs. For the operating method, refer to the instructions for the disc.


- 1) Press [POP-UP MENU].
 - 2) Press [▲, ▼, ◀, ▶] to select the item and press [OK].
- Pop-up menu also appears by pressing [OPTION] and selecting "Pop-up Menu".
 - Press [POP-UP MENU] to exit the screen.
 - It may take time to read BD-Video discs that include BD-J (⇒ 51).

■ To adjust the volume.

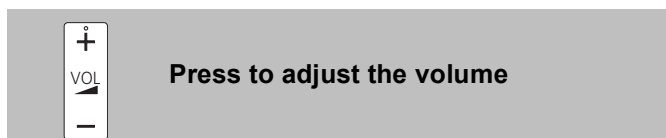

It is also possible to adjust the volume with [– + VOLUME] on the main unit.

■ To mute the sound.

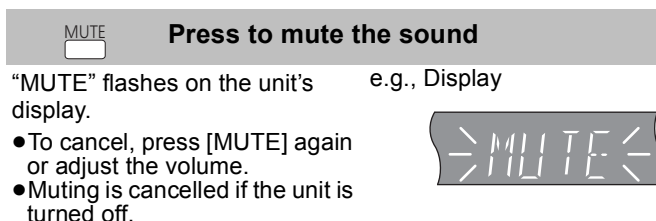

- To cancel, press [MUTE] again or adjust the volume.
- Muting is cancelled if the unit is turned off.

Other operations during play (These functions may not work depending on the media.)



The stopped position is memorized.

Resume play function

Press [▶ PLAY] to restart from this position.

- The position is cleared if the sliding door is opened or you press [■ STOP] several times to display “STOP” on unit’s display.
- **BD-V**: On BD-Video discs including BD-J (⇒ 51), the resume play function does not work.
- **CD** **MP3** **DivX** **MPEG2**: The position is cleared if the unit is turned off.



Press [⏸ PAUSE] again or [▶ PLAY] to restart play.



The speed increases up to 5 steps.

- Press [▶ PLAY] to revert to normal playback speed.
- For some discs, the speed may not change.

Search

While playing, press [SEARCH ◀◀] or [SEARCH ▶▶].

- **BD-V** **AVCHD** **DVD-VR** **DVD-V**: Audio is heard during first level of forward search.
- **DivX** **MPEG2**: Audio is not heard during all levels of search.
- **CD** **MP3**: The speed is fixed to a single step.

Slow-motion


While paused, press [SEARCH ◀◀] or [SEARCH ▶▶].

- **BD-V** **AVCHD**: Forward direction [SEARCH ▶▶] only.
- **DVD-VR**: If continued for approx. 5 minutes, slow-motion play pauses automatically.



Skip to the title, chapter or track you want to play.

- Each press increases the number of skips.
- **DivX**: Backward direction [SKIP ◀◀] only.

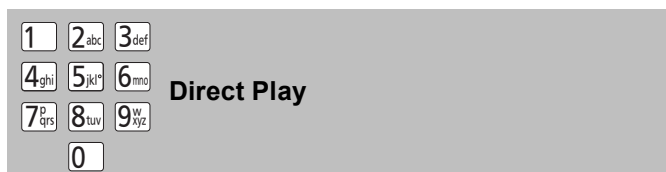

During playback, you can access specific recordings or scenes through direct entry of the numbered buttons. Play starts from the selected title or chapter.

BD-V **AVCHD** e.g., 5: [0] ⇒ [0] ⇒ [5]
15: [0] ⇒ [1] ⇒ [5]

DVD-V e.g., 5: [0] ⇒ [5]
15: [1] ⇒ [5]

- While stopped (the image on the right is displayed on the screen), the title is designated. While playing, the chapter is designated.



While paused, press [◀] (◀◀) or [▶] (▶▶). Each press shows the next frame.

- Press and hold to change in succession forward or backward.
- Press [▶ PLAY] to revert to normal playback speed.
- **BD-V** **AVCHD**: Forward direction [▶] (▶▶) only.



BD-V **AVCHD** **DVD-V**

e.g. **DVD-V**




English is selected.

You can change the audio channel number each time you press the button. This allows you to change the soundtrack language (⇒ 33, Soundtrack), etc.

- **BD-V** When “BD-Video Secondary Audio” (⇒ 36) is set to “On”, Dolby TrueHD, Dolby Digital Plus, DTS-HD Master Audio and DTS-HD High Resolution Audio are output as Dolby Digital or DTS Digital Surround regardless of this setting.

DVD-VR **DivX** **MPEG2**


AudioLR → AudioL → Audio R

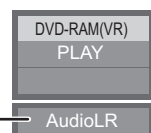

Chapter playback

DVD-VR

- 1 Insert a disc (⇒ 16).
- 2 While “Title View” screen is displayed Press [▲, ▼] to select the title and press [OPTION].

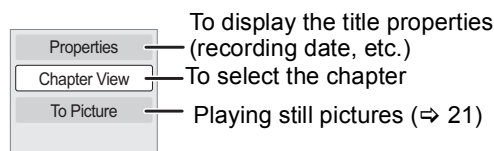

- 3 Press [▲, ▼] to select “Chapter View” and press [OK].
- 4 Press [◀, ▶] to select the chapter and press [OK].


Basic operation

STATUS

Status messages

The status messages give you information about what is currently being played. Each time you press [STATUS], the information displayed will change.

e.g. **BD-V** Type of disc Play status

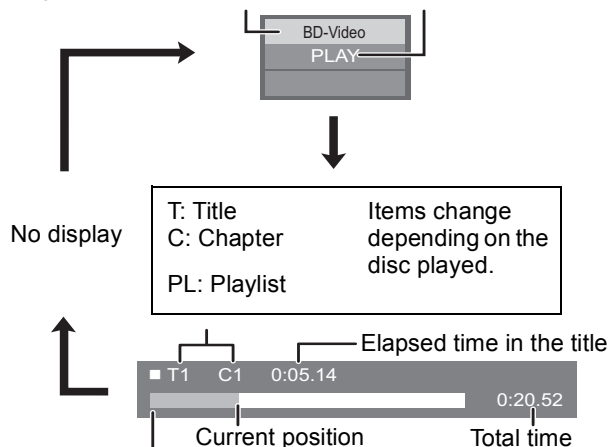

Depending on the kind of disc or the playback status, this display may not appear.

Screen Aspect

When black bars are shown at the top, bottom, left, and right sides of the screen, you can enlarge the image to fill the screen.

- Press [OPTION].
- Press [▲, ▼] to select "Screen Aspect" and press [OK].
- Press [◀, ▶] to select "Side cut" or "Zoom" and press [OK].

Normal: Normal output

Side cut: The black bars on the right and left sides of the 16:9 image disappear and the image is enlarged. Please note that the right and left sides of the image are cut off when the black bar is not displayed.

Zoom: The black bars on the top and bottom sides of the 4:3 image disappear and the image is enlarged. Please note that the top and bottom sides of the image are cut off when the black bar is not displayed.

- **BD-V DVD-V**: "Side cut" does not have any effect.
- When "TV Aspect" (⇒ 37) is set to "4:3" or "4:3 Letterbox", the "Zoom" effect is disabled.

Setting the sleep timer

- BTX77** Press and hold [–SLEEP] for 3 seconds.
BTX75 Press [SLEEP].
- While "SLEEP **" is displayed,
BTX77 Press [–SLEEP] several times to select the time (in minutes).
BTX75 Press [SLEEP] several times to select the time (in minutes).
SLEEP 30 → SLEEP 60 → SLEEP 90 → SLEEP 120 → OFF

e.g., Display



To confirm the remaining time

- BTX77** Press and hold [–SLEEP] for 3 seconds.
- BTX75** Press [SLEEP].

- The sleep timer cannot be set while the Setup menu is displayed.
- The sleep timer will be cancelled in the following cases.
 - When the sleep timer is set to "OFF".
 - When this unit is turned off from the remote control, main unit or via the VIERA Link.

Adjusting speaker level during play

- Press and hold [–CH SELECT] for 3 seconds to activate the speaker setting mode.
- Press [–CH SELECT] several times to select the speaker.
Each time you press the button:
L R ↔ SW
L R: Front speaker (left and right)
SW: Subwoofer

Adjusting the balance of the front speakers

(When "L R" is selected)

- Press [◀, ▶] to adjust the balance of the front speakers.

Adjusting the speaker level of the subwoofer

When "SW" is selected in step ②.

- Press [▲] (increase) or [▼] (decrease) to adjust the speaker level of the subwoofer.
–6 dB to +6 dB


Playing video recorded on a Video Camera or Video Recorder

AVCHD MPEG2

It is possible to playback the High Definition (AVCHD format) video recorded on a Panasonic High definition Video Camera on a DVD-RAM/R/RW/R DL/+R/+RW/+R DL, or SD card and Standard Definition (MPEG2 format) Video recorded on the Panasonic SD Video Camera on a SD card.

- Insert a disc or SD card. (⇒ 16)
 - "Title View" or "Video (MPEG-2)" screen is displayed.
 - If a media containing data in different file formats is inserted, the file selection menu may be displayed. Press [▲, ▼] to select "Play Video (AVCHD)" or "Play Video (MPEG-2)" and press [OK].

e.g. **SD**

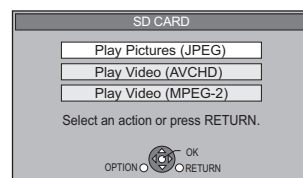

- Press [▲, ▼, ◀, ▶] to select the title and press [OK].



- It may pause for a few seconds between images when editing such as partial deletion is performed.
- High definition video (transfer rate of 18 Mbps or faster) cannot be played back correctly if it was recorded on a DVD compatible to double speed or slower.



To return to the previous screen

Press [RETURN].

To exit the screen

Press [TOP MENU/DIRECT NAVIGATOR].

To switch from other menus to AVCHD or MPEG2 menu

(If the media contains data in different file formats)

- Press [START].
- Press [▲, ▼] to select "Menu" and press [OK].
- Press [▲, ▼] to select "Play Video (AVCHD)" or "Play Video (MPEG-2)" and press [OK].

Enjoying BD-Live (BTX77) or BONUSVIEW in BD-Video

BD-V

What is BONUSVIEW?

BONUSVIEW allows you to enjoy functions such as picture-in-picture or secondary audio etc., with BD-Video supporting BD-ROM Profile 1 version 1.1/ Final Standard Profile.

What is BD-Live? BTX77

In addition to the BONUSVIEW function, BD-Video supporting BD-ROM Profile 2 that has a network extension function allows you to enjoy more functions such as subtitles, exclusive images and online games by connecting this unit to the Internet. In order to use the Internet feature, you must have this unit connected to a broadband network (⇒ 11).

- These discs may not be on sale in certain regions.
- The usable functions and the operating method may vary with each disc, please refer to the instructions on the disc and/or visit their website.

Playing secondary video (picture-in-picture) and secondary audio

Secondary video can be played from a disc compatible with the picture-in-picture function.

For the playback method, refer to the instructions for the disc.

To turn on/off secondary video


Press [PIP].

Secondary video is played.

- Press the button to turn it ON and OFF.

To turn on/off secondary audio

Set “Soundtrack” in “Secondary Video” to “On” or “Off”. (⇒ 33, “Signal Type”)

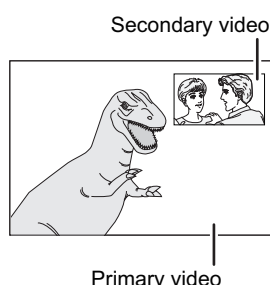

NOTE

- Discs may not always be played back according to the settings on this unit, as certain playback formats are prioritized on certain discs.
- Only the primary video is played during search/slow-motion or frame-by-frame.
- When “BD-Video Secondary Audio” in “Digital Audio Output” is set to “Off”, secondary audio will not be played. Please check that “BD-Video Secondary Audio” is set to “On” (⇒ 36).
- When the secondary video is turned off, the secondary audio will not be played.

Enjoying BD-Live discs with Internet BTX77

Many BD-Live compatible discs require content to be downloaded onto an SD card (⇒ 51, Local storage) in order to access the available BD-Live features.

- An SD card with 1 GB or more of free space (SD Speed Class Rating 2 or higher) needs to be inserted prior to inserting the BD-Live compatible disc.

Some BD-Live content available on the Blu-ray discs may require an Internet account to be created in order to access the BD-Live content. Follow the screen display or instruction manual of the disc for information on acquiring an account.

Preparation

- Connect to the network. (⇒ 11)

① Insert an SD card (⇒ 16).

- If the SD card menu screen is displayed, press [BD/SD] to select “BD/DVD”.

② Insert the disc (⇒ 16).

- For operation method, refer to the instructions on the disc.

To use the above functions, it is recommended that you format the card on this unit.

Format the card using the following procedures.


Formatting SD cards/Deleting data BTX77 BTX75

It is impossible to restore data after formatting the card or erasing the data.

Once a card is formatted, all data including those recorded on the PC is erased as well, even if the data were protected with other equipment.

Confirm whether the card can be formatted.

- 1) Insert an SD card (⇒ 16).
- 2) Press [START].
- 3) Press [▲, ▼] to select “To Others” and press [OK].
- 4) Press [▲, ▼] to select “Card Management” and press [OK].
- 5) Press [▲, ▼] to select “BD-Video Data Erase” or “Format SD Card” and press [OK].
- 6) Press [◀, ▶] to select “Yes” and press [OK].
- 7) Press [◀, ▶] to select “Start” and press [OK].

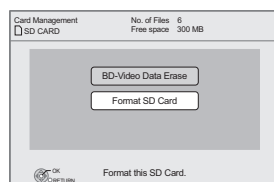

NOTE

- While using this feature, do not remove the SD card. Doing so will cause playback to stop.
- A message may be displayed when SD card doesn't have enough storage capacity for BD-Live content. Please make space available on the current SD card, or insert another SD card.
- For details about usable cards, refer to “Media (Disc, card and USB device) information” (⇒ 40)
- The unit must be connected to the Internet and set up (⇒ 31) to use the BD-Live functions. “BD-Live Internet Access” may need to be changed for certain discs (⇒ 35).
- When discs supporting BD-Live are played back, the player or disc IDs may be sent to the content provider via the Internet. You can restrict Internet access (⇒ 35, “BD-Live Internet Access”).
- The unit is connected to the Internet when BD-Live functions are used, generating communication charges.
- The playback may be paused depending on the communication environment. Some functions may be disabled to prevent skipping to sections that have not been downloaded, etc.

Playing DivX® videos

DivX

ABOUT DIVX VIDEO:

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.



You can play DVD-R/R DL, CD-R/RW discs and USB device which contain DivX video contents that have been recorded on a personal computer. (About structure of folders ⇒ 43, "Structure of folders that can play back on this unit")

●Because DivX format can use many different codecs, there is no guarantee that all DivX files will play. (⇒ 42, "About MP3/JPEG/DivX files")

1 Insert a disc or a USB device. (⇒ 16)

- If the disc containing data in different file formats is inserted, the file selection menu may be displayed. Press [▲, ▼] to select "Play Video (DivX)" and press [OK].

e.g., Display

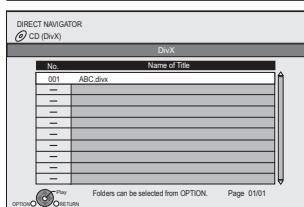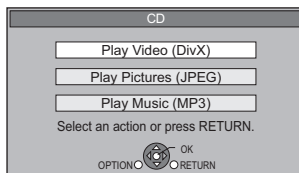

2 Press [▲, ▼] to select the title and press [OK].

Play starts on the selected title.



- The picture sizes set for recording may prevent the unit from showing pictures in the proper aspect. You may be able to adjust the aspect through the TV.
- Successive play is not possible.



- You can use search and skip functions. (⇒ 17)
- Press [SKIP ◀◀, SKIP ▶▶] to show other pages.

DVD-R/R DL, CD-R/RW, USB device

To switch from other menus to DivX menu


(If the media contains data in different file formats)

- 1) Press [START].
- 2) Press [▲, ▼] to select "Menu" and press [OK].
- 3) Press [▲, ▼] to select "Play Video (DivX)" and press [OK].

Playing a title in another folder

- ① While the "DIRECT NAVIGATOR" is displayed Press [OPTION], press [▲, ▼] to select "Folder" and press [OK].

e.g.,

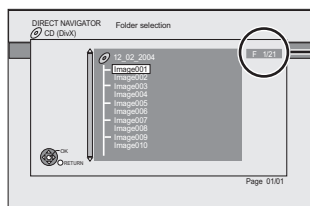

Selected folder No. /Total folders
If the folder has no title, "—" is displayed as folder number.



- You cannot select folders that contain no compatible files.



To return to the previous screen
Press [RETURN].

- ② Press [▲, ▼] to select a folder and press [OK].
The "DIRECT NAVIGATOR" for the folder appears.

Regarding DivX VOD content

ABOUT DIVX VIDEO-ON-DEMAND:


This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content.

To generate the registration code, locate the DivX VOD section in the device setup menu.

Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Display the unit's registration code.

(⇒ 38, "DivX Registration" in "General")

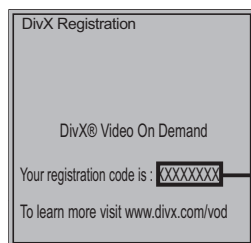

8 alphanumeric characters

- After playing DivX VOD content for the first time, another registration code is then displayed in "DivX Registration". Do not use this registration code to purchase DivX VOD content. If you use this code to purchase DivX VOD content, and then play the content on this unit, you will no longer be able to play any content that you purchased using the previous code.
- If you purchase DivX VOD content using a registration code different from this unit's code, you will not be able to play this content. ("Authorisation Error." is displayed.)

Regarding DivX VOD content that can only be played a set number of times

Some DivX VOD content can only be played a set number of times. When you play this content, the remaining number of plays is displayed. You cannot play this content when the number of remaining plays is zero. ("Rental Expired." is displayed.)

When playing this content

- The remaining number of plays decreases each time a program is played. However, when playing from the point where play was previously stopped, the remaining number of plays does not decrease due to the resume play function.

Displaying subtitles text

You can display subtitles text onto the DivX video disc on this unit. This function has no relation to the subtitles specified in DivX standard specifications and has no clear standard. The operation might be different or it may not operate properly depending on the way the file was made or the state of this unit (playing, stopped, etc.).

- ① While playing, press [DISPLAY].
- ② Press [▲, ▼] to select "Disc" and press [▶].
- ③ Press [▲, ▼] to select "Subtitle" and press [▶].
- ④ Press [▲, ▼] to select "On" and press [▶].
- ⑤ Press [▲, ▼] to select "Text".

- DivX video files that do not display "Text" do not contain subtitles text.
Subtitles text cannot be displayed.

- If the subtitles text are not displayed correctly, try changing the language settings. (⇒ 35)

To exit the screen


Press [DISPLAY].

Playing still pictures

JPEG

Playback of the BD-RE, DVD-RAM/R/R DL or CD-R/RW with still pictures recorded. This unit can also play still pictures recorded on the SD card or USB memory. In addition, you can also connect Panasonic digital camera by USB connection.
(About structure of folders ⇨ 43, "Structure of folders that can play back on this unit")

Connecting a USB device

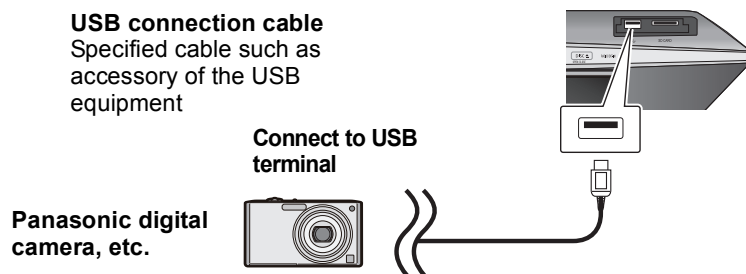

- Setup screen may be displayed on equipment connected with the USB. Set it to the mode for connecting to a PC.
- Also read the operating instructions of the connected equipment for details of connection and setup.
- Do not disconnect the USB connection cable while recognizing.



- Small-sized still pictures are displayed with a frame.



- Press [◀, ▶] to display the previous or next still picture.
- Press [SKIP◀◀, SKIP▶▶] to show other pages.

1 Insert a disc, SD card or USB device. (⇨ 16)

BD-RE, DVD-RAM

"Album View" screen is displayed

- When the "Title View" screen is displayed, press the [G] button to switch to the "Album View" screen.
- If the DVD-RAM containing both JPEG and AVCHD format is inserted, the file selection menu may be displayed.

DVD-R/R DL, CD-R/RW, SD card, USB device

- If the media containing data in different file formats is inserted, the file selection menu may be displayed.

e.g., Display




Press [▲, ▼] to select "Play Pictures (JPEG)" and press [OK].

"Picture View" screen is displayed


⇨ Go to step 3

e.g., SD

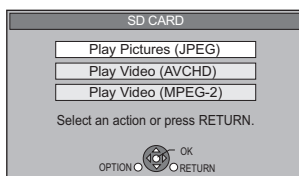

2 Press [▲, ▼, ◀, ▶] to select the album and press [OK].

e.g.

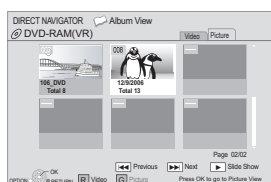

3 Press [▲, ▼, ◀, ▶] to select the still picture and press [OK].

To return to the previous screen
Press [RETURN].

To exit the screen

Press [TOP MENU/DIRECT NAVIGATOR].

DVD-RAM/R/R DL, CD-R/RW, SD card, USB device

To switch from other menus to JPEG menu

(If the media contains data in different file formats)

- 1) Press [START].
- 2) Press [▲, ▼] to select "Menu" and press [OK].
- 3) Press [▲, ▼] to select "Play Pictures (JPEG)" and press [OK].

Playing still pictures

Useful functions during still picture play

Start Slide Show

You can display still pictures one by one at a constant interval.

BD-RE, DVD-RAM

- ① While the "Album View" screen is displayed Press [▲, ▼, ◀, ▶] to select the album and press [OPTION].
 - ② Press [▲, ▼] to select "Start Slide Show" and press [OK].
- You can also start slideshow by pressing [▶PLAY] after selecting the album.

DVD-R/R DL, CD-R/RW, SD card, USB device

- ① While the "Picture View" screen is displayed Press [OPTION].
- ② Press [▲, ▼] to select "Start Slide Show" and press [OK].

To stop slideshow

Press [■STOP].

Slide Show Settings

After performing step ① in "Start Slide Show" above,

- ② Press [▲, ▼] to select "Slide Show Settings" and press [OK].
- ③ **To change the display interval**
Press [▲, ▼] to select "Display interval" and press [◀, ▶] to select the interval ("Long", "Normal" or "Short").
 - When a still picture with large number of pixels is played, the display interval may become longer. Even if the setting is changed, the display interval may not become shorter.

To set display method

Press [▲, ▼] to select "Transition Effect" and press [◀, ▶] to select "Fade", "Motion" or "Random".

"Fade": Pictures are changed by fading out and fading in.

This setting is factory preset.

"Motion": Pictures are changed by fading out and fading in, while it is enlarged, reduced, or moved up or down.

"Random": In addition to the "Motion", pictures are changed by various methods.

To repeat Slide Show

Press [▲, ▼] to select "Repeat Play" and press [◀, ▶] to select "On" or "Off".

To listen to a Background Music

Music files on an iPod, a USB device or a music CD can be played back as Background music during the slideshow. Press [▲, ▼] to select "Soundtrack" and press [◀, ▶] to select "On" or "Off".

- You cannot search or skip on a music.

- When the slideshow stops, the playback of the music also stops.

- Playback of the music files will be in the following order:
CD: Order of "Music list" display in repeat mode.
iPod: The music files will be played back in repeat mode.

- When a music CD, a USB device with MP3 recorded and an iPod is inserted/connected to this unit, the iPod has first priority to be played back as Background. To playback MP3 recorded on a USB device as Background music, remove the iPod and music CD from the main unit.

To select a folder

A folder to playback can be selected when a USB device with MP3 playback is connected to this unit. Press [▲, ▼] to select "Soundtrack Folder" and press [OK], and press [◀, ▶] to select folder and press [OK].

- ④ Press [▲, ▼, ◀, ▶] to select "Set" and press [OK].

Rotate

- ① While playing (except for slideshows) Press [OPTION].
 - ② Press [▲, ▼] to select "Rotate RIGHT" or "Rotate LEFT" and press [OK].
- The rotation information will be stored until the unit is turned off or the media is removed.

Zoom out

This function is only available for small-sized still pictures.

- ① While playing (except for slideshows) Press [OPTION].
 - ② Press [▲, ▼] to select "Zoom out" and press [OK].
- To cancel "Zoom out", press [▲, ▼] to select "Zoom in" in step ② and press [OK].
 - The zoom-out information will not be stored.


To select the still pictures in another folder

BD-RE, DVD-RAM

To switch to another higher folder

(Only if there is a multiple number of higher folders recognizable)

- ① While the "Album View" screen is displayed Press [OPTION].
- ② Press [▲, ▼] to select "Select Folder" and press [OK].

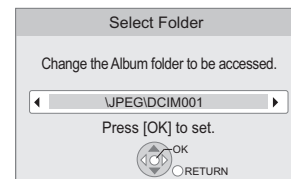


- ③ Press [◀, ▶] to select the higher folder and press [OK].

DVD-R/R DL, CD-R/RW

- ① While the "Picture View" screen is displayed Press [OPTION].
- ② Press [▲, ▼] to select "Folder" and press [OK].

e.g.

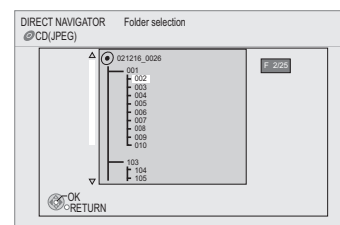

- ③ Press [▲, ▼] to select a folder and press [OK]. The "Picture View" screen for the folder appears.

To show the picture properties

While playing
Press [STATUS] twice.

e.g., JPEG on DVD-RAM
Shooting date



To exit, press [STATUS].

Playing music

CD MP3


You can generally play any available music CD or MP3 files recorded onto a DVD-R/R DL, CD-R/RW and USB device.
(About structure of folders ⇒ 43, "Structure of folders that can play back on this unit")

① Insert a disc or USB device. (⇒ 16)

e.g., Display

- If the media containing data in different file formats is inserted, the file selection menu may be displayed. Press [▲, ▼] to select "Play Music (MP3)" and press [OK].

e.g.

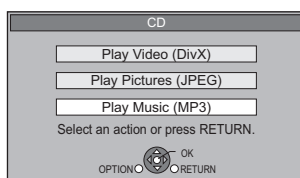

To switch from other menus to MP3 menu

(If the media contains data in different file formats)

- 1) Press [START].
- 2) Press [▲, ▼] to select "Menu" and press [OK].
- 3) Press [▲, ▼] to select "Play Music (MP3)" and press [OK].


- You can use search and skip functions. (⇒ 17)
- When the "Screen Saver Function" is set to "On" (⇒ 36), the screen switches to Screen Saver mode if there is no operation for 5 minutes after starting playback. (Playback continues.)

② Press [▲, ▼] to select the track and press [OK].

Play starts on the selected track.

e.g., CD

"🎵" indicates the track currently playing.

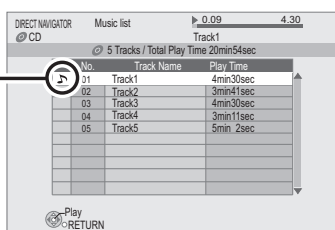

- You cannot select folders that contain no compatible tracks.



To return to the previous screen

Press [RETURN].

MP3 Playing a track in another folder


- ① While the "Music list" is displayed Press [OPTION], press [▲, ▼] to select "Select Folder" and press [OK].

Selected folder No. /Total folders

If the folder has no track, "– –" is displayed as folder number.

- ② Press [▲, ▼] to select a folder and press [OK]. The "Music list" for the folder appears.

e.g.

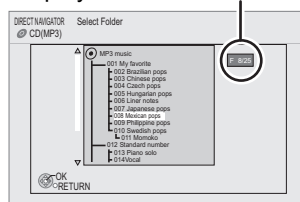

Playing music continuously even after turning off power to the television

When the unit is connected to a Panasonic TV (VIERA) that supports HDAVI Control 2 or later and other device supports VIERA Link, the unit is turned off if the power to the television is turned off, since "Power off link" (⇒ 27) operates. The following operations make it possible to keep the power of the unit ON and to play music continuously.


Set "Power Off Link" to "Video" (⇒ 37).



- Sound may be discontinued for several seconds when the power to the television is turned off.

Listening to the Radio

Setting up the radio

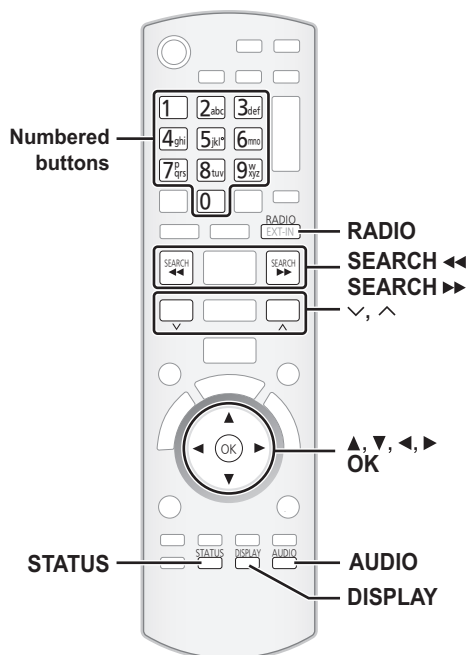

Presetting stations automatically

Up to 30 stations can be set.

- Press [RADIO] to select "FM".**
This unit: Press [RADIO/EXT-IN].
 - Press [STATUS] to select the position to start the auto preset search.**
Each time you press the button:
LOWEST (factory preset):
To begin auto preset with the lowest frequency (FM 87.50).
CURRENT:
To begin auto preset with the current frequency.*
* To change the frequency, refer "Manual tuning" (⇒ right).
 - Press and hold [OK].**
Release the button when "AUTO" is displayed.
The tuner starts to preset all the stations it can receive into the channels in ascending order.
- "SET OK" is displayed when the stations are set, and the radio tunes to the last preset station.
• "ERROR" is displayed when automatic presetting is unsuccessful. Preset the stations manually (⇒ right).

Listening/confirming the preset channels

- Press [RADIO] to select "FM".**
- Press the numbered buttons to select the channel.**
To select a 1-digit number
e.g., 1: [1] ⇒ [OK].
To select a 2-digit number
e.g., 12: [1] ⇒ [2]
Alternatively, press [^, v] or [◀, ▶].
When a stereo FM broadcast is being received, "ST" lights in the display.
• The FM setting is also shown on the TV display.

■ If noise is excessive

When FM is selected

Press [AUDIO] to display "MONO".

Press the button again to cancel the mode.

- The mode is also cancelled when you change the frequency.
- This setting can be preset for each broadcasting station. When "MONO" appears follow procedures ① and ② in "Presetting stations manually" (⇒ below).

Manual tuning

- Press [RADIO] to select "FM".**
- Press [SEARCH <<] or [SEARCH >>] to select the frequency.**
 - Main unit: Press [◀/◀, ▶/▶] to select the frequency.
 - When a radio broadcast is being received, "T" lights in the display.
 - To start automatic tuning, press and hold [SEARCH <<, SEARCH >>] (main unit: [◀/◀, ▶/▶]) until the frequency starts scrolling. Tuning stops when a station is found.

■ Presetting stations manually

Up to 30 stations can be set.

- While listening to the radio broadcast
Press [OK].
- While "P" is flashing on the display
Press the numbered buttons to select a channel.
To select a 1-digit number
e.g., 1: [1] ⇒ [OK].
To select a 2-digit number
e.g., 12: [1] ⇒ [2]

A station previously stored is overwritten when another station is stored in the same channel preset.

RDS broadcasting

The unit can display the text data transmitted by the radio data system (RDS) available in some areas.

If the station you are listening to is transmitting RDS signals, "RDS" will light up on the display.

While listening to the radio broadcast

Press [DISPLAY] to display the text data.

Each time you press the button:

PS: Program service
PTY: Program type
OFF: Frequency display

PTY displays			
NEWS	VARIED	FINANCE	COUNTRY
AFFAIRS	POP M	CHILDREN	NATIONAL
INFO	ROCK M	SOCIAL A	OLDIES
SPORT	M.O.R. M*	RELIGION	FOLK M
EDUCATE	LIGHT M	PHONE IN	DOCUMENT
DRAMA	CLASSICS	TRAVEL	TEST
CULTURE	OTHER M	LEISURE	ALARM
SCIENCE	WEATHER	JAZZ	


* "M.O.R. M"=Middle of the road music



RDS displays may not be available if reception is poor.

Enjoying TV, etc. with this unit's speakers

You can enjoy TV broadcasts with this unit's speakers.

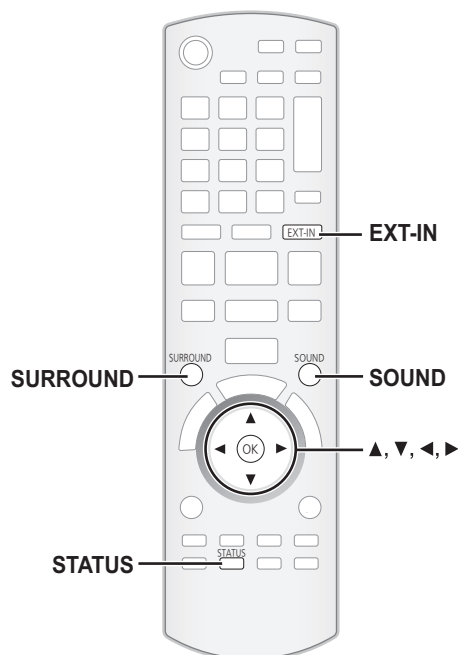

Preparation

Confirm the audio connection to the OPTICAL IN or AUX terminal on this unit (⇒ 9 to 10).

Turn on the TV.

- 1 Press [EXT-IN] several times to select "D-IN 1" (DIGITAL IN 1)*1, "D-IN 2" (DIGITAL IN 2)*2 or "AUX"*1.

This unit: Press [RADIO/EXT-IN].

- **D-IN 1 (DIGITAL IN 1)*1:**
When connecting using OPTICAL 1(TV) terminal.
- **D-IN 2 (DIGITAL IN 2)*2:**
When connecting using OPTICAL 2(STB) terminal.
- **AUX*1:**
When connecting using AUX terminal.

*1 For connections with the TV.

*2 For connections with other devices.

- When the system is connected to an HDAVI Control 2 or later-compatible TV via an HDMI cable, TV broadcast audio is output through the system speakers if the TV input is switched to TV tuner mode. See "Setting the TV audio for VIERA Link "HDAVI Control"" on page 26 for setting method.
- Reduce the volume on the TV to its minimum, and then adjust the volume of this unit.

Adjusting the sound

You can adjust the mode depending on the source or situation.

- 1 Press [SOUND] several times to select the mode.
 - You can also press [SOUND] and then [▲, ▼] to select the mode.
 - The selected effect will only be displayed on the main unit.
- 2 While the selected mode is displayed
Press [◀, ▶] and select the desired setting.

For more detailed information on this operation, please refer to the "Changing the sound modes" section on page 15.

Making settings for digital audio input

Select to suit the type of audio from the OPTICAL IN terminals on the main unit.

• Underlined items are the factory presets.

Available settings	
Mode	Setting
DUAL:	(Only works with Dolby Dual Mono) – <u>M1</u> – <u>M2</u> – <u>M1+M2</u> (stereo audio) • If this is set to "M1" or to "M2", the PCM FIX modes will automatically be set to "OFF".
DRC: (Dynamic Range Compression)	– <u>ON</u> Adjust for clarity even when the volume is low by compressing the range of the lowest sound level and the highest sound level. Convenient for late night viewing. (Only works with Dolby Digital) – <u>OFF</u> The full dynamic range of the signal is reproduced.
PCM FIX:	– <u>ON</u> Select when receiving only PCM signals. – <u>OFF</u> Select when receiving Dolby Digital and PCM signals. • When receiving true 5.1-channel surround sound, select "OFF". • If this is set to "ON", the DUAL mode will automatically be set to "M1+M2".
TV AUDIO*3:	– <u>AUX</u> Select when receiving analogue sound from the TV to the AUX terminal. – <u>D-IN 1</u> Select when receiving digital sound from the TV to the OPTICAL 1(TV) terminal.
CABLE/SAT AUDIO*4, 5:	– <u>SET</u> Select when setting the main unit to switch to "D-IN 2" when the input channel of a HDMI connected STB is selected on the TV (⇒ 26, Setting the TV audio for VIERA Link "HDAVI Control"). – <u>OFF</u> Select to cancel this setting.

- 1 Press [EXT-IN] several times to select "D-IN 1" (DIGITAL IN 1) or "D-IN 2" (DIGITAL IN 2).
Main unit: Press [RADIO/EXT-IN].
- 2 Press [STATUS] several times to select the mode.
 - You can also press [STATUS] and then [▲, ▼] to select the mode.
 - The digital audio input settings are to be set separately to each source, "D-IN 1" and "D-IN 2".
 - The selected effect will only be displayed on the main unit.
- 3 While the selected mode is displayed
Press [◀, ▶] and select the desired setting.

*3 When "D-IN 1" is selected.

*4 When "D-IN 2" is selected.

*5 The device connected to the OPTICAL 2(STB) terminal must be connected to the TV via an HDMI cable. If it is not connected via an HDMI cable, "NOT CONDITIONAL" is displayed on the main unit.



• Audio that is input through the OPTICAL DIGITAL IN or AUX terminals are not output from the HDMI terminal.

Linked operations with the TV

(VIERA Link “HDAVI Control™”)

What is VIERA Link “HDAVI Control”?

VIERA Link “HDAVI Control” is a convenient function that offers linked operations of this unit, and a Panasonic TV (VIERA) under “HDAVI Control”. You can use this function by connecting the equipment with an HDMI cable. See the operating instructions for connected equipment for operational details.

Preparation

- 1 Connect this unit to your TV with an HDMI cable (⇒ 9).
- 2 Set “VIERA Link” to “On” (⇒ 37).
(The default setting is “On”.)
- 3 Set the “HDAVI Control” operations on the connected equipment (e.g., TV).
- 4 Turn on all “HDAVI Control” compatible equipment and select this unit’s input channel on the connected TV so that the “HDAVI Control” function works properly.
Also when the connection or settings are changed, repeat this procedure.

Setting the TV audio for VIERA Link “HDAVI Control”

You can set the main unit to link audio operations with the TV.

■ Setting the audio from the TV

Preparation

- Select between “AUX” and “D-IN 1” (DIGITAL IN 1) to work with the linked operations for the TV audio.
 - Confirm the audio connection to the AUX terminal (for “AUX”) or OPTICAL 1(TV) terminal (for “D-IN 1”) (⇒ 9).

With the remote control of the main unit;

- 1 Press [EXT-IN] to select “AUX” or “D-IN 1” (DIGITAL IN 1).
- 2 Press [STATUS].
- 3 Press [▲, ▼] to select “TV AUDIO”.
- 4 Press [◀, ▶] to switch “AUX” or “D-IN 1” (DIGITAL IN 1) and press [OK].

Whenever the connection or settings are changed, reconfirm the points above.

■ Setting the audio from the STB

This unit can be set to link operations with the TV so as to output audio from the connected STB, etc. when the TV input is set to the input channel designated for the STB, etc.

Preparation

- Select the STB input channel on the TV.
- Confirm the audio connection to the OPTICAL 2(STB) terminal (for “D-IN 2”) (⇒ 10).

With the remote control of the main unit;

- 1 Press [EXT-IN] to select “D-IN 2” (DIGITAL IN 2).
 - 2 Press [STATUS].
 - 3 Press [▲, ▼] to select “CABLE/SAT AUDIO”.
 - 4 Press [◀, ▶] to select “SET” and press [OK].
- If the input channel of the STB on the TV is changed or if you want to change the device allocated for the linked operations, select “OFF” in step 4 above and then repeat steps 1 to 4.



NOTE

- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.

• This unit supports “HDAVI Control 4” function.

“HDAVI Control 4” is the newest standard (current as of December, 2008) for Panasonic’s HDAVI Control compatible equipment. This standard is compatible with Panasonic’s conventional HDAVI equipment.

- Please refer to individual manuals for other manufacturers’ equipment supporting VIERA Link function.

• It is recommended that you use Panasonic’s HDMI cable.

Recommended part number:

RP-CDHS15 (1.5 m),
RP-CDHS30 (3.0 m),
RP-CDHS50 (5.0 m), etc.

• Non-HDMI-compliant cables cannot be utilized.



NOTE

- The connected STB must also be connected to the TV via an HDMI cable. Refer to the operating instructions of the respective device for details.



TIPS

- It is also possible to connect an HDMI and optical output compatible Panasonic DVD, Blu-ray recorder in the place of the STB.

What you can do with “HDAVI Control”

Speaker selection

You can select whether audio is output from the unit’s speakers or the TV speakers by using the TV menu settings. For details, refer to the operating instructions of your TV.

Home Cinema

This unit’s speakers are active.

- When this unit is in standby mode, changing the TV speakers to this unit’s speakers in the TV menu will automatically turn the unit on and select “AUX”^{*1}, “D-IN 1” (DIGITAL IN 1)^{*1} or “D-IN 2” (DIGITAL IN 2)^{*2} as the source.
- The TV speakers are automatically muted.
- You can control the volume setting using the volume or mute button on the TV’s remote control. (The volume level is displayed on the main unit’s FL display.)
- To cancel muting, you can also use the home theatre remote control (⇒ 17).
- If you turn off this unit, TV speakers will be automatically activated.

TV

TV speakers are active.

- The volume of this unit is set to “0”.
 - This function works when “BD/DVD”, “SD”, “USB”, “AUX”^{*1}, “D-IN 1” (DIGITAL IN 1)^{*1} or “D-IN 2” (DIGITAL IN 2)^{*2} is selected as the source on the home theatre system.
- Audio output is 2-channel audio.



NOTE

- When “TV” is selected in “Speaker selection”, the audio from an iPod will not be output from the TV’s speakers during slideshow background music playback. (⇒ 22)

Automatic input switching

When the following operations are performed, the television will automatically switch the input channel and display the corresponding action.

- When play starts on the unit
- When an action that uses the display screen is performed (e.g., Direct Navigator screen)
- **BD-V** **DVD-V** When playback stops, the TV will automatically return to TV tuner mode.
- When you switch the TV input to TV tuner mode, this unit will automatically switch to “AUX”^{*1}, “D-IN 1” (DIGITAL IN 1)^{*1} or “D-IN 2” (DIGITAL IN 2)^{*2}.
- This function does not work when the iPod selector (SIMPLE mode) or iPod Video menu (EXTENDED mode) is chosen. (⇒ 29)



- When [▶PLAY] is pressed, the playback image is not immediately displayed on the screen and it may not be possible to watch the contents from where playback started. In this case, press [SKIP ◀◀] or [SEARCH ◀◀] to go back to where playback started.

Automatic lip-sync function (for HDAVI Control 3 or later)

Delay between audio and video is automatically adjusted, enabling you to enjoy smooth audio for the picture (⇒ 37, “Time Delay”).

- This function works only when “BD/DVD”, “SD”, “USB”, “AUX”^{*1}, “D-IN 1” (DIGITAL IN 1)^{*1} or “D-IN 2” (DIGITAL IN 2)^{*2} is selected as the source on this unit.

Power off link

All connected equipment compatible with “HDAVI Control”, including this unit, automatically turns off when you switch the television off.

- This unit automatically turns off even during playback or any other operation.

To continue audio playback even when the TV is turned off, select “Video” in “Power Off Link” (⇒ 37).

■ Intelligent Auto Standby

Intelligent Auto Standby responsibly manages your power consumption.

This function is available with a TV that supports “HDAVI Control 4”.

- If connected with a TV (VIERA) with the “Intelligent Auto Standby” setting activated on the TV, when switching the TV input, the unit will be automatically turned to standby. For details please read the operating instructions of the TV.
- When “Speaker selection” is set to “Home Cinema”, the main unit will not automatically turn to standby.

One touch play

You can turn on this unit and the TV, and start play with a single press of a button.

While the unit and the TV are in standby mode;

Press [▶PLAY].

- This unit's speakers will automatically be activated. (⇒ 26)



- When [▶PLAY] is pressed, the playback image is not immediately displayed on the screen and it may not be possible to watch the contents from where playback started. In this case, press [SKIP ◀◀] or [SEARCH ◀◀] to go back to where playback started.

*1 “AUX” or “D-IN 1” works depending on the “TV AUDIO” setting (⇒ 26, Setting the TV audio for VIERA Link “HDAVI Control”).

*2 “D-IN 2” works depending on the “CABLE/SAT AUDIO” setting (⇒ 26, Setting the TV audio for VIERA Link “HDAVI Control”).

Easy control only with VIERA remote control

If you connect this unit to a TV that has “HDAVI Control 2” or later with an HDMI cable, you can operate this unit using buttons on the TV remote control.

The buttons that you can use for this unit vary depending on the TV. For details, refer to the operating instructions of the TV.

Use the remote control supplied with this unit if you cannot operate this unit using buttons on the TV remote control.


- The operation of this unit may be interrupted when you press incompatible buttons on the TV remote control.

Using the START menu to operate this unit

By using the TV remote control, you can play media using the START menu.

- 1 Press the button for VIERA Link on the TV remote control.
- 2 Select the home theatre.
 - The START menu is displayed
- 3 Select the desired items on the START menu (⇒ 14).

e.g., **BD-V**

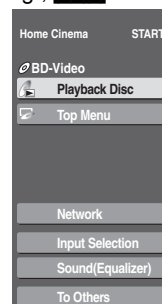

Using the option menu to operate this unit


By using the TV remote control, you can play discs using the “Control Panel” and display the Top Menu (for BD-Video and DVD-Video) or Pop-up Menu (for BD-Video).

- This works only during “BD/DVD”, “SD” or “USB” playback and resume modes.

- 1 Press [OPTION].

- You cannot use the option menu while the Top Menu for BD-Video or DVD-Video is displayed.
- This can also be displayed by using the VIERA menu screen.

e.g., **BD-V**

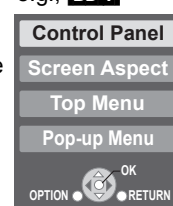


- 2 Select an item, then press [OK].

Control Panel	Control Panel is displayed. Follow the indications on the screen (⇒ below).
Screen Aspect	(⇒ 18)
Top Menu BD-V AVCHD DVD-V	Top menu is displayed.
Menu DVD-V	Menu is displayed.
Pop-up Menu BD-V	Pop-up menu is displayed.
Rotate RIGHT JPEG	Rotate the still picture.
Rotate LEFT JPEG	
Zoom in JPEG	Enlarge or shrink the still picture.
Zoom out JPEG	

■ Using the Control Panel

You can operate the playback with the indicated controls.

 e.g.



- Depending on the menu, some button operations cannot be performed from the TV's remote control.
- You cannot input numbers with the numbered buttons on the TV's remote control ([0] to [9]). Use this unit's remote control to select the playlist etc.

■ When you want to leave the TV on and set only this unit to standby mode

Press [⏻] on this unit's remote control and set to standby mode.

■ When not using “HDAVI Control”

Set “VIERA Link” in the Setup menu to “Off”. (⇒ 37)

Using the iPod

You can enjoy iPod music through this unit's speakers or view iPod videos/photos on the TV.

iPod Connection


Preparation

- **To view photos/videos from the iPod**
 - Ensure the video connection to the VIDEO OUT terminal on this unit (⇒ 9).
 - Operate the iPod menu to make the appropriate photo/video output settings for your TV. (Refer to operating instructions of your iPod.)
- To display the picture, turn on the TV and select the appropriate video input mode.
- Before connecting/disconnecting the iPod, turn the main unit off or reduce the volume of the main unit to its minimum.

1 Press [iPod ▲ OPEN/CLOSE] to open the sliding door and be sure to insert the iPod dock adapter supplied with the iPod into the Dock for iPod.

– Insert the side of the iPod dock adapter with the clips facing towards you first and then push the opposite side until it clicks into place.

2 Press [▲] to unlock the Dock for iPod and pull the docking switch lever to tilt the Dock for iPod.

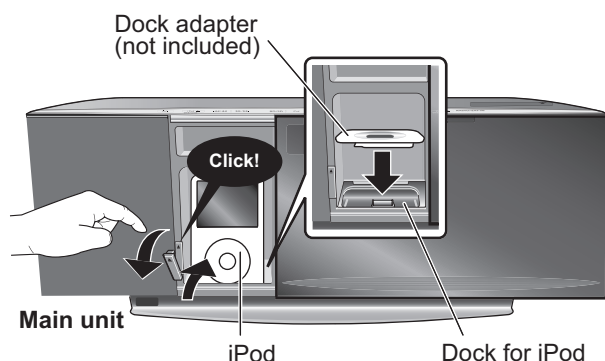

- Hold the docking switch lever when connecting/disconnecting the iPod.

3 Connect the iPod (not included) firmly.

4 Gently push the docking switch lever back until it clicks into place.

Recharging starts when the Dock for iPod is locked back into place.

5 Press [iPod ▲ OPEN/CLOSE] to close the sliding door.

- To operate the iPod in SIMPLE mode (⇒ 29), leave the sliding door open and gently operate the iPod's controls.

■ Removing the iPod

- 1 Stop the playback of the iPod.
- 2 Press [iPod ▲ OPEN/CLOSE] to open the sliding door.
- 3 Press [▲] to unlock the Dock for iPod and pull the docking switch lever to tilt the Dock for iPod.
- 4 Pull the iPod straight out.
- 5 Push the docking switch lever back until it clicks into place.
- 6 Press [iPod ▲ OPEN/CLOSE] to close the sliding door.

Compatible iPod

Name	Memory size
iPod nano 5th generation (video camera)	8 GB, 16 GB
iPod touch 2nd generation	8 GB, 16 GB, 32 GB, 64 GB
iPod classic	120 GB, 160 GB (2009)
iPod nano 4th generation (video)	8 GB, 16 GB
iPod classic	160 GB (2007)
iPod touch 1st generation	8 GB, 16 GB, 32 GB
iPod nano 3rd generation (video)	4 GB, 8 GB
iPod classic	80 GB
iPod nano 2nd generation (aluminum)	2 GB, 4 GB, 8 GB
iPod 5th generation (video)	60 GB, 80 GB
iPod 5th generation (video)	30 GB
iPod nano 1st generation	1 GB, 2 GB, 4 GB
iPod 4th generation (colour display)	40 GB, 60 GB
iPod 4th generation (colour display)	20 GB, 30 GB
iPod 4th generation	40 GB
iPod 4th generation	20 GB
iPod mini	4 GB, 6 GB



NOTE

If the Dock for iPod is not tilt when connecting/disconnecting the iPod, it may cause damage to the connector.

- Keep your fingers away from the sliding door when it is moving to avoid minor injuries.
- When removing the iPod, pull it straight out at the same angle as the tilt of the Dock for iPod.

To open the sliding door during disc playback

- During disc playback the sliding door will not open when [iPod ▲ OPEN/CLOSE] is pressed.
- Press [iPod ▲ OPEN/CLOSE] twice to open the sliding door.

While an iPod is connected

- Do not push or pull your iPod back and forth with great force.

About dock adapter

- Attach the dock adapter which should be supplied with your iPod to the dock for the stable use of the iPod.
- If you need an adapter, consult your iPod dealer.

About recharging the battery

- iPod will start recharging regardless of whether this unit is on or off.
- "IPOD *" will be shown on the main unit's display during iPod charging in main unit standby mode.
- If you are not using the iPod for an extended period of time after recharging has completed, disconnect it from main unit, as the battery will be depleted naturally. (Once fully recharged, additional recharging will not occur.)
- The cooling fan may operate while the iPod battery is being charged.



NOTE

- Compatibility depends on the software version of your iPod.
- Audio/video cannot be recorded or transmitted to iPods via this system.
- Panasonic makes no warranty for iPod data management.

● For more information, refer to the operating instructions for iPod.

- The contents of the operating instructions and those displayed on iPod may differ partially, but this will not fundamentally affect use of playback.



TIPS

■ To use the iPod touch features

- 1 Press the Home button on the iPod touch.
- 2 Select the iPod touch features on the touch screen to operate.

iPod Playback

This system features two different iPod playback modes.

The first of these is EXTENDED mode, for playback of music and video contents. With this mode, you can operate the iPod from the main unit. The second mode is SIMPLE mode, which can be used for playback of three types of contents – music, photos, and videos. With this mode, simple operations such as play, stop, and search can be performed on the display of your iPod.

Enjoy music/video (EXTENDED mode)


1 Press [iPod] to select "IPOD".

The iPod automatically switches to this unit's display mode. To switch the menu, press [STATUS] several times.

Music menu → Video menu
↑ iPod menu (iPod LCD) ↓

- "MUSIC" or "VIDEOS" is displayed on the main unit.
- When playing back video contents, ensure the video connection to the VIDEO OUT terminal on this unit (⇒ 9) and switch the TV input to video in.


e.g., music main menu screen

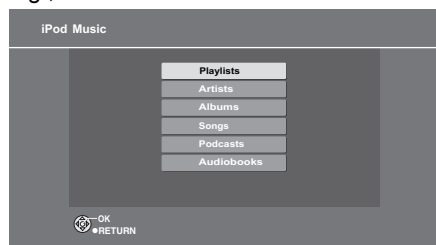

2 Press [▲, ▼] to select an item and press [OK].

- Play starts from the selected song or video.
- To display the previous or next page, press [◀, ▶]
- Press [RETURN] to return to the previous screen.

e.g., music playback screen Playback condition

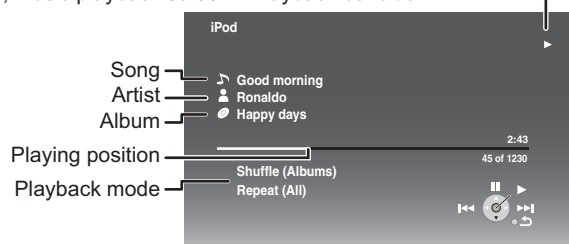

Clear/display iPod Music or Video menu during playback.

Press [TOP MENU/DIRECT NAVIGATOR].



- If the Video menu (EXTENDED mode) is accessed, the video shuffle playback mode on the iPod is set to "Off" when the iPod is disconnected from the unit.

Enjoy photos (SIMPLE mode)

You can also play music and video using SIMPLE mode.

1 Press [iPod] to select "IPOD".

2 Press [STATUS] several times to select the iPod menu (iPod LCD).

- "ALL" is displayed on the main unit.
- If the sliding door is closed, press [iPod ▲ OPEN/CLOSE] to open it.
- The main unit will continue to operate even if the sliding door is open.
- Proceed operations through the iPod display.

3 Switch the TV input to video in.

- Ensure the video connection to the VIDEO OUT terminal on this unit (⇒ 9).

4 Play a slideshow on your iPod.

The picture will be displayed on your TV.

You can use the remote control to operate the iPod menu.

- [▲, ▼]: To navigate menu items
- [OK]: To go to the next menu.
- [RETURN]: To return to the previous menu.

The remote control operation may vary between iPod models.

Other methods of playback

While in "MUSIC" or "VIDEOS" mode, it is possible to select the following playback modes.

Items	Selection/playback method
Play Mode	Shuffle*1 • Off: Cancel • Songs: Play all songs on iPod in random order. • Albums: Play all songs on album in random order.
	Repeat • Off: Cancel • One: Play a single song/video repeatedly. • All: Play all songs/videos from selected items (e.g., Playlists, Albums, etc.) repeatedly.

*1 For music playback only.

1 Press [START].

2 Press [▲, ▼] to select "Menu" and then press [OK].

3 Press [▲, ▼] to select "Play Mode" and then press [OK].

4 Press [▲, ▼] to select an item and press [OK].

5 Press [▲, ▼] to select the setting and press [OK].



Playback modes during and after connection.

- Music playback modes set on the iPod will be maintained when connected to the main unit. Changes made while the iPod is connected to the main unit be kept on the iPod after disconnecting it.
- If the Video menu (EXTENDED mode) is accessed, the video shuffle playback mode on the iPod is set to "Off" when the iPod is disconnected from the unit.



To return to the previous screen

Press [RETURN].

Basic controls

While playing music or video it is possible to use the following buttons of the remote control.

Buttons	Functions
[▶ PLAY]	Play
[■ STOP]	Pause
[PAUSE]	• Press [▶ PLAY] to restart play. • Playback start position may not be stored in memory in certain cases.
[SKIP ◀◀, SKIP ▶▶]	Skip
(Press and hold) [SEARCH ◀◀, SEARCH ▶▶]	Search

- Use the controls on the iPod unit during photo playback.

You can select the sound mode when you press [SOUND] (⇒ 15).

Enjoying VIERA CAST **BTX77**

You can access a selection of Internet services from the Home screen with VIERA CAST, for example YouTube, Picasa Web Albums. (Current as of December 2009)

Preparation

- Network connection (⇒ 11)
- Network setting (⇒ 31)

1 While stopped

Press [BD/SD] to select "BD/DVD".


2 Press [VIERA CAST].

- Message is displayed. Please read these instructions carefully and then press [OK].

3 Press [▲, ▼, ◀, ▶] to select the item and press [OK].

- Operable buttons: [▲, ▼, ◀, ▶], [OK], [RETURN], coloured buttons, numbered buttons

VIERA CAST Home screen;

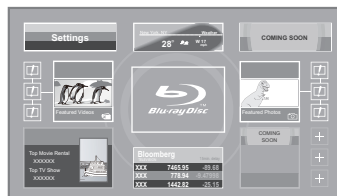

Images are for illustration purposes, contents may change without notice.

To return to VIERA CAST Home screen

Press [VIERA CAST].

To exit from VIERA CAST

Press [START] or [TOP MENU/DIRECT NAVIGATOR], then press [RETURN] to cancel the menu.

- When the Blu-ray disc logo is selected on the Home screen, the playback source will be changed and go back to the source previously selected.




NOTE

- In the following cases, settings are possible using "Network Service" (⇒ 38)
 - When restricting the use of VIERA CAST.
 - When the audio is distorted.
 - When wrong time is displayed
- If using slow Internet connection, the video may not be displayed correctly. A high-speed Internet service with a speed of at least 6 Mbps is recommended.
- Be sure to update the firmware when a firmware update notice is displayed on the screen (⇒ below). If the firmware is not updated, you will not be able to use the VIERA CAST function.
- VIERA CAST home screen is subject to change without notice.
- The services through VIERA CAST are operated by their respective service providers, and service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the content or the continuity of the services.
- All features of websites or content of the service may not be available.
- Some content may be inappropriate for some viewers.
- Some content may only be available for specific countries and may be presented in specific languages.

Firmware updating

When this unit remains connected to the Internet, it will automatically check for the latest firmware version when it is turned on.

When latest firmware version is available, the following screen is displayed. Select "Yes" or "No".

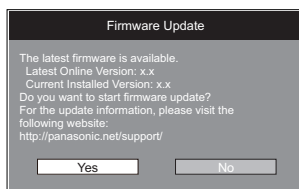


- If "Yes" is selected, then follow the on-screen instructions.
 - If "No" is selected, then manually update the firmware later. (⇒ right)
- After the latest firmware is downloaded, the system will be restarted and the firmware will be updated.

When the system is restarted, the screen display disappears and "START" is displayed on the unit's display.



 After the firmware is updated and the system is restarted, the following screen indicates that the firmware update has been completed.



- During the update process, no other operations can be performed. Serious damage may occur if you turn off the unit and/or press any buttons.



NOTE



TIPS

- Downloading will require several minutes. It may take longer or the Internet may not be connected depending on the connection environment. It is required that you use a broadband connection.
- If you use **BTX75** or you use **BTX77** but downloading on this unit fails or this unit is not connected to the Internet, then you can download the latest firmware from the following website and burn it to a CD-R to update the firmware.
<http://panasonic.jp/support/global/cs/>
(This site is in English only.)
- When the unit is connected to the Internet, communication charges may be generated.
- If you do not want to check for the latest firmware version when the unit is turned on, set "Automatic Update Check" to "Off". (⇒ 38)

Manually updating the firmware

If the firmware update is not carried out when the unit is turned on, a message is displayed when displaying the START menu.

The latest firmware is available.
Please update firmware in Setup.

- 1) Press [SETUP].
- 2) Press [▲, ▼] to select "General" and press [OK].
- 3) Press [▲, ▼] to select "Firmware Update" and press [OK].
- 4) Press [▲, ▼] to select "Update Now" and press [OK].
- 5) Press [◀, ▶] to select "Yes" and press [OK].

Network settings **BTX77**

These settings are used if you will connect this unit to the Internet. (⇒ 38)

- The connection to the Internet may take time or the Internet may not be connected depending on the connection environment. It is required that you use a broadband connection.

Preparation

- Connect to a broadband network. (⇒ 11)

Testing of “IP Address / DNS Settings”

Always test the connection when a LAN cable is connected.

- 1 While stopped
Press [BD/SD] to select “BD/DVD”.
- 2 Press [SETUP].
- 3 Press [▲, ▼] to select “Network Settings” and press [OK].
- 4 Press [▲, ▼] to select “IP Address / DNS Settings” and press [OK].
- 5 Press [▲, ▼] to select “Connection Test” and press [OK].

- “Testing...”: The test is in progress.
 “Pass”: The connection is completed.
 Press [RETURN] to exit.
 “Fail”: Please check the connection and settings.



- Perform the “Connection Test” also when any change was made to the “IP Address / DNS Settings”.

- If the connection test fails, it may be necessary to set the MAC address of this unit at the router side. The MAC address can be displayed by pressing [SETUP] and selecting “Network Settings”.

Setting the IP address

In most cases, default settings can normally be used without making any changes.

Set the IP address only when the router has no DHCP server functions or when the router's DHCP server function is disabled.

After performing steps 1 – 4 (⇒ left)

- 5 Press [▲, ▼] to select “IP Address Auto-Assignment” and press [◀, ▶] to select “Off”.
- 6 Press [▲, ▼] to select “IP Address”, “Subnet Mask” or “Gateway Address” and press [OK].
- 7 Enter numbers with the numbered buttons and press [OK].
 - After checking the specifications for your broadband router, enter each number.
 - If the number is unknown, then check the number of other devices such as personal computers connected via a LAN cable. Assign a different number from those of other devices for the “IP Address” and the same number for others.
 - If a wrong number is entered, then press [CANCEL].
- 8 Press [◀, ▶] to select “Yes” and press [OK].



- The numeric input range is between 0 and 255.

Setting the DNS-IP

In most cases, default settings can normally be used without making any changes.

When setting an assigned DNS server from your Internet service provider, perform the following settings.

After performing steps 1 – 4 (⇒ left)

- 5 Press [▲, ▼] to select “DNS-IP Auto-Assignment” and press [◀, ▶] to select “Off”.
- 6 Press [▲, ▼] to select “Primary DNS” or “Secondary DNS” and press [OK].
- 7 Enter numbers with the numbered buttons and press [OK].
 - Follow the instructions given by your Internet service provider and enter the numbers.
 - If the number is unknown, then check the number of other devices such as personal computers connected via a LAN cable and assign the same number.
 - If a wrong number is entered, then press [CANCEL].

- 8 Press [◀, ▶] to select “Yes” and press [OK].



- The numeric input range is between 0 and 255.

Network settings **BTX77**

Setting the connection speed

When the connection test results in "Fail" after the IP and DNS-IP addresses are assigned, perform the following settings.


After performing steps ① – ④ (⇒ 31)

- ⑤ Press [▲, ▼] to select "Connection Speed Auto-Config" and press [◀, ▶] to select "Off".
 - ⑥ Press [▲, ▼] to select "Connection Speed Setting" and press [◀, ▶] to select a connection speed.
- Select a connection speed in accordance with the environment of the network connected.
 - When the settings are changed, the network connection may be disabled depending on the device.

Testing of "Proxy Server Settings"

Always test the connection when new "Proxy Server Settings" have been made.

- ① While stopped Press [BD/SD] to select "BD/DVD".
- ② Press [SETUP].
- ③ Press [▲, ▼] to select "Network Settings" and press [OK].
- ④ Press [▲, ▼] to select "Proxy Server Settings" and press [OK].
- ⑤ Press [▲, ▼] to select "Connection Test" and press [OK].

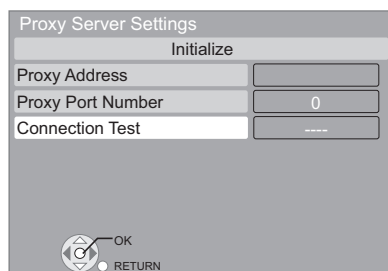

- "Testing...": The test is in progress.
 "Pass": The connection is completed. Press [RETURN] to exit.
 "Fail": Please check the connection and settings.


Setting the proxy server

In most cases, default settings can normally be used without making any changes. Please use this setting when instructed to by your Internet service provider.


After performing steps ① – ④ (⇒ left)

- ⑤ Press [▲, ▼] to select "Proxy Address" and press [OK].
- The text entry screen is displayed.

Text field: shows the text you have entered

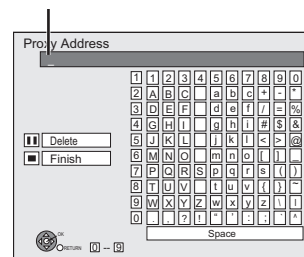

- ⑥ Press [▲, ▼, ◀, ▶] to select a character and press [OK].
Repeat this step to enter other characters.
- Press [PAUSE] to delete.
- ⑦ Press [STOP] when you complete the entry.
- ⑧ Press [▲, ▼] to select "Proxy Port Number" and press [OK].
- ⑨ Enter numbers with the numbered buttons and press [OK].

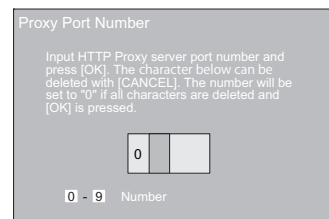

- ⑩ Press [◀, ▶] to select "Yes" and press [OK].




TIPS

- The specified ports may be blocked and not be able to be used depending on the network environment.

In order to restore the default settings
 After performing steps ① – ④ (⇒ left)

- 1) Press [▲, ▼] to select "Initialize" and press [OK].
- 2) Press [◀, ▶] to select "Yes" and press [OK].

Using the numbered buttons to enter characters

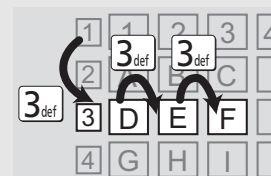

e.g., entering the letter "F"


- 1) Press [3] to move to the 3rd row.
- 2) Press [3] twice to highlight "F".
- 3) Press [OK].

Changing settings with the on-screen menu

On-screen menu operations

- 1 Press [BD/SD] to select "BD/DVD".
- 2 Press [DISPLAY].
- 3 Press [▲, ▼] to select the menu and press [▶].
- 4 Press [▲, ▼] to select the item and press [▶].
- 5 Press [▲, ▼] to select the setting.

e.g., **BD-V**

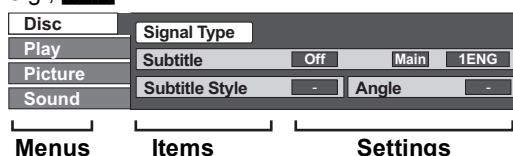

NOTE

• Depending on the condition of the unit (playing, stopped, etc.) and media contents, there may be some items that you cannot select or change.



TIPS

• Some items can be changed by pressing [OK].

To exit the on-screen menu
Press [DISPLAY].

What you can change with the on-screen menu

Menus	Items	Settings and details
Disc	Signal Type	BD-V •Primary Video Video: The video recording method appears. (⇒ below, Video attribute) Soundtrack: Select the type of audio or language. (⇒ below, Language, Audio attribute) •Secondary Video Video: Select on/off of images. The video recording method appears. (⇒ below, Video attribute) Soundtrack: Select on/off of audio and the language. (⇒ below, Language, Audio attribute)
	Video	AVCHD The video recording method appears. (⇒ below, Video attribute)
	Soundtrack	AVCHD DVD-V Select the type of audio or language. (⇒ below, Language, Audio attribute) DVD-VR MPEG2 The audio attributes appear. (⇒ below, Audio attribute) DivX Select the soundtrack number. • Soundtrack numbers are displayed even when there is only one audio type.
	Subtitle	BD-V AVCHD DVD-V Turn the subtitle on/off and select the language. (⇒ below, Language) DVD-VR (Only discs that contain subtitle on/off information) Turn the subtitle on/off. DivX Turn the subtitle on/off and select "Text" or the subtitle number. • Subtitle number is displayed even if there are not multiple subtitles.
	Subtitle Style	BD-V Select the subtitle style.
	Audio channel	DVD-VR DivX MPEG2 (⇒ 17, Changing audio during play)
	Angle	BD-V DVD-V Select the number of the angle.

Some items may be changed only on the disc specific menu. (⇒ 16)

Language

ENG: English	SVE: Swedish	CHI: Chinese	CES: Czech
FRA: French	NOR: Norwegian	KOR: Korean	SLK: Slovak
DEU: German	DAN: Danish	MAL: Malay	HUN: Hungarian
ITA: Italian	POR: Portuguese	VIE: Vietnamese	FIN: Finnish
ESP: Spanish	RUS: Russian	THA: Thai	*: Others
NLD: Dutch	JPN: Japanese	POL: Polish	

Audio attribute


LPCM/ ☐ Digital/ ☐ Digital+/ ☐ TrueHD/DTS/DTS 96/DTS-HD HI RES/DTS-HD MSTR/MPEG	Signal type
ch (channel)	Number of channels
k (kHz)	Sampling frequency
b (bit)	Number of bits
bps (bit per second)	Transfer rate of bit

Video attribute

MPEG-2/MPEG-4 AVC/VC-1	Video recording method
480/576/720/1080	Video Format
24p/50i/60i/50p/60p	Video Frame rate
YCbCr4:2:2/YCbCr4:4:4/RGB	Colour Space
bps (bit per second)	Transfer rate of bit

Changing settings with the on-screen menu

To select these settings, perform steps ❶ – ❺ (⇒ 33)

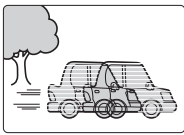Menus	Items	Settings and details
Play	Repeat Play	(Only when the elapsed time is being displayed on the unit's display.) Selects the item which you want to repeat. The items displayed differ depending on the type of media. •All tracks All tracks •Chapter Chapter •Playlists Playlist •Title Title •One track Track •Off Select "Off" to cancel.
	Random	CD MP3 While playing, press [▲, ▼] to select "On". Random playback starts from the next track. •On •Off
	Playback Information Window	BD-V DVD-V Displays audio/video attribute information of disc (Ⓢ), settings status of "Digital Audio Output" (⇒ 36) (Ⓢ) and HDMI output information (HDMI). (⇒ 33 Audio attribute, Video attribute) –Depending on the disc, display method may be different. –The audio attribute information will be displayed following the "Digital Audio Output" settings. (⇒ 36) Press [RETURN] to exit.
	Picture Mode	BD-V AVCHD DVD-VR DVD-V DivX MPEG2 Select the picture quality mode during play. •Normal: Default setting •Cinema: Mellows movies, enhances detail in dark scenes. •Fine: Details are sharper •Soft: Soft picture with smoother video
Picture	Progressive	Select the method of conversion for progressive output to suit the type of material being played. •Auto: Automatically detects the film and video content, and appropriately converts it. •Video: Select when using "Auto" and the content is distorted. •Film: Select this if the edges of the film content appear jagged or rough when "Auto" is selected. However, if the video content is distorted as shown in the illustration to the right, then select "Auto". 
	24p DVD-V	•On •Off Only when you have selected "On" in "24p Output" (⇒ 37) and play discs recorded at a rate of 60 fields per second.
	Sound	
Sound	Sound Effects*1, 2	•Off Re-master This feature gives you a more natural sound by adding higher frequency signals not recorded on the track. •Re-master 1: When playing LPCM sound (Type of music): High tempo (e.g., pop and rock) Other types of sound (Effect level): Light •Re-master 2: When playing LPCM sound (Type of music): Various tempos (e.g., jazz) Other types of sound (Effect level): Medium •Re-master 3: When playing LPCM sound (Type of music): Low tempo (e.g., classical) Other types of sound (Effect level): Strong
	Dialog Enhancer*1	BD-V AVCHD DVD-VR DVD-V DivX MPEG2 (3 channels or more only, including a centre channel) The volume of the audio included in the centre channel is raised to make the dialog easier to hear. •On •Off
	High Clarity Sound	When the analogue video terminal is not being used, the electrical current that flows through the analogue video circuit can be stopped. This prevents adverse effects on the audio signals and produces clearer sound. Use this when outputting image via the HDMI AV OUT terminal. Analogue image will not be output via the VIDEO OUT terminal. •On •Off Only when you have selected "Enable" in "High Clarity Sound" (⇒ 36)

*1 When audio is output from the HDMI AV OUT terminal this function is effective only when "Dolby D/Dolby D +/Dolby TrueHD" or "DTS/DTS-HD" is set to "PCM". (⇒ 36)

*2 Not every function can be set individually.


Changing the unit's settings

Change the unit's settings if necessary. The settings remain intact even if you switch the unit to standby.

Setup menu operations

- 1 While stopped
Press [BD/SD] to select "BD/DVD".
- 2 Press [SETUP].
- 3 Press [▲, ▼] to select the menu and press [OK].
- 4 Press [▲, ▼] to select the item and press [OK].
If there are any other items, repeat these steps.
- 5 Press [▲, ▼, ◀, ▶] to select the option and press [OK].

e.g., **BTX77**

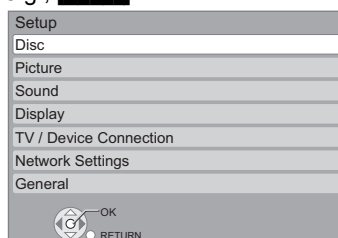

• There may be differences in operation methods. If this happens, follow the on-screen instructions for the operation.



To return to the previous screen
Press [RETURN].

To exit the screen
Press [SETUP].

Summary of settings

Underlined items are the factory presets.

"Disc"

DVD-Video Ratings Set a ratings level to limit DVD-Video play.	Follow the on-screen instructions. Enter a 4-digit password with the numbered buttons when the password screen is shown. It will be the common password for "DVD-Video Ratings", "BD-Video Ratings" and "Network Lock". • Do not forget your password.	• 8 No Limit: All DVD-Video can be played. • 1 to 7: Prohibits play of DVD-Video with corresponding ratings recorded on them. • 0 Lock All: Prohibits play of all DVD-Video. Changing settings (When level 0 to 7 is selected) • Unlock Player • Change Password • Change Level • Temporary Unlock
BD-Video Ratings Set an age limit of BD-Video play.		• No Limit: All BD-Video can be played. • 0 to 254 year(s): Prohibits play of BD-Video with corresponding ratings recorded on them. Changing settings (When 0 to 254 year(s) is selected) • Unlock Player • Change Password • Change Level • Temporary Unlock
Soundtrack Preference Choose the language for audio, subtitle and disc menus. BD-V DVD-V	• Some discs start in a certain language despite any changes you make here. • When the selected language is not available on the disc, the default language is played. There are discs where you can only switch the language from the menu screen. (⇒ 16) • Enter a code (⇒ 43) with the numbered buttons when you select "Other *****".	• English • German • French • Italian • Spanish • Dutch • Russian • Original: The original language of each disc will be selected. • Other *****
Subtitle Preference		• Automatic: If the language selected for "Soundtrack Preference" is not available, subtitles of that language will automatically appear if available on that disc. • English • German • French • Italian • Spanish • Dutch • Russian • Other *****
Menu Preference		• English • German • French • Italian • Spanish • Dutch • Russian • Other *****
BD-Live Internet Access BD-V BTX77 (⇒ 19) You can restrict Internet access when BD-Live functions are used.		• Permit: Internet access is permitted for all BD-Live contents. • Limit: Internet access is permitted only for BD-Live contents which have content owner certificates. Internet access is prohibited for all BD-Live contents without a certificate. • Prohibit: Internet access is prohibited for all BD-Live contents.
DivX Subtitle Text DivX Select a suitable item according to the language used for DivX subtitles text (⇒ 20). • This item is displayed only when pressing [SETUP] after playing back a file.		• Latin 1: English, German, Spanish, etc. • Latin 2: Polish, Czech, Hungarian, etc. • Cyrillic: Russian, etc.

"Picture"

Still Mode BD-V AVCHD DVD-V Select the type of picture shown when you pause playback.	• Automatic • Field: Select if jittering occurs when "Automatic" is selected. (The picture is coarser.) • Frame: Select if small text or fine patterns cannot be seen clearly when "Automatic" is selected. (The picture is clearer and finer.)
Seamless Play DVD-VR Select the play mode between playlist chapter segments and partially deleted titles.	• On: The chapters in playlists are played seamlessly. This does not work while searching or when there are several audio types included on the playlist. Additionally, the positioning of chapter segments may change slightly. • Off: The points where chapters in playlists change are played accurately, but the picture may freeze for a moment.
NTSC Contents Output Select PAL60 or NTSC output when playing NTSC discs.	• NTSC: NTSC discs are played as NTSC. • PAL60: Select if picture is not displayed correctly when "NTSC" is selected.

Changing the unit's settings

To select these settings, perform steps ❶ – ❺ (⇒ 35)

“Sound”

Dynamic Range Compression BD-V AVCHD DVD-V DivX (Dolby Digital, Dolby Digital Plus and Dolby TrueHD only) Change the dynamic range (⇒ 51) for late night viewing.		●On ●Auto:	●Off Effective only when Dolby TrueHD is played.
Digital Audio Output ●Press [OK] to show the following settings.			
Dolby D/Dolby D +/ Dolby TrueHD DTS/DTS-HD MPEG Audio	Select whether Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS Digital Surround, DTS-HD High Resolution Audio or DTS-HD Master Audio is output in “Bitstream” or “PCM” format. ●Not making the proper settings may result in noise. ●If the unit is connected with the HDMI AV OUT terminal, the specifications of the connected equipment take preference over this unit and audio selected in these items may not be output (e.g., when a television is connected, the HDMI audio output of this unit is limited to down-mixed 2ch.)		
	Bitstream: Select “Bitstream” when the connected equipment can decode the respective audio format. –Connect equipment supporting HDMI (High Bit rate Audio) and use a High Speed HDMI Cable in order to output high bit rate audio such as Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio or DTS-HD Master Audio. PCM: Select “PCM” when the connected equipment cannot decode the respective audio format. Refer to the operating instructions for connected devices to verify whether or not they can decode each of the audio formats.		
	BD-Video Secondary Audio BD-V Turn on/off the clicking sound on the menu and audio with secondary video in picture-in-picture mode. (⇒ 19)		
	PCM Down Conversion Select how to output audio with a sampling frequency of 96 kHz or more. ●Signals are converted to 48 kHz despite the settings across in the following cases: –when the signals have a sampling frequency of over 192 kHz –when the disc has copy protection –when “BD-Video Secondary Audio” is set to “On”		
	Downmix Switch the downmix system for playing back multi-channel surround sound. ●When “Dolby D/Dolby D +/Dolby TrueHD” or “DTS/DTS-HD” is set to “Bitstream”, there are no downmix effects for the outputted audio. ●The audio will be outputted in “Stereo” in the following cases. –AVCHD playback –Playback of clicking sound on the menu and audio with secondary video in picture-in-picture mode		
	High Clarity Sound When the analog video terminal is not being used, the electrical current that flows through the analogue video circuit can be stopped. This prevents adverse effects on the audio signals and produces clearer sound. ●This works only when “BD/DVD”, “SD” or “USB” is selected as the source. ●Set to “Enable” and then set “High Clarity Sound” on the on-screen menu to “On”. (⇒ 34) ●Use this when outputting image via HDMI AV OUT terminal. Analogue image will not be output via the VIDEO OUT terminal.		
	Speaker		

“Display”

On-Screen Messages Choose whether to show status messages automatically.		●Automatic ●Off
On-Screen Language Choose the language for these menus and on-screen messages.		●English ●Deutsch ●Français ●Italiano ●Español ●Nederlands ●РУССКИЙ
Screen Saver Function This is to prevent burn-in on the screen. ●When this is set to “On”, the masked-off area on the screen becomes grey. [Only when connecting with an HDMI cable and “HDMI Video Format” (⇒ 37) is set to any other mode than “576p/480p”]		●On: If there is no operation for 5 minutes or more, the displayed screen switches to the other states automatically. –When the Direct Navigator or START menu is displayed, the display returns to the screen saver mode. –When CD or MP3 is played, the display returns to the screen saver mode. (Playback continues.) –When still pictures are shown (except for slideshow), the display returns to the Direct Navigator screen. ●Off
FL Display Changes the brightness of the unit's display.		●Bright ●Dim: ●Automatic:
Software Licence		Information about the software used by this unit is displayed.

“TV/Device Connection”

TV Aspect Set to match the type of television connected.	When connected to a 16:9 widescreen television: ● 16:9 : Video recorded for 4:3 aspect screen is displayed as a 4:3 ratio image in the centre of the screen. When connected to a 4:3 aspect television: ● 4:3 : Video recorded for a widescreen is played as Pan & Scan (unless prohibited by the producer of the disc). When playing BD-Video, video is output as “4:3 Letterbox”. ● 4:3 Letterbox : Video recorded for a widescreen is played in the letterbox style.
Time Delay*1 When connected with a Plasma display, adjust if you notice the audio is out of sync with the video.	● Auto ● 0ms ● 20ms ● 40ms ● 60ms ● 80ms ● 100ms ● 120ms ● 140ms When using VIERA Link “HDAVI Control” with “HDAVI Control 3” (or later) compatible TV (⇒ 26), select “Auto”. Audio and video will automatically be set in sync. – This works only when “BD/DVD”, “SD”, “USB”, “AUX”, “D-IN 1” (DIGITAL IN 1) or “D-IN 2” (DIGITAL IN 2) is selected as the source. (⇒ 27)
HDMI Connection ● Press [OK] to show the following settings.	
HDMI Video Format*2 The items supported by the connected devices are indicated on the screen as “*”. When any item without “*” is selected, the images may be distorted.	● Automatic : Automatically selects the output resolution best suited to the connected television (1080p, 1080i, 720p or 576p/480p). ● 576p/480p ● 1080i ● 720p ● 1080p – When outputting 1080p signal, we recommend using High Speed HDMI Cables that have the HDMI logo (as shown on the cover) and are less than 5.0 meters to prevent video distortion etc. – To enjoy high definition video up-converted to 1080p, you need to connect the unit directly to 1080p compatible HDTV (High Definition Television). If this unit is connected to an HDTV through other equipment, it must also be 1080p compatible.
24p Output BD-V DVD-V When this unit is connected to a TV supporting 1080/24p output via an HDMI cable, this unit displays each frame at 1/24 second intervals – the same interval originally shot with the film camera. ● When playing DVD-Video, set to “On” and then set “24p” in “Picture” (⇒ 34) to “On”.	● On : Images in 24p are output in 24p as they are. However, – when video is being output at 24 frames, images from any other terminal than the HDMI AV OUT terminal may not be output properly. – BD-V : when images other than 24p are played, images are output at 60p. ● Off
HDMI Output Range Effective when connected to a device that only supports RGB output.	● Standard : The video is output as it is. ● Enhanced : When the black and white contrast of a video is low, the signal is enhanced to reproduce clear video.
HDMI Audio Output This setting selects whether or not to output audio from HDMI.	● On : To output audio through the TV’s speakers or other devices. ● Off : To output audio through system speakers. (The audio is output using the settings of the main unit.)
VIERA Link Set to use “HDAVI Control” function when connected with an HDMI cable to a device that supports “HDAVI Control”.	● On : ● Off : Select when you do not want to use “HDAVI Control”.
Power Off Link Select the desired power off link setting of this unit for VIERA Link operation (⇒ 27). (This works depending on the settings of the connected VIERA Link “HDAVI Control” compatible equipment.)	● Video/Audio : When the TV is turned off, this unit will turn off automatically. ● Video : When the TV is turned off, this unit will turn off except during the following conditions: – audio playback (CD MP3) – iPod mode – radio mode – “AUX” or “D-IN1” (DIGITAL IN 1) mode (non-selected TV audio setting for VIERA Link) – “D-IN2” (DIGITAL IN 2) mode (non-selected TV audio setting for CABLE/SAT)
TV System Change the setting to match the equipment you are connecting with. ● If picture output is not smooth, change the setting. ● When NTSC contents are played, they are outputted in the signal format specified in the “NTSC Contents Output”, irrespective of the settings here.	● NTSC : Select when connecting to a NTSC television. ● PAL : Select when connecting to a PAL or multi-system television.

*1 This function has no effect when S.SURROUND is selected during AUX (TV) playback.

*2 In this unit, a P4HD (⇒ 51) video processor is used to provide video of optimal resolution to the connected TV.

Changing the unit's settings

To select these settings, perform steps ❶ – ❺ (⇒ 35)

“Network Settings” **BTX77**

IP Address / DNS Settings (⇒ 31)

● Press [OK] to show the following settings.

Connection Test	— — — — —
IP Address Auto-Assignment	● <u>On</u> ● Off
IP Address	— — — — — . — — — — — . — — — — — . — — — — —
Subnet Mask	— — — — — . — — — — — . — — — — — . — — — — —
Gateway Address	— — — — — . — — — — — . — — — — — . — — — — —
DNS-IP Auto-Assignment	● <u>On</u> ● Off
Primary DNS	— — — — — . — — — — — . — — — — — . — — — — —
Secondary DNS	— — — — — . — — — — — . — — — — — . — — — — —
Connection Speed Auto-Config	● <u>On</u> ● Off
Connection Speed Setting	● 10BASE Half Duplex ● 10BASE Full Duplex
This is enabled only when “Connection Speed Auto-Config” is turned “Off”.	● 100BASE Half Duplex ● 100BASE Full Duplex

Proxy Server Settings (⇒ 32)

● Press [OK] to show the following settings.

Initialize	● Yes ● <u>No</u>
Proxy Address	(The initial setting is blank.)
Proxy Port Number	(The initial setting is “0”.)
Connection Test	— — — — —

Network Service (⇒ 30) (VIERA CAST)

● Press [OK] to show the following settings.

Network Lock You can restrict using VIERA CAST. Follow the on-screen instructions. Enter a 4-digit password with the numbered buttons when the password screen is shown. It will be the common password for “DVD-Video Ratings”, “BD-Video Ratings” and “Network Lock”. ● Do not forget your password.	● <u>On</u> ● Off Changing settings (When “On” is selected) ● Change Password
Audio Auto Gain Control Volume that is different depending on the contents is adjusted automatically to the standard volume while using the VIERA CAST. ● Depending on contents, this function effect will not work. ● Select “Off” when the audio is warped. ● This function has no effect when the audio source is 2 ch.	● <u>On</u> ● Off
Reduced Screen Display The screen is displayed reduced so the displayed screen of the VIERA CAST does not get truncated.	● On ● <u>Off</u>
Time Zone By selecting the time zone, it is possible to set the unit's time to match your location. ● Some VIERA CAST contents require the time zone to be set. Set the time zone if necessary.	● GMT –12 to +12 (For the United Kingdom: The initial setting is “0”.) (For Continental Europe: The initial setting is “+1”.) GMT 0 = WET (Western European Time) GMT +1 = CET (Central European Time) GMT +2 = EET (Eastern European Time)
Summer Time Select “On” when using Daylight Saving time.	● On ● <u>Off</u>

MAC Address (⇒ 31)


Displays the “MAC Address” of this unit.

“General”

Remote Control (⇒ 47)	● <u>Set Code 1</u> ● Set Code 2
EASY SETUP (⇒ 12) You can execute some essential settings for the unit.	● Yes ● <u>No</u>
Default Settings This returns all values in the Setup menu and the on-screen menu, except for “Remote Control”, “On-Screen Language”, “IP Address / DNS Settings” (BTX77), “Proxy Server Settings” (BTX77), “Network Lock” (BTX77), “DVD-Video Ratings” and “BD-Video Ratings” to the default settings.	● Yes ● <u>No</u>
DivX Registration DivX (⇒ 20) You need this registration code to purchase and play DivX Video-on-Demand (VOD) content.	
Firmware Update (⇒ 30) BTX77 ● Press [OK] to show the following settings.	
Automatic Update Check When this equipment remains connected to the Internet, it will check for the latest firmware version when it is turned on and you can update it if necessary.	● <u>On</u> ● Off
Update Now You can update the firmware manually.	● Yes ● <u>No</u>

Speaker check

- 1 Select "Test" and press [OK].
A test signal is output.
Front (L) ↔ Front (R)
- 2 Press [OK].
The test signal stops.
• No signal is output for the subwoofer. To adjust its volume, see page 18, Adjusting speaker level during play.

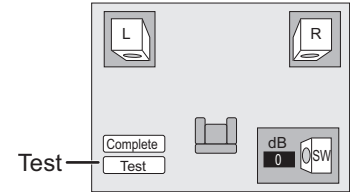

To finish the speaker setting

Press [▲, ▼, ◀, ▶] to select "Complete" and press [OK].

Speaker installation option


Attaching to a wall

You can attach all of the speakers (except subwoofer) to a wall.

- The wall or pillar on which the speakers are to be attached should be capable of supporting 10 kg per screw. Consult a qualified building contractor when attaching the speakers to a wall. Improper attachment may result in damage to the wall and speakers.


Preparation

Remove the speaker bases.

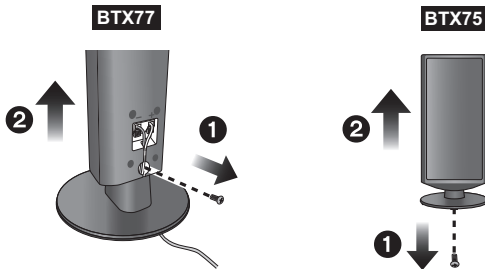

- 1 Remove the screw from the speaker.
- 2 Remove the speaker base.


- 1 Drive a screw (not included) into the wall.

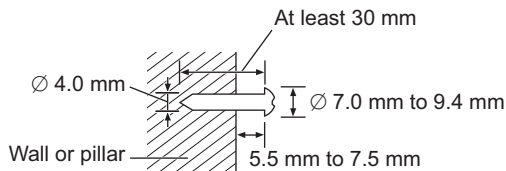

- 2 Fit the speaker securely onto the screw(s) with the hole(s).


e.g., BTX77 Front speaker	
DO NOT	DO
• In this position, the speaker will likely fall if moved to the left or right.	• Move the speaker so that the screw is in this position.

e.g., Front speakers

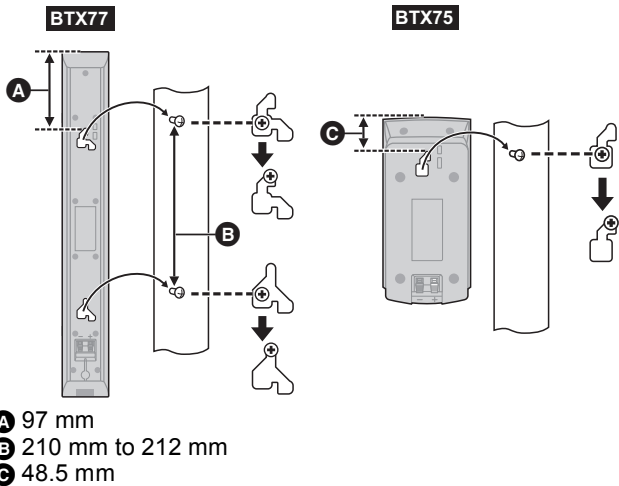

To avoid speaker dropping

e.g., BTX77 Front speaker

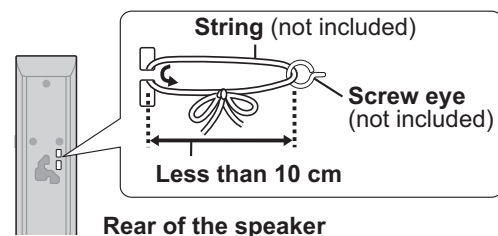


Rear of the speaker

- Consult a qualified building contractor to avoid damage to the wall or speakers.
- Use a string of less than Ø 2.0 mm, which is capable of supporting over 10 kg.

Preventing the speakers from falling

- You will need to obtain the appropriate screw eyes to match the walls or pillars to which they are going to be fastened.
- Consult a qualified housing contractor concerning the appropriate procedure when attaching to a concrete wall or a surface that may not have strong enough support. Improper attachment may result in damage to the wall or speakers.
- Use a string of less than Ø 2.0 mm, which is capable of supporting over 10 kg.

e.g., BTX77

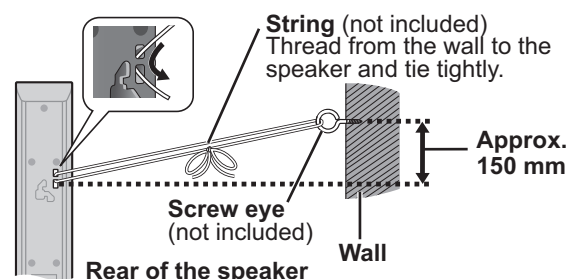

Media (Disc, card and USB device) information

Packaged discs

This chart shows the different type of retail/commercial discs you can use, and also includes the industry-standard logos that should appear on the discs and/or packaging.

Type of media/Logo	Features	Indicated as
BD-Video 	High Definition (HD) movie and music discs • Discs supporting BD-Live (BD-ROM Profile 2) that allows interactive functions to be used when this unit is connected to the Internet in addition to the BONUSVIEW function.  • Discs supporting BONUSVIEW (BD-ROM Profile 1 version 1.1/Final Standard Profile) that allows Picture-in-Picture functions to be used. BONUSVIEW™	BD-V
DVD-Video  	High quality movie and music discs	DVD-V
CD 	Compact Discs (CD's) that contain audio and music • Operation and sound quality of CDs that do not conform to CD-DA specifications (copy control CDs, etc.) cannot be guaranteed.	CD

Recorded discs

This chart shows the different type of discs recorded with other devices that you can use.

Finalized This mark means you must finalize the disc with the DVD recorder, etc. before playback. For details about finalizing, refer to the operating instructions for your equipment.

Type of media/Logo	Formats	Indicated as
BD-RE 	• Version 3 of the BD-RE Recording Format • JPEG format	BD-V JPEG
BD-R 	• Version 2 of the BD-R Recording Format	BD-V
DVD-RAM 	• Version 1.1 of the DVD Video Recording Format • JPEG format • AVCHD format	DVD-VR JPEG AVCHD
DVD-R/RW Finalized  	• DVD-Video Format • Version 1.1 of the DVD Video Recording Format • MP3 format (DVD-RW is not supported) • JPEG format (DVD-RW is not supported) • AVCHD format • DivX format (DVD-RW is not supported)	DVD-V DVD-VR MP3 JPEG AVCHD DivX
DVD-R DL Finalized 	• DVD-Video Format • Version 1.2 of the DVD Video Recording Format • MP3 format • JPEG format • AVCHD format • DivX format	DVD-V DVD-VR MP3 JPEG AVCHD DivX
+R/+RW/+R DL Finalized	• +VR (+R/+RW Video Recording) Format • AVCHD format	DVD-V AVCHD
CD-R/RW Finalized	• CD-DA format • MP3 format • JPEG format • DivX format	CD MP3 JPEG DivX

- It may not be possible to play the above discs in some cases due to the type of discs, the condition of the recording, the recording method and how the files were created.
- When a disc recorded in the AVCHD format is being played, the video may be paused for a few seconds at portions spliced, due to deletion or editing.

■ **About playback compatibility for BD-R and BD-RE with high definition recordings of high definition broadcasts**
Discs recorded in DR mode using Panasonic Blu-ray Disc recorders may not playback the audio etc., correctly.

SD cards

This chart shows the different type of cards recorded with other devices that you can use.

Type of media	Formats	Indicated as
SD Memory Card* (from 8 MB to 2 GB) SDHC Memory Card (from 4 GB to 32 GB)	• JPEG format • AVCHD format • MPEG2 format	JPEG AVCHD MPEG2

* Including miniSD Card and microSD Card
In these operating instructions, the cards shown in the table (⇒ above) are comprehensively called SD cards.

- A miniSD Card and a microSD Card must be used with the attached adaptor that comes with the card.
- When using from 4 GB to 32 GB SD cards, only SD cards that display the SDHC logo can be used.
- This unit is compatible with SD Memory Cards that meet SD Card Specifications FAT12 and FAT16 formats, as well as SDHC Memory Cards in FAT32 format.



- Useable memory is slightly less than the card capacity.
- If the SD card is formatted on a PC, you may not be able to use it on this unit.
- We recommend using a Panasonic SD card. Please confirm the latest information on the following website.
<http://panasonic.jp/support/global/cs/>
(This site is in English only.)
- Keep the Memory Card out of reach of children to prevent swallowing.
- When a card recorded in the AVCHD format is being played, the video may be paused for a few seconds at portions spliced, due to deletion or edition.
- Switch the write-protect switch to the "LOCK" position to protect the content from accidental erasure.

USB device

This unit can playback pictures by connecting the USB memory recorded with a PC or similar in following formats, and Panasonic digital cameras connected via USB cable.

Type of media	Formats	Indicated as
USB device	• MP3 format • JPEG format • DivX format	MP3 JPEG DivX

Compatible USB devices

- USB devices which are defined as USB mass storage class.
 - USB devices that support USB 1.0/1.1 and USB 2.0 Full Speed/High Speed.
- USB devices of up to 128 GB can be used.
- USB devices that support bulk only transfer. CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras which require additional programme installation when connected to a PC are not supported.

- MTP (Media Transport Protocol) device is not supported.
- A multi-port USB card reader is not supported.

File system

- FAT12, FAT16 and FAT32 file systems are supported.
- UDF/NTFS/exFAT file system is not supported.
- Depending on the sector size, some files may not work.
- Only the first partition on USB devices with multi-partition is supported.

Despite meeting the conditions mentioned above, there may be USB device that cannot be used with this unit.

This unit does not support USB device charging.

Regarding 24p output **BD-V**

Many BD-Video movie contents are recorded in 24 frames/second in accordance with the film materials. However, they will normally be output in 60 frames/second in accordance with the display format.

These can be output in 24p as the original. Therefore, high-quality video can be enjoyed with improved clarity, enhanced perspective, etc.

NECESSARY CONNECTIONS

- Connect to a TV supporting 1080/24p input via an HDMI cable.

NECESSARY SETTINGS

- "24p Output": "On" (⇒ 37)

Discs that cannot be played

- BD-RE with the cartridge
- 2.6 GB and 5.2 GB DVD-RAM
- 3.95 GB and 4.7 GB DVD-R for Authoring
- DVD-RAM that cannot be removed from their cartridges
- Version 1.0 of DVD-RW
- DVD-ROM, CD-ROM, CDV, SACD, Photo CD, MV-Disc and PD
- DVD-Audio
- Video CD and SVCD
- WMA discs
- HD DVD
- Other discs that are not specifically supported

About MP3/JPEG/DivX files

File format	MP3	JPEG
Playable media	CD-R* ¹ , CD-RW* ¹ , DVD-R* ¹ , DVD-R DL* ¹ , USB device	CD-R* ¹ , CD-RW* ¹ , DVD-RAM* ² , DVD-R* ¹ , DVD-R DL* ¹ , BD-RE* ³ , SD card, USB device
Extension	Files must have the extension ".mp3" or ".MP3".	Files must have the extension ".jpg" or ".JPG".
Picture resolution	—	Between 34×34 and 8192×8192 pixels (sub sampling is 4:2:2 or 4:2:0)
Compression rate	32 kbps to 320 kbps	—
Sampling rate	44.1 kHz/48 kHz	—
Reference	ID3 tags: version 1, 2.2, 2.3, 2.4 ID3 is a tag embedded in MP3 track to provide information about the track. This unit supports the versions listed above but only titles and the names of artists can be displayed. ●If there is a large amount of still picture data etc. within a MP3 file, play may not be possible.	JPEG conforming DCF* ⁴ is supported. Thawing Time: approx. 2 sec. (7M pixels) ●MOTION JPEG and Progressive JPEG is not supported.

File format	DivX	Subtitles text file of DivX
Playable media	CD-R* ¹ , CD-RW* ¹ , DVD-R* ¹ , DVD-R DL* ¹ , USB device	CD-R* ¹ , CD-RW* ¹ , DVD-R* ¹ , DVD-R DL* ¹ , USB device
File format	—	MicroDVD, SubRip, or TMPlayer
Extension	Files must have the extension ".DIVX", ".divx", ".AVI" or ".avi".	Files must have the extension ".SRT", ".srt", ".SUB", ".sub", ".TXT", or ".txt"
Picture resolution	Between 32×32 and 720×576 pixels	—
Reference	●Certified to the DivX Home Theater Profile. Video —Number of stream: Up to 1 —Codec: DIV3, DIV4, DIVX, DV50, DIV6 —FPS (Frame Per Second): Up to 30 fps Audio —Number of stream: Up to 8 —Format: MP3, MPEG, Dolby Digital —Multi channel: Dolby Digital is possible. MPEG multi is 2 ch conversion. ●GMC (Global Motion Compensation) is not supported.	●The DivX video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions. ●If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: ".srt", ".sub", ".txt". ●In the following situations, the subtitles cannot be displayed as recorded. Furthermore, depending on the methods used to create the file or the state of the recording, only parts of the subtitles may be displayed, or the subtitles may not be displayed at all. — When special text or characters are included in the subtitles text. — When the file size is larger than 256 KB. — When characters with specified styling are included in the subtitle data. —Codes that specify the character style within files are displayed as subtitle characters. —When data with a different format exists within the subtitle data. ●If the file name of the DivX video file is not displayed correctly on the menu screen (the file name is displayed as "_"), the subtitles text may not be displayed correctly. ●Depending on the disc, the subtitles text cannot be displayed when search and other such operations are being performed.

- English alphabet and Arabic numerals are displayed correctly. Other characters may not be displayed correctly.
- The display order on this unit may differ from how the order is displayed on a computer.
- Depending on how you create the media (writing software), files and folders may not play in the order you numbered them.
- Depending on how you create the structure of folders (writing software), files and folders may not play. (⇒ 43)
- This unit is not compatible with packet-write format.
- Depending on the recording conditions, the media may not play.
- Operation may take time to complete when there are many files and/or folders and some files may not display or be playable.

*1 ISO9660 level 1 or 2 (except for extended formats), Joliet

This unit is compatible with multi-session.

This unit is not compatible with packet writing.

*2 Discs must conform to UDF 2.0.

*3 Discs must conform to UDF 2.5.

*4 Design rule for Camera File system: unified standard established by Japan Electronics and Information Technology Industries Association (JEITA).

■ **Structure of folders that can play back on this unit**
 You can play files on this unit by structure of folders as shown below. However depending on the method of writing data (writing software), play may not be in the order you numbered the folders.

📁 : Folder which can be displayed with this unit

***: Numbers

XXX: Letters

*1 ***: from 001 to 999

*2 ***: from 100 to 999


XXXXX: up to 5 figures

*3 ****: from 0001 to 9999

XXXX: 4 figures


Structure of MP3 folders in DVD-R/DVD-R DL/CD-R/CD-RW/USB device

Prefix the file names with 3-digit numbers in the order you want to play them.

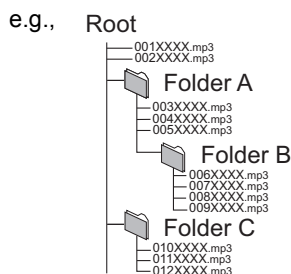


Structure of DivX folders in DVD-R/DVD-R DL/CD-R/CD-RW/USB device

Files inside a folder are displayed in the order they were updated or taken.

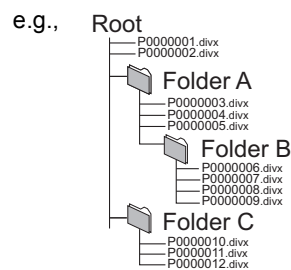

Structures of still picture (JPEG) folders

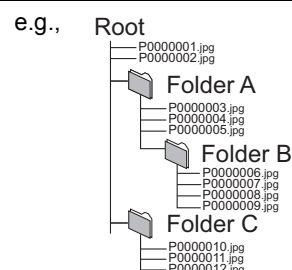


in DVD-R/DVD-R DL/CD-R/CD-RW

Files inside a folder are displayed in the order they were updated or taken.

in BD-RE/DVD-RAM


● Folder structure is not displayed.

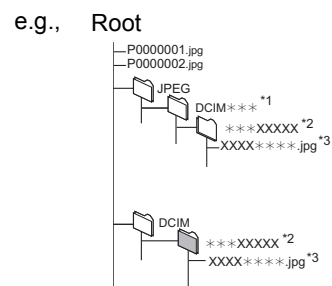

in SD card/USB device

Displays JPEG files in all folders.

● Folder structure is not displayed.

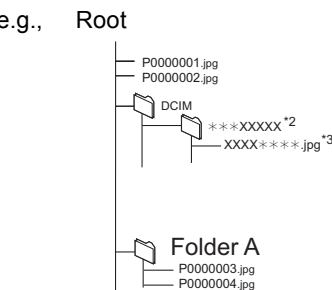

Language code list

Enter the code with the numbered buttons.

Abkhazian: 6566	Catalan: 6765	Gujarati: 7185	Lingala: 7678	Rhaeto-Romance: 8277	Tamil: 8465
Afar: 6565	Chinese: 9072	Hausa: 7265	Lithuanian: 7684	Romanian: 8279	Tatar: 8484
Afrikaans: 6570	Corsican: 6779	Hebrew: 7387	Macedonian: 7775	Russian: 8285	Telugu: 8469
Albanian: 8381	Croatian: 7282	Hindi: 7273	Malagasy: 7771	Samoan: 8377	Thai: 8472
Amharic: 6577	Czech: 6783	Hungarian: 7285	Malay: 7783	Sanskrit: 8365	Tibetan: 6679
Arabic: 6582	Danish: 6865	Icelandic: 7383	Malayalam: 7776	Scots Gaelic: 7168	Tigrinya: 8473
Armenian: 7289	Dutch: 7876	Indonesian: 7378	Maltese: 7784	Serbian: 8382	Tonga: 8479
Assamese: 6583	English: 6978	Interlingua: 7365	Maori: 7773	Serbo-Croatian: 8372	Turkish: 8482
Aymara: 6589	Esperanto: 6979	Irish: 7165	Marathi: 7782	Shona: 8378	Turkmen: 8475
Azerbaijani: 6590	Estonian: 6984	Italian: 7384	Moldavian: 7779	Sindhi: 8368	Twi: 8487
Bashkir: 6665	Faroese: 7079	Japanese: 7465	Mongolian: 7778	Singhalese: 8373	Ukrainian: 8575
Basque: 6985	Fiji: 7074	Javanese: 7487	Nauru: 7865	Slovak: 8375	Urdu: 8582
Bengali; Bangla: 6678	Finnish: 7073	Kannada: 7578	Nepali: 7869	Slovenian: 8376	Uzbek: 8590
Bhutanian: 6890	French: 7082	Kashmiri: 7583	Norwegian: 7879	Somali: 8379	Vietnamese: 8673
Bihari: 6672	Frisian: 7089	Kazakh: 7575	Oriya: 7982	Spanish: 6983	Volapük: 8679
Breton: 6682	Galician: 7176	Kirghiz: 7589	Pashto, Pushto: 8083	Sundanese: 8385	Welsh: 6789
Bulgarian: 6671	Georgian: 7565	Korean: 7579	Persian: 7065	Swahili: 8387	Wolof: 8779
Burmese: 7789	German: 6869	Kurdish: 7585	Polish: 8076	Swedish: 8386	Xhosa: 8872
Byelorussian: 6669	Greek: 6976	Laotian: 7679	Portuguese: 8084	Tagalog: 8476	Yiddish: 7473
Cambodian: 7577	Greenlandic: 7576	Latin: 7665	Punjabi: 8065	Tajik: 8471	Yoruba: 8979
	Guarani: 7178	Latvian, Lettish: 7686	Quechua: 8185		Zulu: 9085

Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated in the chart do not solve the problem, consult your dealer for instructions.

The following do not indicate a problem with this unit:

- Regular disc rotating sounds.
- Image disturbance during search.

To reset this unit

		Page
To restore the unit if it freezes due to one of the safety devices being activated	• Press and hold [⏻/I] on the main unit for 3 seconds. (The settings remain unchanged.)	—
To return all settings other than some settings to the factory preset	• Select “Yes” in “Default Settings” in the Setup menu. This returns all values in the Setup menu and the on-screen menu, except for “Remote Control”, “On-Screen Language”, “IP Address / DNS Settings” (BTX77), “Proxy Server Settings” (BTX77), “DVD-Video Ratings”, “BD-Video Ratings” and “Network Lock” (BTX77) to the default settings.	38
To return to the factory preset (No setting)	• Reset the unit as follows: 1 Press [⏻/I] on the unit to turn off the unit. 2 Press and hold [▶▶/▶▶I] and press [⏻/I] and [DISC ▲ OPEN/CLOSE] on the unit at the same time for more than 5 seconds until “PLEASE WAIT” is displayed on the unit. 3 The power is turned on and then turned off automatically.	—

Power

No power.	• Insert the AC mains lead securely into a household mains socket.	11
The unit switches to standby mode.	• When the time set for the sleep timer has passed, the power will be turned off. • One of the unit’s safety devices is activated. Press [⏻/I] on the main unit to turn the unit on.	18 —
Power of this unit is turned off when the input for the TV is changed.	• If connected with an HDAVI Control 4 compatible TV (VIERA) with the “Intelligent Auto Standby” setting activated on the TV, when switching the TV input, the unit will be automatically turned to standby if the TV audio is not output from the unit’s speakers. For details please read the operating instructions of the TV.	27

Operation

The remote control doesn’t work properly.	• The remote control and main unit are using different codes. Change the code on the remote control. Press and hold [OK] and the indicated number button at the same time for more than 5 seconds. • The batteries are depleted. Replace them with new ones. • It may be necessary to set the code of the remote control again after changing the batteries for remote control. • You are not pointing the remote control at the main unit’s remote control signal sensor during operation. • Coloured glass may obstruct the signal reception/transmission. • Don’t place the signal sensor in direct sunlight or in areas that may be subject to sunlight exposure.	 47 5 5, 47 5 — —
The unit is on but cannot be operated.	• Confirm the correct drive is selected. • Some operations may be prohibited by the disc. • The unit is hot (“U59” appears on the display). Wait for “U59” to disappear. • One of the unit’s safety devices may have been activated. - Reset the unit as follows: 1 Press [⏻/I] on the main unit to switch the unit to standby. If the unit doesn’t switch to standby, press and hold [⏻/I] on the main unit for about 3 seconds. The unit is forcibly switched to standby. Alternatively, disconnect the AC mains lead, wait one minute, then reconnect it. 2 Press [⏻/I] on the main unit to switch it on. If the unit still cannot be operated, consult the dealer. • Condensation has formed. Wait 1 to 2 hours for it to evaporate.	14 — 49 — —
Play fails to start even when [▶PLAY] is pressed. Play starts but then stops immediately.	• Insert the disc correctly with the label facing up. • The disc is dirty. • You tried to play a blank media or unplayable media on this unit. • DivX If playing DivX VOD content, refer to the homepage where you purchased it. • The producers of the disc can control how discs are played. So you may not always be able to control play as described in these operating instructions. Read the disc’s instructions carefully.	16 3 40, 41 20 —
Cannot eject disc.	• The unit may have a problem. While the unit is off, press and hold [▶▶/▶▶I] and [DISC ▲ OPEN/CLOSE] on the main unit at the same time for about 5 seconds. Remove the disc and consult the dealer.	—
Startup is slow.	• Startup takes time in the following situations. – Immediately after a power failure or the AC mains lead is connected. – When the unit is connected with an HDMI cable.	—
It takes time before play starts.		
Played back image is distorted or does not playback correctly. (AVCHD)	• High definition video (transfer rate of 18 Mbps or faster) cannot be played back correctly if it was recorded on a DVD compatible to double speed or slower.	—
Cannot set “On” in “24p Output”.	• Only when the unit is connected to the HDMI terminal of a TV supporting 24p you can select “On”.	37
The sliding door does not close properly.	• Turn the power on and off again.	—

Displays

Page

The display is dim.	●Change "FL Display" in the Setup menu.	36
The elapsed time displayed is actually less than the play time.	●The displayed play time is converted from the number of frames at 29.97 frames (equal to 0.999 seconds) to one second. There will be a slight difference between the time displayed and the actual elapsed time (e.g., actual one-hour elapsed time may display as approximately 59 minutes 56 seconds).	—

TV screen and video

The images from this unit do not appear on the television.	●Make sure that the television is connected to the VIDEO OUT terminal or the HDMI AV OUT terminal on this unit.	9
Picture is distorted.	●Make sure that the television's input setting (e.g., AV 1) is correct.	—
Jittering occurs.	●An incorrect resolution is selected in "HDMI Video Format", when the television is connected to HDMI AV OUT terminals. While stopped, press and hold [▶] and [■] on the main unit at the same time for more than 5 seconds to cancel this setting. Set the item again. However, Dolby Digital Plus, Dolby TrueHD, and DTS-HD audio are not output in bitstream. To output the bitstream, select "Default Settings" to restore the factory presets and make proper settings.	37
	●If "24p Output" is set to "On" when the unit is connected to a TV through any terminal other than HDMI, images may not display properly. In this case, set "24p Output" to "Off".	37
	●When "24p Output" is set to "On", HDMI authentication takes place where 24p images switch to other images, and a black screen is displayed.	37
	●When "24p Output" is set to "On", jittering may occur while playing DVD-Video. In this case, turn "24p Output" to "Off".	37
	●Picture may not be seen when more than 2 devices are connected with HDMI cables. Reduce the number of connected devices.	—
	●The unit and television are using different video systems. While stopped, keep pressing [■] and [DISC ▲ OPEN/CLOSE] on the main unit for 5 or more seconds. The system switches from PAL to NTSC or vice versa.	—
	●The system used on the disc doesn't match your television.	—
	—PAL discs cannot be correctly viewed on an NTSC television.	—
	—This unit can convert NTSC signals to PAL60 for viewing on a PAL television ("NTSC Contents Output" in the "Picture").	35
	●DivX Images may not be output due to how files were created.	—
	●If you are using an indoor TV antenna, change to an outdoor antenna.	—
	●The TV antenna wire is too close to the unit. Move it away from the unit.	—
Picture stops.	●DivX Picture may stop if the DivX files are greater than 2 GB.	—
The screen changes automatically.	●When the "Screen Saver Function" in the Setup menu is set to "On", the display may return to the screen saver mode automatically if there is no operation for 5 minutes or more.	36
Video is not output.	●An image is not output from the VIDEO OUT terminal when the "High Clarity Sound" is enabled. Set the "High Clarity Sound" in the on-screen menu to "Off" to use the VIDEO OUT terminal.	34
Video is not output in high definition.	●High definition video cannot be output through the VIDEO OUT terminal.	—
	●Confirm that the "HDMI Video Format" in the Setup menu is set properly.	37
The Setup menu cannot be accessed.	●Select "BD/DVD" as the source.	14
Status messages do not appear.	●Select "Automatic" in "On-Screen Messages" in the Setup menu.	36
The 4:3 aspect ratio picture expands left and right.	●Use the television to change the aspect. Refer to your television's operating instructions.	—
Screen size is wrong.	●When using an HDMI cable, set "TV Aspect" to "16:9".	37
When playing DVD-Video using progressive output, one part of the picture momentarily appears to be doubled up.	●Connect this unit to the TV with any cable except the HDMI cable.	9
There is no apparent change in picture quality when adjusted with the "Picture" menu in the on-screen menu.	●The effect is less perceivable with some types of video.	—
The masked-off area is masked in grey.	●If the "Screen Saver Function" in the Setup menu is set to "Off", the masked-off area is displayed in black.	36
Still pictures (JPEG) do not playback normally.	●The images that were edited on the PC, such as Progressive JPEG, etc., may not playback.	42
After choosing "Home Cinema" in "Speaker selection" with the TV's remote control, the TV's input selection also changes.	●Disconnect the HDMI cable from the TV and reconnect it to a different HDMI terminal.	—

Troubleshooting guide

Sound

No sound. Low volume. Distorted sound. Cannot hear the desired audio type.	● Turn the volume up.	17
	● Turn the muting off.	17
	● Check connections to speakers and other equipment.	8 – 10
	● Select the corresponding source.	14
	● Press [AUDIO] to select the audio.	17
	● To output audio from a device connected with an HDMI cable, set “HDMI Audio Output” to “On” in the Setup menu.	37
	● When “BD-Video Secondary Audio” is set to “On”, Dolby Digital Plus, Dolby TrueHD, and DTS-HD are converted to 48 kHz Dolby Digital or DTS Digital Surround and output. LPCM 7.1 channel audio is converted to 5.1 channel audio. In this case, set the “BD-Video Secondary Audio” to “Off”.	36
	● Audio may not be heard when more than 2 devices are connected with HDMI cables. Reduce the number of connected devices.	—
	● Re-master will not work when a bitstream signal is output from the HDMI AV OUT terminal.	36
	● Depending on the connected equipment, the sound may be distorted if this unit is connected with an HDMI cable.	—
	● DivX Audio may not be output depending on how files were created.	—
Humming is heard during play.	● An AC mains lead or fluorescent light is near this unit. Keep other appliances and cables away from this unit.	—
No surround sound.	● Press [SURROUND] to select a surround effect.	15
Cannot switch audio.	● There are discs for which audio cannot be changed because of how the disc was created.	—
	● When audio is output from the HDMI AV OUT terminal, you cannot switch the audio if “Dolby D/Dolby D +/Dolby TrueHD” or “DTS/DTS-HD” is set to “Bitstream”. Set “Dolby D/Dolby D +/Dolby TrueHD” or “DTS/DTS-HD” to “PCM”.	36
No sound from the TV	● Press [EXT-IN] to select the corresponding source.	14

Card

The capacity of the SD card decreased.	● When a BD-Video that supports the BD-Live (BTX77) is used, and an SD card is in the slot, data may be written to the SD card. Erase the data by using "BD-Video Data Erase", format the card or use a new card.	19
Music on an SD card cannot be played.	● Data that can be played from an SD card are AVCHD, MPEG2 and JPEG data.	41
The contents of the card cannot be read.	● The card is not compatible or the contents on the card may be damaged.	41
	● Turn off and then turn on the unit again.	—

USB

The contents of the USB device cannot be read.	● Remove the USB device from the USB port and then insert again. If this does not solve the problem, turn off and turn on the unit again.	—
	● Check that the USB device is inserted correctly.	16
	● The format of the USB device or of its contents is not compatible with the unit. (The contents on the USB device may be damaged.)	41
	● The USB device contains a folder structure and/or file extensions that are not compatible with this unit.	42
	● Turn off and then turn on the unit again.	—
	● USB memories connected using a USB extension cable or a USB hub may not be recognized by this unit.	—
	● Some USB devices cannot be used with this unit.	41
	● If the USB device is inserted during playback the USB device may not be recognized by this unit.	—
USB device cannot be operated.	● Turn the power of this unit off once, and turn it back on.	—

iPod operation

Cannot charge or operate.	● Check that the iPod is connected firmly.	28
	● The battery of the iPod is depleted. Charge the iPod, and then operate again.	28
	● Check that there is nothing wrong with the iPod.	—
Cannot display iPod videos/photos on the TV.	● Make sure that TV is connected to the VIDEO OUT terminal on this unit.	9
	● Operate the iPod menu to make the appropriate video/photo output settings for your TV. (Refer to operating instructions for your iPod.)	—
The TV input channel unintentionally changes to HDMI input.	● When the main unit is connected with an "HDAVI Control" compatible TV and VIDEO IN is selected for iPod video or photo playback, the TV input channel will automatically change to the HDMI input channel when [START] is pressed. – Re-select the TV's VIDEO IN input channel.	—

Radio

Distorted sound or noise is heard. "ST" flickers or does not light.	● Adjust the position of the antenna.	—
	● Use an outdoor antenna.	10
A beat sound is heard.	● Turn the TV off or move it away from the unit.	—

I can't connect to the network.	●Has the LAN cable come unplugged? Check that the LAN cable is properly connected.	11
	●Have you plugged in a modular cable for use with a telephone into the LAN terminal on this unit? Connect with a straight LAN cable.	11
	●Is the power for the modem or broadband router turned on? Turn the power on for each device.	—
	●Is there a mistake in the network settings? Follow any instructions you may have received from your ISP (Internet Service Provider) and make changes to the settings.	31
	●Are the broadband router settings correct? Read the operating instructions for the broadband router.	—
While using my PC, I cannot connect to the network.	●Is the broadband router and/or modem correctly connected? Check the operating instructions for each device and connect accordingly.	—
	●Check the "Network Settings" and "BD-Live Internet Access" settings.	31, 35
VIERA CAST does not operate or connect.	●Does your Internet Service Provider (ISP) or service contract prevent multiple terminals connecting at the same time? Check the content of your contract.	—
	●Is the network connection correct?	11
	●Image of the video contents may be incomplete or may not display depending on how busy the environment or the connected line is.	—


Other difficulties with playback

The disc side sliding door will not open.	●Make sure that the iPod docking switch lever has clicked into its original position.	28
Audio and video momentarily pause.	●This occurs between playlist chapters or scenes (AVCHD).	—
	●When playing a title recorded on both layers, the unit automatically switches between layers and plays the title in the same way as a normal program. However, video and audio may momentarily cut out when the unit is switching layers.	—
BD-Video or DVD-Video is not played.	●Ensure the disc is for the correct BD-Video region code or DVD-Video region number, and is not defective.	Cover
	●You have set a ratings level to limit BD-Video or DVD-Video play. Change this setting.	35
	●Some BD-Video can only be output with HDMI.	—
Picture-in-picture is not played with BD-Video.	●Confirm whether the disc supports picture-in-picture.	—
The BD-Live is not played with BD-Video. BTX77	●Confirm whether the disc supports the BD-Live.	—
	●The inserted SD card does not have sufficient available capacity.	—
	●The SD card is write-protected.	41
	●Sub contents copied to an SD card are provided by the disc producer as a part of the BD-Video content. Even if you record images and audio onto an SD card, it cannot be played as a BD-Live.	19
Alternative soundtrack and subtitles cannot be selected.	●The languages are not recorded on the disc.	—
	●You may not be able to use the on-screen menu to change the soundtrack and subtitles on some discs. Use the disc's menus to make changes.	16
No subtitles.	●Subtitles are not recorded on the disc.	—
	●Turn the subtitles on. Set "Subtitle" on the on-screen menu to "On".	33
Angle cannot be changed.	●Angles can only be changed during scenes where different angles are recorded.	—
The resume play function does not work.	●Memorized positions are cancelled when —pressing [■STOP] several times. —opening the sliding door.	—
	●The resume play function may not work depending on the disc.	—
	● BD-V : On BD-Video discs including BD-J, the resume play function does not work.	51

When other Panasonic products respond to this remote control

Change the remote control code on the main unit and the remote control (the two must match) if you place other Panasonic products close together.

- 1 Press **[BD/SD]** to select "BD/DVD".
- 2 While stopped, press **[SETUP]**.
- 3 Press **[▲, ▼]** to select "General" and press **[OK]**.
- 4 Press **[▲, ▼]** to select "Remote Control" and press **[OK]**.
- 5 Press **[▲, ▼]** to select the code (1 or 2) and press **[OK]**.
- 6 To change the code on the remote control
While pressing **[OK]**, press and hold the numbered button (**[1]** or **[2]**) for more than 5 seconds.
- 7 Press **[OK]**.

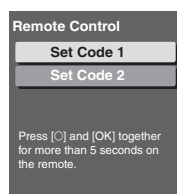

When the following indicator appears on the unit's display and you are unable to operate the unit

e.g., Display



The unit's remote control code
Press and hold **[OK]** and the indicated number button at the same time for more than 5 seconds.

Messages

The following messages or service numbers appear on the television or unit's display when something unusual is detected during startup and use.

On the television		Page
Authorisation Error. This unit is not authorised to play this title.	● DivX You are trying to play the DivX VOD content that was purchased with a different registration code. You cannot play the content on this unit.	20
Cannot play.	● You inserted an incompatible disc.	40 – 43
Cannot play on this unit.	● You tried to play a non-compatible image.	40 – 43
No disc is inserted.	● The disc may be upside down.	—
Rental Expired.	● DivX The DivX VOD content has zero remaining plays. You cannot play it.	20
⊗ This operation is not available.	● Some operations are unsupported by the unit. For example; – BD-V During play back, reverse slow-motion or reverse frame-by-frame is not possible.	—
⊗ This operation is prohibited by this disc.	● Depending on the disc, you may not be able to perform search or skip when film previews and warning screens are being played back.	—
Cannot connect. Please check the connection of the LAN cable. BTX77	● When a hub is used but its Link lamp does not light up, check the cable connection, LAN terminal connection, cable itself (a cross cable may be used by mistake), etc.	11
IP address is not set. BTX77	● The "IP Address" in "IP Address / DNS Settings" is "---. ---. ---. ---". Set the "IP Address", "Subnet Mask", and "Gateway Address". (Select the automatic address acquisition if necessary.)	31
Cannot obtain IP address. Please check the connection or setting of the router. BTX77	● If you use a hub, then check the connection between the hub and the router. – Use the UPLINK port of the hub to connect to a router. – Check whether or not the hub's Link lamp lights up. If it does not light up, then check the cable connection, LAN terminal connection, cable itself (a cross cable may be used by mistake), etc. ● If the above conditions are OK, then the router may not operate in DHCP mode. Check the router settings and operation. You may reset the router to restore it to normal.	11
		11
This IP address is already in use. Please check the setting. BTX77	● This unit's IP address is used by another device. Check the IP addresses of this unit, personal computers, and routers, etc. If necessary, reconfigure them to avoid IP addresses from being duplicated.	—
Connection test could not be conducted. BTX77	● Turn the unit off. Remove the AC mains lead and reconnect it and try again. If the same symptom persists, then consult your dealer.	—
IP address is not set correctly. BTX77		
Connection test was unsuccessful. No reply from Gateway. Please check the connection or setting of the router. BTX77	● If you use a hub, then check the connection between the hub and the router. – Use the UPLINK port of the hub to connect to a router. – If the hub's Link lamp does not light up, then check the cable connection, LAN terminal connection, cable itself (a cross cable may be used by mistake), etc. ● Check the "IP Address", "Subnet Mask", and "Gateway Address" in the "IP Address / DNS Settings". ● If the MAC address information is required, then press [SETUP] to display the "Network Settings" menu.	11
		31
		31
Network connection was rejected. Please confirm Setup "BD-Live Internet Access". BTX77	● When you set "BD-Live Internet Access" to "Limit" and play BD-Live contents which do not have a content owner certificate, the Internet access of the content is not allowed. If you allow the content to connect to Internet, set "BD-Live Internet Access" to "Permit".	35
Could not check for latest firmware version. Please try again later. BTX77	● The firmware download server is currently unavailable. Please try again later.	—
High Clarity Sound is effective. Analog video output is turned off when playback starts.	● "High Clarity Sound" in setup menu is set to "Enable", and "High Clarity Sound" in on-screen menu is set to "On".	34, 36
No Video	● Depending on the connected iPod, video menu may not be available on the TV. Select the iPod menu (iPod LCD) mode and operate video playback from your iPod menu.	29

F99	The unit fails to operate properly. Press [⏻/I] on the main unit to switch the unit to standby for 3 seconds. Now press [⏻/I] on the main unit again to turn the unit on.	—
HDMI ONLY	Some BD-Video discs can only be output with HDMI.	—
NET BTX77	Displays while VIERA CAST is starting up.	30
No PLAY	There is a viewing restriction on a BD-Video or DVD-Video.	35
No READ	The media is dirty or badly scratched. The unit cannot play.	3
PLEASE WAIT	- The unit is carrying out internal process. This is not a malfunction. You cannot operate the unit while "PLEASE WAIT" is displayed. - When connected to TV (VIERA) with HDAVI Control 4, and power supply is turned off by the "Intelligent Auto Standby" function on the TV side.	— 27
REMOVE	The USB device is drawing too much power. Remove the USB device.	16
SET □ (“□” stands for a number.)	The remote control and main unit are using different codes. Change the code on the remote control.  Press and hold [OK] and the indicated number button at the same time for more than 5 seconds.	47
UNFORMAT	You inserted an unformatted DVD-RAM, DVD-RW, +RW, an unused +R, +R DL or DVD-RW (DVD-Video format).	—
UNSUPPORT	- You have inserted a media the unit cannot play. - You tried to operate with a non-compatible USB device.	40 – 43 41
U59	The unit is hot. The unit switches to standby for safety reasons. Wait for about 30 minutes until the message disappears. Select a position with good ventilation when installing the unit. Do not block the cooling fan on the rear of the unit.	—
U72 U73	- The HDMI connection acts unusually. - The connected equipment is not HDMI compatible. - Please use HDMI cables that have the HDMI logo (as shown on the cover). - The HDMI cable is damaged.	—
H□□ or F□□ (“□” stands for a number.)	- Check and correct the speaker connections. - There is something unusual. (The service number displayed after H and F depends on the unit's condition.) - Check the unit using the troubleshooting guide. If the service number does not disappear, do the following. 1 Disconnect the plug from the household mains socket wait a few seconds, then reconnect it. 2 Press [⏻/I] to turn the power on. (The unit may be fixed.) If the service number does not disappear despite doing the above, request service from the dealer. Inform the dealer of the service number when requesting service.	8 — 44 – 47
DOCK UNLOCKED	- The iPod docking switch lever is not locked in position. - Make sure that the iPod docking switch lever is properly pushed back into place.	28
IPOD OVER CURRENT ERROR	The iPod is drawing too much power. Remove the iPod, and turn the unit off and on again.	—
START BTX77	The system is being restarted during the firmware update. Please do not turn off power.	30
UPD□□ BTX77	The firmware is being updated.	30
FINISH BTX77	The firmware update is complete.	30
NOT CONDITIONAL	The requested operation cannot be conducted.	—
NOT CONNECTED	- The iPod is not connected or it is not correctly connected. Reconnect the iPod. - The iPod cannot be operated. Check that there is nothing wrong with the iPod.	28 —
ILLEGAL OPEN	The sliding door is not in the correct position. Turn the main unit off and on again.	—
=====	The main unit could not save the modified settings. Some settings may need to be reset.	—

Frequently asked questions

Setup

Page

Can I extend the speaker cables?	It is not recommended that you extend the speaker cables. Extending the speaker cables may damage the speakers, and sound quality will be negatively affected.	—
Can I connect the unit directly to a computer?	This unit cannot be connected directly to a computer.	—

Disc

Can I play BD-Video and DVD-Video bought in another country?	- You cannot play: - BD-Video discs that do not include region “B”. - DVD-Video discs that do not include region “2” or “ALL”. Refer to the cover of these operating instructions for more information about your region code and number. - Refer to the disc’s jacket for more information.	Cover
Can BD-Video/DVD-Video that does not have a region code/number be played?	The region management information for BD-Video/DVD-Video indicates that the disc conforms to industry standards. You cannot play discs that do not conform to industry standards or do not have a region code or number.	—
Please tell me about disc compatibility with this unit.	- Refer to “Media (Disc, card and USB device) information” and “About MP3/JPEG/DivX files”. - You cannot write to a disc with this unit.	40 – 42

SD card

What kinds of operations are available on the SD card slot on this unit?	- The following operations are available. - Play back JPEG data recorded with a digital camera etc. - Play back AVCHD motion pictures recorded with Panasonic High Definition Video Camera. - Play back MPEG2 motion pictures recorded with a Panasonic Standard Definition Video Camera. - If a BD-Video disc supporting BD-Live or BONUSVIEW is used, it is possible to copy secondary video, etc. from the Internet or disc to the card and play it back together with the images on the disc, etc.	— — — 19
What kinds of cards can be used?	- SD Memory Cards (from 8 MB to 2 GB), SDHC Memory Cards (from 4 GB to 32 GB), miniSD Cards*, and microSD Cards* can be used. * A miniSD Card and a microSD Card must be used in the adaptor included with the memory card. Please confirm the latest information on the following website. http://panasonic.jp/support/global/cs/ (This site is in English only.)	41

Glossary

AVCHD

AVCHD is a new format (standard) for high definition video cameras that can be used to record and play high-resolution HD images.

BD-J

Some BD-Video discs contain Java applications, and these applications are called BD-J. You can enjoy various interactive features in addition to playing normal video.

Deep Colour

This unit incorporates HDMI™ (V.1.3a with Deep Colour) technology that can reproduce greater colour gradation (4096 steps) when connected to a compatible TV.

You can enjoy exceptionally rich, natural-looking colours, with smooth, detailed gradation and minimal colour banding. [A lower colour gradation (256 steps), without Deep Colour, will be reproduced if connected to a TV which does not support Deep Colour. The unit will automatically set appropriate output to suit the connected TV.]

DivX

DivX is a popular media technology created by DivX, Inc. DivX media files contain highly compressed video with high visual quality that maintains a relatively small file size.

Dolby Digital

This is a method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2-channel) audio, these signals can also be multi-channel audio.

Dolby Digital Plus

Multi-channel audio and higher audio quality is made possible using Dolby Digital Plus.

Dolby TrueHD

Dolby TrueHD is a very high quality audio format that reproduces the studio master audio.

Down-mixing

This is the process of remixing the multi-channel audio found on some discs into fewer channels.

DTS (Digital Theater Systems)

This surround system is used in many movie theatres. There is good separation between the channels, so realistic sound effects are possible.

DTS-HD

DTS-HD is a high-quality, sophisticated audio format used in movie theatres. Previous DTS Digital Surround-compatible equipment can play DTS-HD as DTS Digital Surround audio.

DTS-HD High Resolution Audio

This is a signal format achieved by improving the previous DTS, DTS-ES and DTS 96/24 formats. It is compatible with sampling frequency 96 kHz/48 kHz.

DTS-HD Master Audio | Essential

This is a lossless audio format and compatible with 96 kHz/7.1 ch and 192 kHz/2 ch or less. In addition, faithful reproduction of the master audio is enabled using lossless audio encoding technology.

Dynamic range

Dynamic range is the difference between the lowest level of sound that can be heard above the noise of the equipment and the highest level of sound before distortion occurs. Dynamic range compression means reducing the gap between the loudest and softest sounds. This means you can listen at low volumes but still hear dialog clearly.

HDMI (High-Definition Multimedia Interface)

HDMI is a digital interface for consumer electronic products. Unlike conventional connections, it transmits uncompressed digital video and audio signals on a single cable.

Local storage

This storage area is used as a destination for sub contents for playing BD-Live on BD-Video.

LPCM (Linear PCM)

These are a kind of PCM format.

These are uncompressed digital signals, similar to those found on CDs.

PCM (Pulse Code Modulation)

This is one format for converting analogue audio into digital audio, enabling you to enjoy digital audio with no hassle.

P4HD (Pixel Precision Progressive Processing for HD)

This is a processor which makes use of an exclusive Panasonic algorithm. Various processing is supported, including a high-level conversion of the TV scanning format from interlace to progressive and a high-level conversion of standard resolution (480i or 576i) video signal to a 1080 High Definition video signal. Consequently, this unit is able to provide video of optimal resolution to the connected TV.

x.v.Colour™

x.v.Colour™ is a name for devices that are compatible with the xvYCC format, an international standard for expanded colour in motion pictures, and that follow the rules for signal transmission. You can enjoy vivid colours of wider colour ranges for a more realistic picture when connected to a TV that supports the x.v.Colour™ with HDMI cable.

24p

This is a progressive image recorded at a rate of 24 frames per second.

Specifications

SPEAKER SECTION

FRONT SPEAKERS

BTX77 SB-HFX77

Type	2 way, 3 speaker system, Bass reflex
Speaker unit(s)	
Woofer	3.5 cm×10 cm Cone type× 2
Tweeter	2.5 cm Semi-Dome type
Impedance	6 Ω
Output sound pressure	79 dB/W (1 m)
Frequency range	100 Hz to 30 kHz (−16 dB) 130 Hz to 25 kHz (−10 dB)
Dimensions (W×H×D)	140 mm×454.5 mm×140 mm
Mass	Approx. 1.03 kg

BTX75 SB-HFX75

Type	1 way, 1 speaker system, Bass reflex
Speaker unit(s)	
Full range	6.5 cm Cone type
Impedance	6 Ω
Output sound pressure	79 dB/W (1 m)
Frequency range	95 Hz to 25 kHz (−16 dB) 120 Hz to 22 kHz (−10 dB)
Dimensions (W×H×D)	92 mm×200 mm×99 mm
Mass	Approx. 0.71 kg

SUBWOOFER

BTX77 SB-HWX77

Type	1 way, 1 speaker system (Kelton type)
Speaker unit(s)	
1. Woofer	16 cm Cone type
2. Passive Radiator	25 cm
Impedance	6 Ω
Output sound pressure	78 dB/W (1 m)
Frequency range	35 Hz to 180 Hz (−16 dB) 40 Hz to 160 Hz (−10 dB)
Dimensions (W×H×D)	180.5 mm×322 mm×351 mm
Mass	Approx. 4.9 kg

BTX75 SB-HW330

Type	1 way, 1 speaker system (Kelton type)
Speaker unit(s)	
1. Woofer	16 cm Cone type
2. Passive Radiator	25 cm
Impedance	6 Ω
Output sound pressure	78 dB/W (1 m)
Frequency range	35 Hz to 180 Hz (−16 dB) 40 Hz to 160 Hz (−10 dB)
Dimensions (W×H×D)	180.5 mm×322 mm×351 mm
Mass	Approx. 4.6 kg

GENERAL

Power supply	AC 220 V to 240 V, 50 Hz
iPod Connector	DC OUT 5 V 500 mA MAX
Power consumption	85 W
<u>Power consumption in standby mode</u>	<u>approx. 0.3 W</u>
Dimensions (W×H×D)	500 mm×201 mm×116 mm
Mass	Approx. 3.3 kg
(Dimensions and Mass do not include the speakers.)	
Operating temperature range	0 °C to 40 °C
Operating humidity range	35 % to 80 % RH (no condensation)

AMPLIFIER SECTION

RMS TTL Power Output	375 W
Front Ch	125 W per channel (6 Ω), 1 kHz, 10 % THD
Subwoofer Ch	125 W per channel (6 Ω), 100 Hz, 10 % THD
DIN TTL Power Output	195 W
Front Ch	65 W per channel (6 Ω), 1 kHz, 1.0 % THD
Subwoofer Ch	65 W per channel (6 Ω), 100 Hz, 1.0 % THD

Audio Input	
AUX	× 1
Digital Audio Input	
Optical	× 2
Sampling frequency	32 kHz, 44.1 kHz, 48 kHz
Audio Format	PCM, Dolby Digital

FM TUNER SECTION

Frequency range	87.50 MHz to 108.00 MHz (50-kHz step)
Antenna terminals	75 Ω (unbalanced)

DISC SECTION

Playable disc:
BD-Video
BD-ROM: Version 2
BD-RE: Version 3 (Single Layer, Dual Layer), JPEG*6, BDAV, BDMV
BD-R: Version 2 (Single Layer, Dual Layer), BDAV, BDMV
DVD-RAM: DVD Video Recording format, AVCHD format*8, JPEG*4
DVD-R/DVD-R DL:
DVD-Video format*1, DVD-Video Recording format*1, AVCHD format*1.8, JPEG*4, MP3, DivX*7
DVD-RW: DVD-Video format*1, DVD-Video Recording format*1, AVCHD format*1.8
+R/+RW/+R DL:
Video*1, AVCHD format*1.8
DVD-Video:
DVD-Video format
CD-Audio: CD-DA
CD-R/CD-RW:
CD-DA, JPEG*5, MP3, DivX*7

Optical pick-up:
System with 2 lenses
Wave length: 783 nm(CDs)/661 nm(DVDs)/405 nm(BDs)

LASER Specification:
Class 1 LASER Product
Wave length: 783 nm(CDs)/661 nm(DVDs)/405 nm(BDs)
Laser power:
No hazardous radiation is emitted with the safety protection

NORSK (NORWAY)
Bølgelengde 783 nm (CDs)/661 nm (DVDs)/405 nm (BDs)
Laserstyrke
Ingen farlig stråling sendes ut (med sikkerhets-beskyttelse)

SD CARD SECTION

SD card slot:
Connector: 1 system

SD card:
SD Memory Card*2 formatted FAT12, FAT16, FAT32*3:
JPEG*4, AVCHD format*8, MPEG2

●Usable capacity will be less (SD Card).

USB device SECTION

USB slot: Connector (1 system)
USB Standard:USB 2.0 High Speed MP3, JPEG*4, DivX*7
Format: FAT12, FAT16, FAT32

- *1 Finalizing is necessary.
- *2 includes SDHC card
includes miniSD cards (need a miniSD Adaptor)
includes microSD cards (need a microSD Adaptor)
- *3 Does not support long file name
- *4 The total combined maximum number of recognizable picture contents and folders: 3000 picture contents and 300 folders.
- *5 The total combined maximum number of recognizable picture contents and folders: 999 picture contents and 99 folders.
- *6 The total combined maximum number of recognizable picture contents and folders: 9999 picture contents and 300 folders.
- *7 The total combined maximum number of recognizable files and folders: 200 files and 300 folders.
- *8 AVCHD format V1.0

VIDEO SECTION

Signal system PAL625/50, PAL525/60, NTSC
Video output
Output level 1.0 Vp-p (75 Ω)
Output connector Pin jack (1 system)

HDMI AV output
Output format:
480p (525p)/1080i (1125i)/720p (750p)/1080p (1125p)
Output Connector: Type A (19 pin)
HDMI™ (v.1.3a with Deep Colour, x.v.Colour™, High Bit rate Audio)
●This unit supports “HDAVI Control 4” function.

NETWORK SECTION BTX77

Ethernet 10BASE-T/100BASE-TX (1 system)



NOTE

Specifications are subject to change without notice.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.	
Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.	
Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Master Audio Essential and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.	
This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.	
HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.	
HDAVI Control™ is a trademark of Panasonic Corporation.	
"AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.	
SDHC Logo is a trademark of SD-3C, LLC.	
x.v.Colour™ is a trademark.	
VIERA CAST is a trademark of Panasonic Corporation.	
This product is licensed under the AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard and VC-1 Standard ("AVC/VC-1 Video") and/or (ii) decode AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See http://www.mpegla.com .	
DivX® is a registered trademark of DivX, Inc., and is used under license.	
"Blu-ray Disc" is a trademark.	
"BD-LIVE" logo is a trademark of Blu-ray Disc Association.	
"BONUSVIEW" is a trademark of Blu-ray Disc Association.	
YouTube and Picasa are trademarks of Google, Inc.	
"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPod is a trademark of Apple Inc., registered in the U.S. and other countries.	
This product incorporates the following software: (1) the software developed independently by or for Panasonic Corporation, (2) the software owned by third party and licensed to Panasonic Corporation, (3) the software licensed under the GNU General Public License, Version 2 (GPL v2), (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL v2.1) and/or, (5) open sourced software other than the software licensed under the GPL v2 and/or LGPL v2.1 For the software categorized as (3) and (4), please refer to the terms and conditions of GPL v2 and LGPL v2.1, as the case may be at http://www.gnu.org/licenses/old-licenses/gpl-2.0.html and http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html. In addition, the software categorized as (3) and (4) are copyrighted by several individuals. Please refer to the copyright notice of those individuals at http://www.am-linux.jp/dl/JPRCBW98 The GPL/LGPL software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. At least three (3) years from delivery of products, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL v2/LGPL v2.1. Contact Information cdrequest@am-linux.jp Source code is also freely available to you and any other member of the public via our website below. http://www.am-linux.jp/dl/JPRCBW98	

SUOMI

VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VAROITUS:

VÄHENNÄ TULIPALON, SÄHKÖISKUN TAI LAITTEISTON VAHINGOITTUMISEN VAARAA

- TÄTÄ LAITETTA EI SAA ALTISTAA SATEELLE, KOSTEUELLE, ROISKEILLE TAI TIPPUVILLE NESTEILLE. LAITTEEN PÄÄLLE EI SAA MYÖSKÄÄN ASETTAA MITÄÄN NESTEELLÄ TÄYTETTYÄ ESINETTÄ, KUTEN MALJAKKOA.
- KÄYTÄ VAIN SUOSITELTUJA LISÄVARUSTEITA.
- ÄLÄ IRROTA KANTTA (TAI TAUSTAA). SISÄLLÄ EI OLE KÄYTTÄJÄN HUOLLETTAVISSA OLEVIA OSIA. HUOLLON SAA SUORITTA VAIN AMMATTITAITOINEN HENKILÖKUNTA.

VAROITUS!


- ÄLÄ ASENNA TAI LAITA TÄTÄ LAITETTA KABINETTITYYPPISEEN KIRJAKAAPPIIN TAI MUUHUN SULJETTUUN TIILAAN, JOTTA TUULETUS ONNISTUISI. VARMISTA, ETTÄ VERHO TAI MIKÄÄN MUU MATERIAALI EI HUONONNA TUULETUSTA, JOTTA VÄLTETTÄISIIN YLIKUUMENEMISESTA JOHTUVA SÄHKÖISKU- TAI TULIPALOVAARA.
- ÄLÄ PEITÄ LAITTEEN TUULETUSAUUKKOJA SANOMALEHDELLÄ, PÖYTÄLINALLA, VERHOLLA TAI MUULLA VASTAVALLA ESINEELLÄ.
- ÄLÄ ASETA PALAVAA KYNTTILÄÄ TAI MUUTA AVOTULEN LÄHDETTÄ LAITTEEN PÄÄLLE.
- HÄVITÄ PARISTOT LUONTOA VAHINGOITTAMATTOMALLA TAVALLA.

TÄMÄ LAITE ON TARKOITETTU KÄYTETTÄVÄKSI LEUDOSSA ILMASTOSSA.

Pistorasia tulee asentaa laitteen lähelle helppopääsyiseen paikkaan.
Verkkojohdon pistokkeen on oltava aina helposti käytettävissä.
Tämä laite voidaan kytkeä kokonaan irti verkkovirrasta irrottamalla verkkojohdon pistoke pistorasiasta.



LUOKAN 1 LASERLAITE KLASS 1 LASER APPARAT

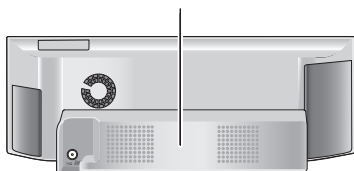

(Back of product)

NORSK

ADVARSEL!

DETTE PRODUKTET ANVENDER EN LASER. BETJENING AV KONTROLLER, JUSTERINGER ELLER ANDRE INNGREP ENN DE SOM ER BESKREVET I DENNE BRUKSANVISNING, KAN FØRE TIL FARLIG BESTRÅLING. DEKSLER MÅ IKKE ÅPNES, OG FORSØK ALDRI Å REPARERE APPARATET PÅ EGENHÅND. ALT SERVICE OG REPARASJONSARBEID MÅ UTFØRES AV KVALIFISERT PERSONELL.

ADVARSEL:

FØLG NEDENSTÅENDE INSTRUKSER FOR Å REDUSERE RISIKOEN FOR BRANN, ELEKTRISK STØT OG SKADE PÅ PRODUKTET:


- DETTE APPARATET MÅ IKKE UTSETTES FOR REGN, FUKTIGHET, DRYPP ELLER SPRUT, OG INGEN VÆSKEFYLTE GJENSTANDER, SOM F.EKS. VASER, MÅ PLASSERES PÅ APPARATET.
- BRUK KUN ANBEFALT TILBEHØR.
- IKKE FJERN DEKSELET (ELLER BAKSIDEN); APPARATET INNEHOLDER INGEN DELER SOM KAN SKIFTES ELLER REPARERES AV BRUKEREN. OVERLAT TIL KVALIFISERTE SERVICETEKNIKERE Å UTFØRE SERVICE.

ADVARSEL!

- APPARATET MÅ IKKE PLASSERES I EN BOKHYLLE, ET INNEBYGGET KABINETT ELLER ET ANNET LUKKET STED HVOR VENTILASJONSFORHOLDENE ER UTILSTREKKELIGE. SØRG FOR AT GARDINER ELLER LIGNENDE IKKE FORVERRER VENTILASJONSFORHOLDENE, SÅ RISIKO FOR ELEKTRISK SJOKK ELLER BRANN FORÅRSAKET AV OVERHETING UNNGÅS.
- APPARATETS VENTILASJONSÅPNINGER MÅ IKKE DEKKES TIL MED AVISER, BORDDUKER, GARDINER OG LIGNENDE.
- PLASSER IKKE ÅPEN ILD, SLIK SOM LEVENDE LYS, OPPÅ APPARATET.
- BRUKTE BATTERIER MÅ KASSERES UTEN FARE FOR MILJØET.

DETTE APPARATET ER BEREGNET TIL BRUK UNDER MODERATE KLIMAFORHOLD.

Strømuttaket må befinne seg i nærheten av utstyret og være lett tilgjengelig.
Støpslet på strømkabelen må være klart til bruk.
Når dette apparatet skal kobles helt fra strømmettet (AC), må støpslet på strømkabelen trekkes ut av stikkontakten.

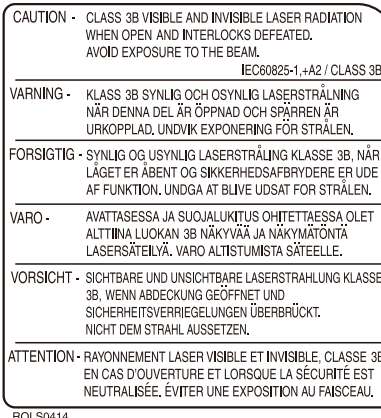

(Back of product)
(Laitteen takaosa)
(På baksiden av produktet)

Index

A		
AC mains lead connection	11	
Angle	33	
Audio		
Attribute	33	
Changing audio during play	17	
Channel	33	
Language	33, 35	
AVCHD	51	
B		
BD-J	51	
BD-Live	19	
BD-Video Ratings	35	
BONUSVIEW	19	
C		
Chapter	17	
Cleaning		
Disc	3	
Lens	3	
Main unit	3	
Connection		
Antenna	10	
AUX	9	
DVD recorder	10	
HDMI	9	
iPod	28	
OPTICAL IN	9, 10	
Set Top Box	10	
Speaker	8	
TV	9	
USB	16, 21	
Video cassette recorder	10	
D		
Deep Colour	51	
Default Settings	38	
Dialog Enhancer	34	
Direct Navigator	16	
Discs that cannot be played	41	
DivX	20, 42, 51	
DNS Server	31	
Dolby Digital	36, 51	
Dolby Digital Plus	36, 51	
Dolby TrueHD	36, 51	
DTS	36, 51	
DTS-HD	36, 51	
DVD-Video Ratings	35	
F		
Finalize	40	
Firmware	30	
Formatting SD cards	19	
Frame-by-frame	17	
H		
HDMI	9, 51	
High Clarity Sound	34, 36	
I		
iPod	28	
IP address	31	
J		
JPEG	21, 42	
L		
LAN	11	
Language		
Audio	33, 35	
Code list	43	
Menu	35	
On-screen	36	
Soundtrack	33, 35	
Subtitle	33, 35	
Local storage	51	
LPCM	51	
M		
Menu		
On-screen	33	
Pop-up	16	
Setup	35	
MPEG2	16	
MP3	23, 42	
Mute the sound	17	
O		
On-screen		
Language	36	
Menu	33	
Status messages	18	
P		
Picture-in-picture	19	
Playback		
AVCHD	16	
DivX	20	
JPEG	21	
MPEG2	16	
MP3	23	
Playback Information Window	34	
Playlists	13	
Pop-up menu	16	
Product Disposal	3	
Progressive	34	
Proxy Server	32	
P4HD	51	
R		
Radio	10, 24	
Re-master	34	
Remote control		
Using the remote control	5	
Remote control code	47	
Repeat play	34	
Resume play function	17	
S		
SD card	16	
Search	17	
Setup menu	35	
Skip	17	
Sleep timer	18	
Slideshow	22	
Slow-motion	17	
Soundtrack	33	
Status messages	18	
Still pictures	21	
Subtitle	33	
Surround sound effects	15	
U		
Unit and media care	3	
USB	16	
V		
VIERA CAST	30	
VIERA Link "HDAVI Control™"	26	
W		
Whisper-mode Surround	15	
X		
x.v.Colour™	51	
24p	34, 37, 51	

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



Cd

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

EU



Panasonic Corporation

Web Site: <http://panasonic.net>

Pursuant to at the directive 2004/108/EC, article 9(2)

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, Germany

© Panasonic Corporation 2010

En

VQT2Q72
F0210MH0